

Front Door Speaker

Removal


NOTE: Removal steps in this procedure may contain installation details.

All vehicles

1. Remove the front door trim panel.
Refer to: Front Door Trim Panel (501-05 Interior Trim and Ornamentation, Removal and Installation).


Front door mid range speaker

2. Separate the wiring harness guide, remove the screws and the front door mid range speaker
Torque: 22 lb.in (2.5 Nm)

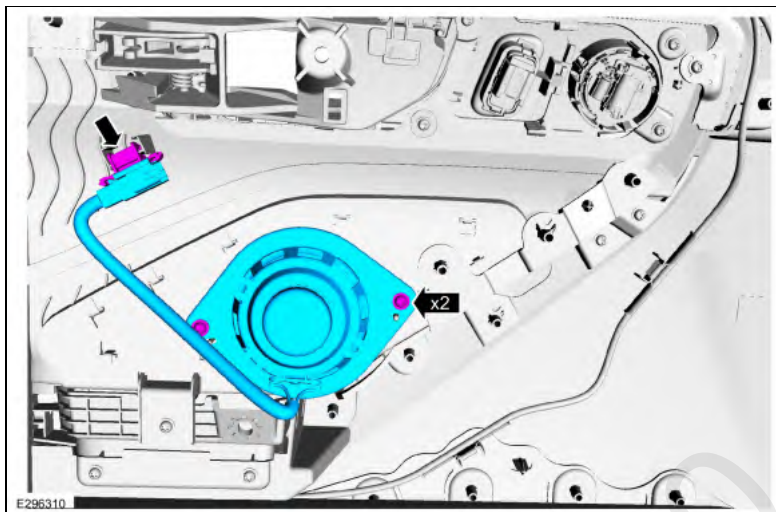

Front door woofer speaker

3. Disconnect the electrical connector, remove the screws and the front door speaker.
Torque: 22 lb.in (2.5 Nm)

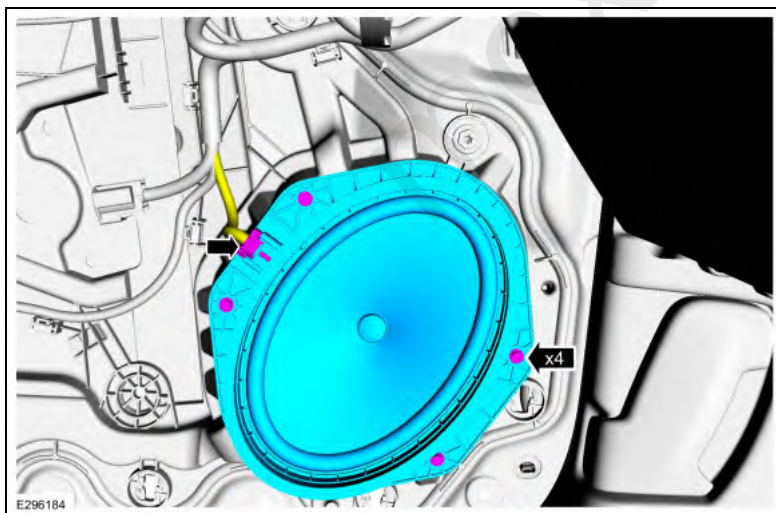

Installation

1. To install, reverse the removal procedure.

