

Light Sensor


Special Tool(s) / General Equipment

Interior Trim Remover


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Using a non-marring tool release and position the light sensor.
Use the General Equipment: Interior Trim Remover

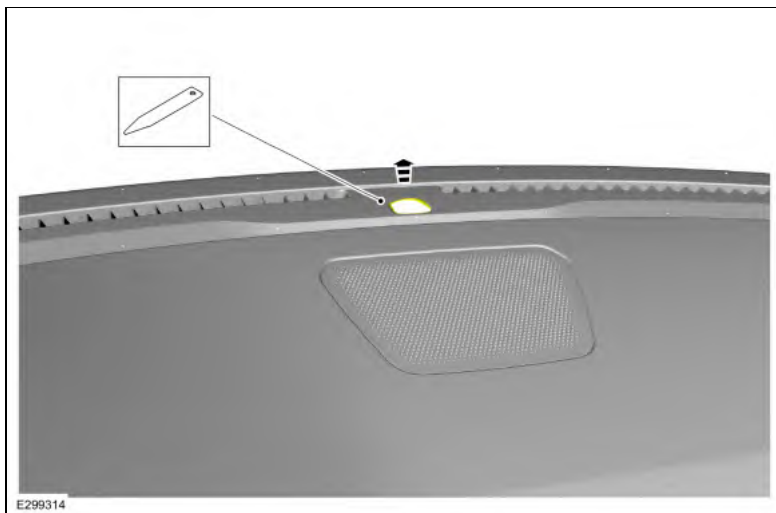

2. Disconnect the electrical connector and remove the light sensor.

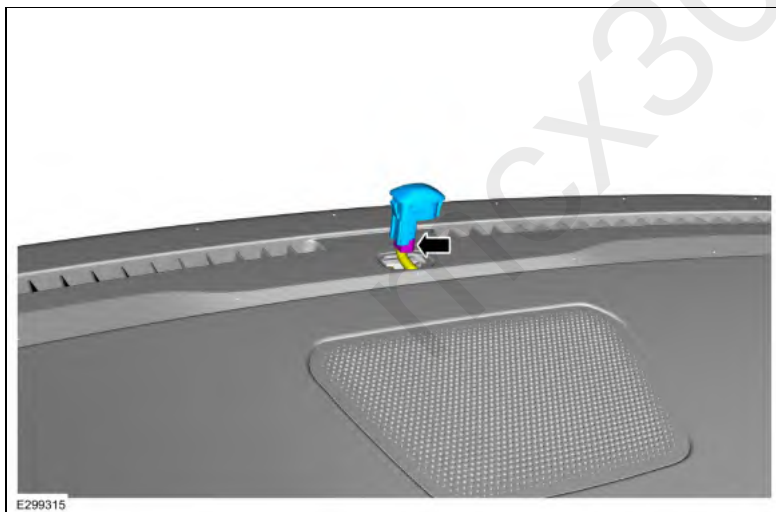

Installation

1. To install, reverse the removal procedure.

