


Passive Anti-Theft System (PATS) Transceiver

Special Tool(s) / General Equipment

Pick Hook

Removal

1. Remove the ignition lock cylinder housing.
Refer to: Ignition Lock Cylinder Housing (211-05 Steering Wheel and Column Electrical Components, Removal and Installation).
2. Remove the PATS transceiver.
 1. Release the tabs.
Use the General Equipment: Pick Hook
 2. Remove the PATS transceiver.

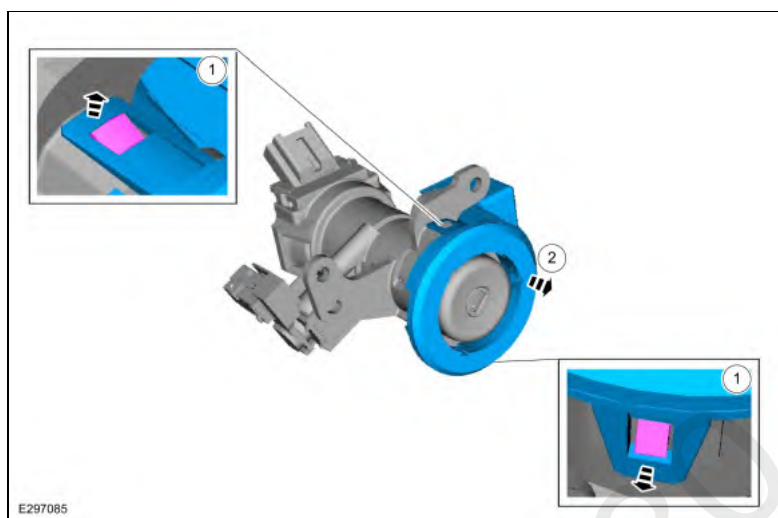

Installation

1. To install, reverse the removal procedure.