



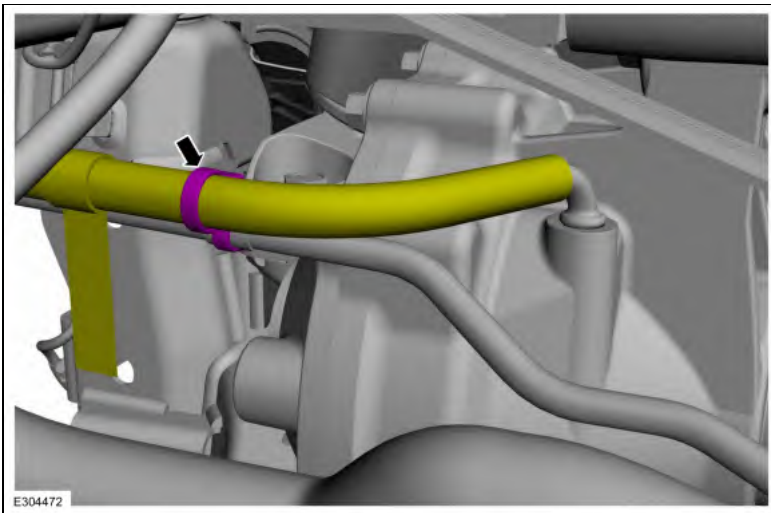

- 7.
1. Remove and discard the front axle assembly bolts.
 2. Remove the front axle assembly.

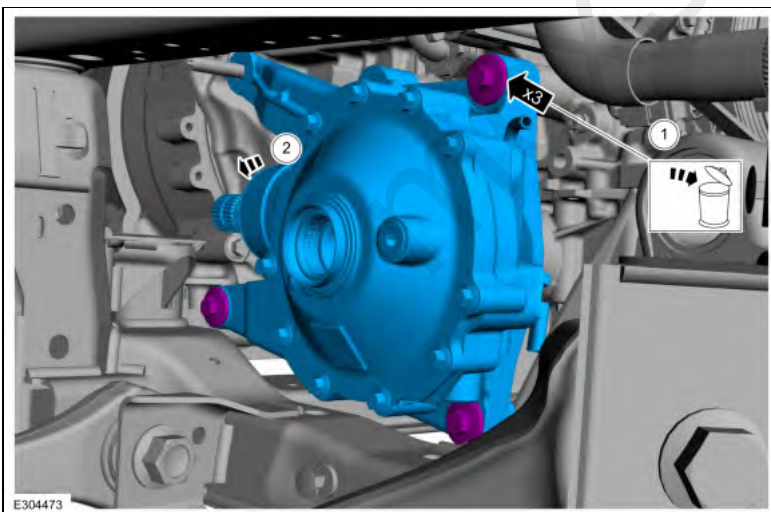

8. Remove and discard the O-ring.