


Cruise Control - System Operation and Component Description

System Operation

Non-Adaptive Cruise Control

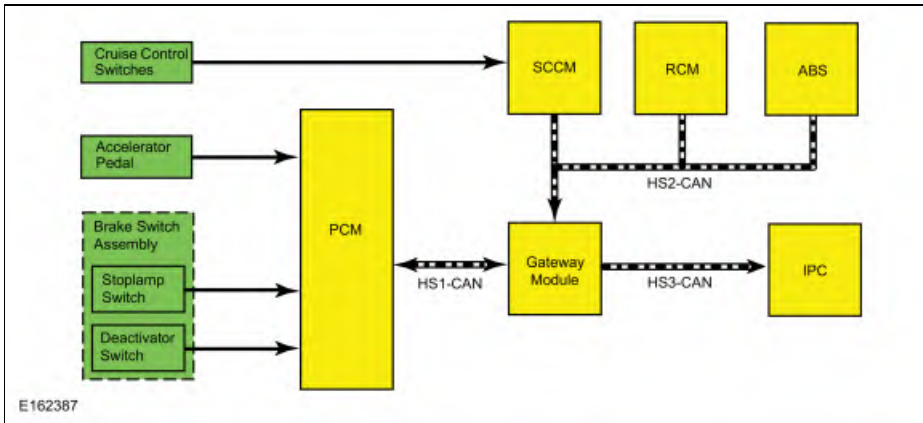

Item	Description
1	Brake switch assembly
2	IPC
3	Accelerator pedal
4	Deactivator switch
5	Stoplamp switch
6	SCCM
7	PCM
8	Cruise control switches
9	GWM
10	ABS module
11	RCM

Network Message Chart

Network Input Messages - IPC

Broadcast Message	Originating Module	Message Purpose
Cruise control override	PCM	Driver overriding cruise control with accelerator pedal.
Cruise control status	PCM	Data used for speed control indicator status.

Network Input Messages - PCM

Broadcast Message	Originating Module	Message Purpose
Steering wheel switch speed control	SCCM	For cruise control enable/disable and operating mode request.
Stability control event in progress	ABS module	Deactivates speed control when requested.