

Module	DTC	Description	Action <i>New: hover over Pinpoint Test links to show title</i>
BCM	U2005:85	Vehicle Speed:Signal Above Allowable Range	GO to Pinpoint Test V
BCM	U2100:00	Initial Configuration Not Complete: No Sub Type Information	GO to Pinpoint Test W
BCM	U2101:00	Control Module Configuration Incomplete: No Sub Type Information	GO to Pinpoint Test W
BCM	U2200:00	Control Module Configuration Memory Corrupt: No Sub Type Information	GO to Pinpoint Test W
BCM	U3000:49	Control Module:Internal Electronic Failure	GO to Pinpoint Test X
BCM	U3006:16	Control Module Input Power "A": Circuit Voltage Below Threshold	GO to Pinpoint Test Y
BCM	U3006:17	Control Module Input Power "A": Circuit Voltage Above Threshold	GO to Pinpoint Test AA
BCM	U3006:1C	Control Module Input Power "A": Circuit Voltage Out of Range	GO to Pinpoint Test Z
BCM	U3007:16	Control Module Input Power "B": Circuit Voltage Below Threshold	GO to Pinpoint Test Y
BCM	U3007:17	Control Module Input Power "B": Circuit Voltage Above Threshold	GO to Pinpoint Test AA
BCM	U3013:16	Control Module Input Power "C": Circuit Voltage Below Threshold	GO to Pinpoint Test Y
BCM	U3013:17	Control Module Input Power "C": Circuit Voltage Above Threshold	GO to Pinpoint Test AA
BCM	U3014:16	Control Module Input Power "D": Circuit Voltage Below Threshold	GO to Pinpoint Test Y
BCM	U3014:17	Control Module Input Power "D": Circuit Voltage Above Threshold	GO to Pinpoint Test AA

Symptom Chart

Symptom Chart: Multifunction Electronic Modules

Diagnostics in this manual assume a certain skill level and knowledge of Ford-specific diagnostic practices.
REFER to: Diagnostic Methods (100-00 General Information, Description and Operation).

Condition	Possible Sources	Action <i>New: hover over Pinpoint Test links to show title</i>
A module does not respond to the diagnostic scan tool	- Fuse - Wiring, terminals or connectors - Module	REFER to: Communications Network (418-00 Module Communications Network, Diagnosis and Testing).

Pinpoint Tests

☐ [PINPOINT TEST A : U0100:87](#)

☐ [PINPOINT TEST B : U0121:87](#)

☐ [PINPOINT TEST C : U0131:87](#)

☐ [PINPOINT TEST D : U0151:87](#)

☐ [PINPOINT TEST E : U0155:87](#)

☐ [PINPOINT TEST F : U0166:87](#)