


Engine Rear Undershield


Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Remove the Engine front undershield.
Refer to: Engine Front Undershield (501-02 Front End Body Panels, Removal and Installation).
2. Remove the bolts
Torque: 22 lb.in (2.5 Nm)

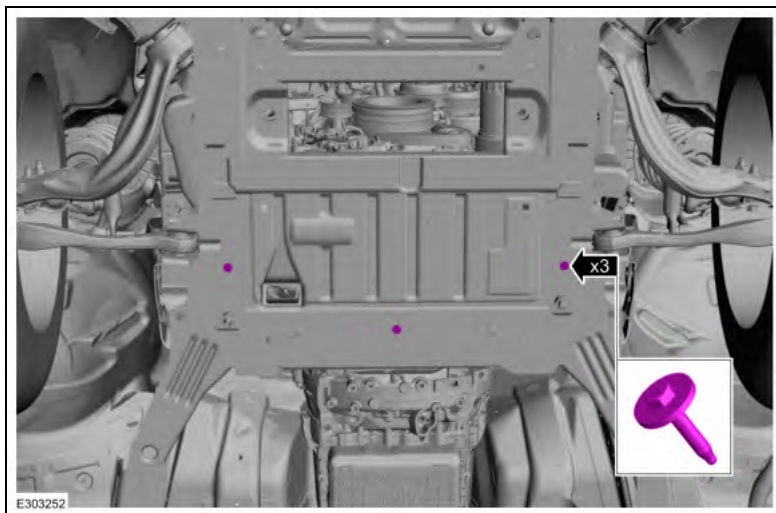


3.
 - Remove the retainers
 - Remove the push pins and the engine rear undershield

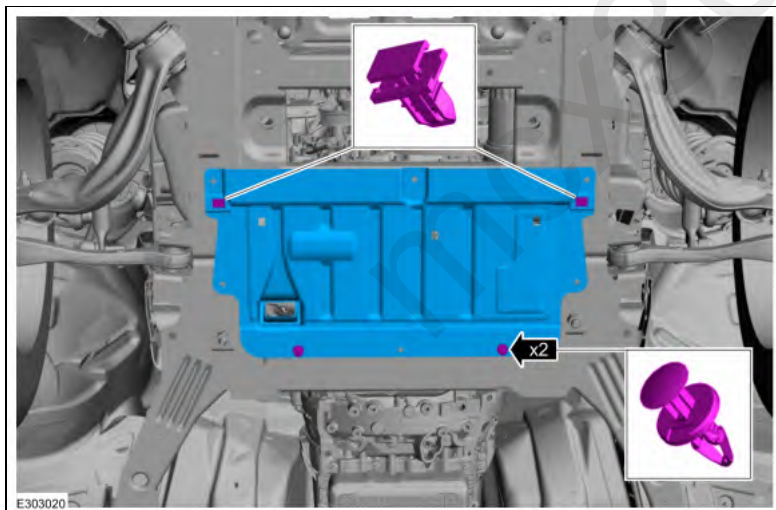

4. If equipped.
Remove the bolts and the engine rear undershield.
Torque: 18 lb.ft (25 Nm)

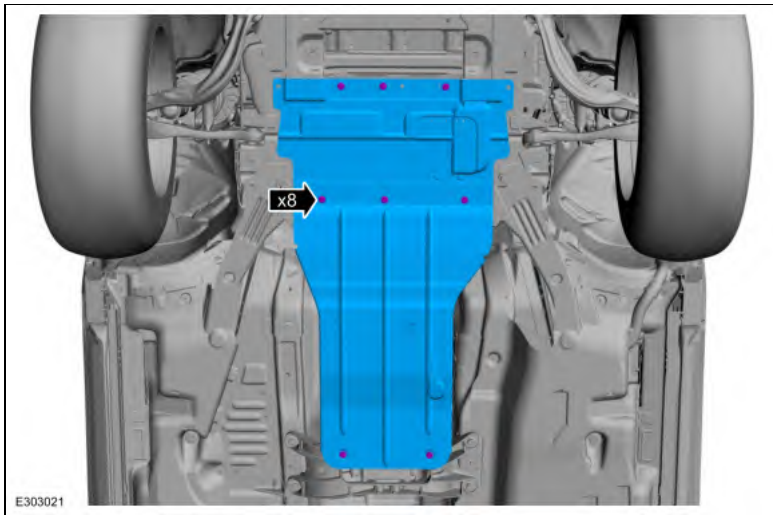

5. If equipped.
Remove the bolts and the engine rear undershield.
Torque: 18 lb.ft (25 Nm)

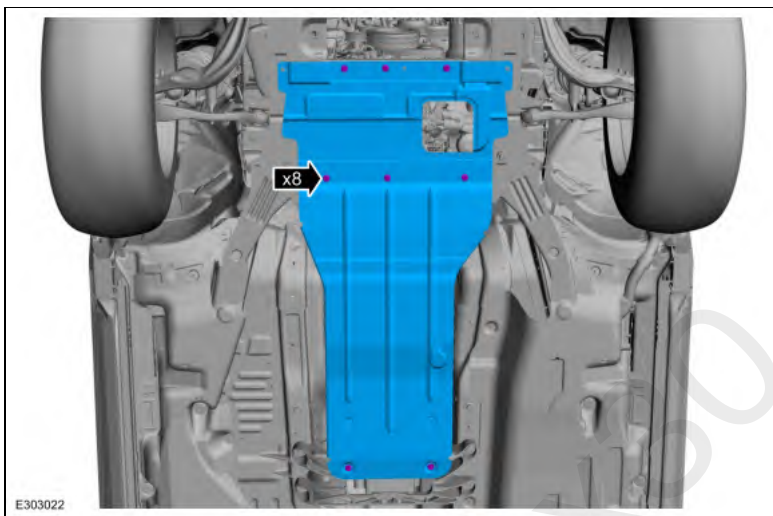

Installation

1. To install, reverse the removal procedure.