

Fender

Special Tool(s) / General Equipment

Knife

Materials

Name	Specification
Flexible Foam Repair 3M [®] , 08463, LORD Fusor [®] 121	-

Removal


NOTE: Removal steps in this procedure may contain installation details.

NOTE: RH shown, LH similar.

1. Remove the fender splash shield.
Refer to: Fender Splash Shield (501-02 Front End Body Panels, Removal and Installation).


2. Remove the cowl panel grille assembly.
Refer to: Cowl Panel Grille (501-02 Front End Body Panels, Removal and Installation).

3. Remove the retainers and the fender flange finisher.

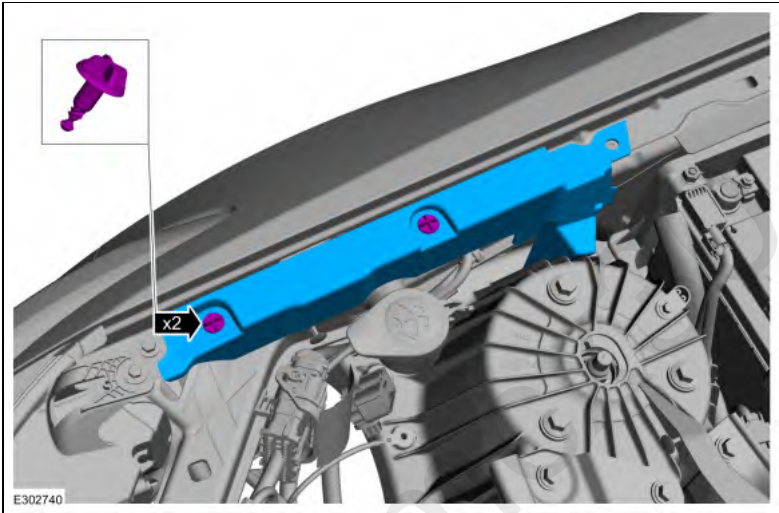


4. Remove the headlamp assembly.
Refer to: Headlamp Assembly (417-01 Exterior Lighting, Removal and Installation).

5. Open the front door.

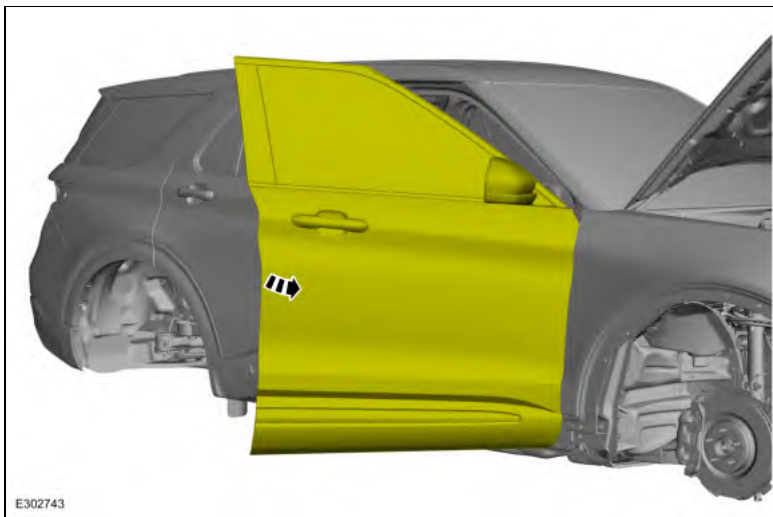

6. Remove the bolt.
Torque: 44 lb.in (5 Nm)

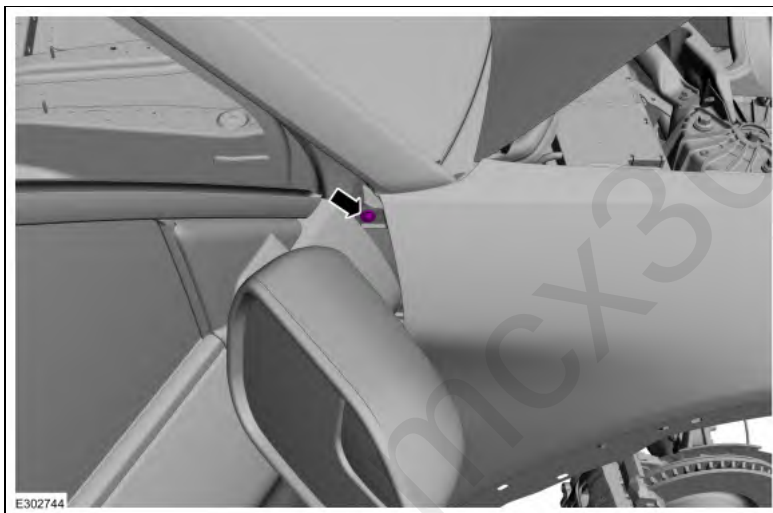

7. Close the door.