


Hood


Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Detach the windshield washer hose coupling.

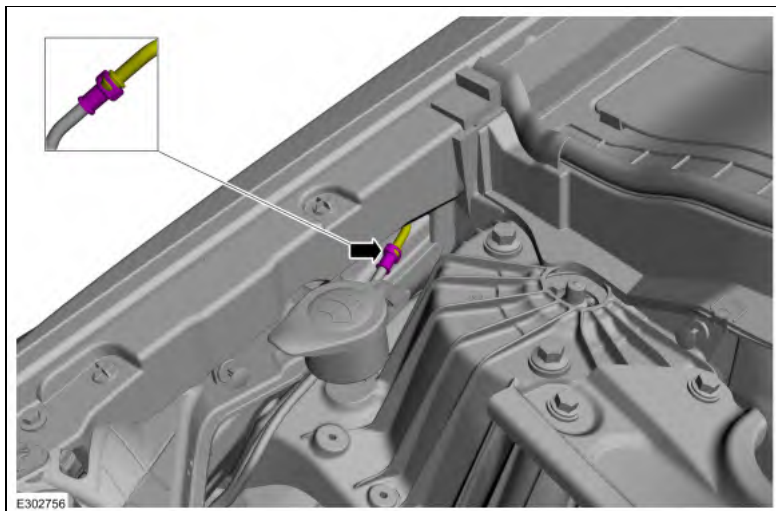


2. Detach the windshield washer hose pin-type retainers from the hood hinge.

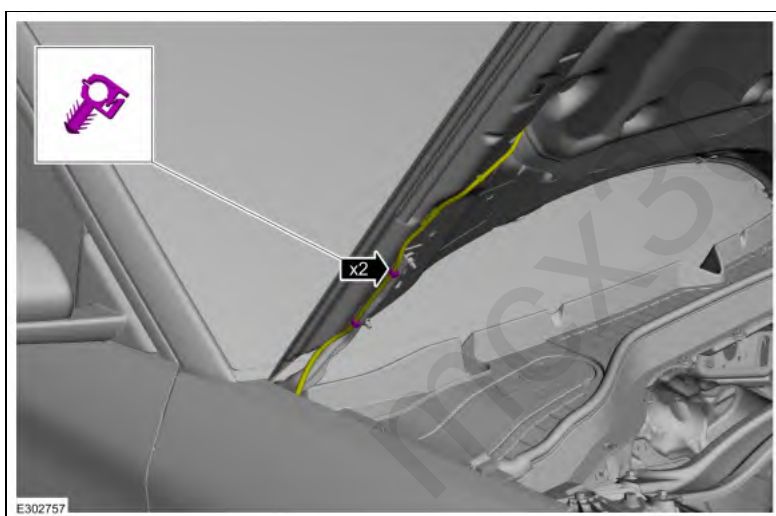

3. On both sides.
Index-mark the hood hinge location to aid in hood installation.

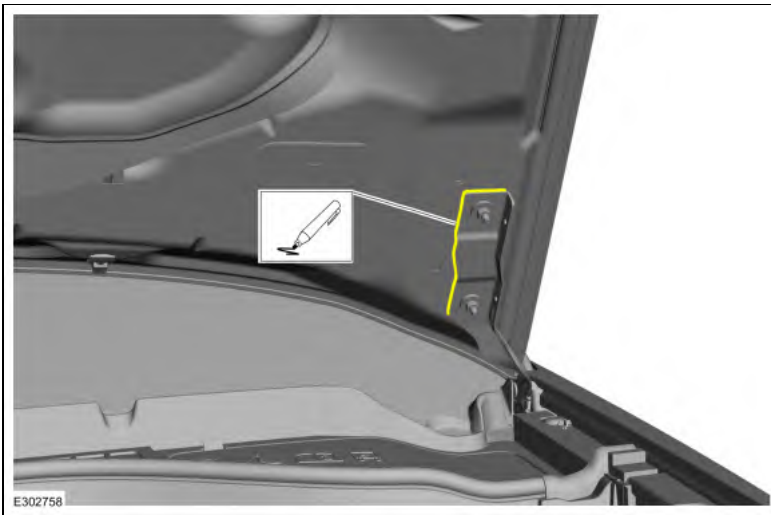

4. Remove the nuts and the hood.
Torque: 159 lb.in (18 Nm)

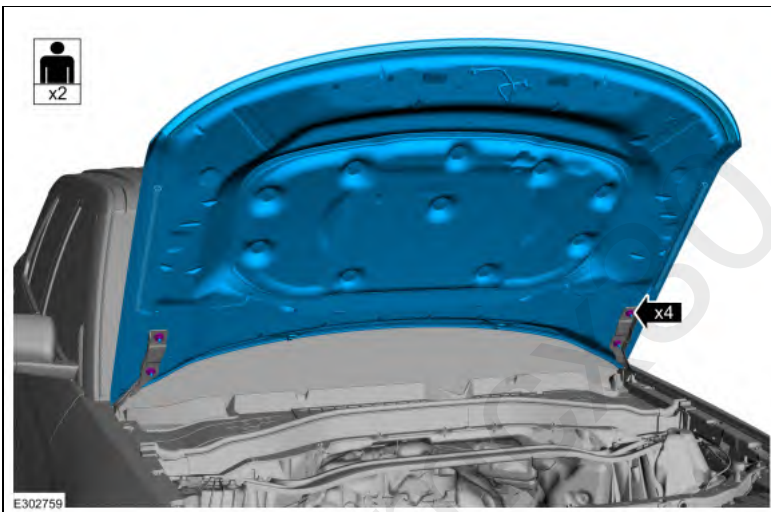

5. **NOTE:** *This step is only necessary when installing a new component.*
Remove the pin-type retainers and the hood insulation.