





Front door fore, aft and tilt alignment


6. Loosen the bolts to permit movement of the door.
Loosen:
: 2 turn(s)

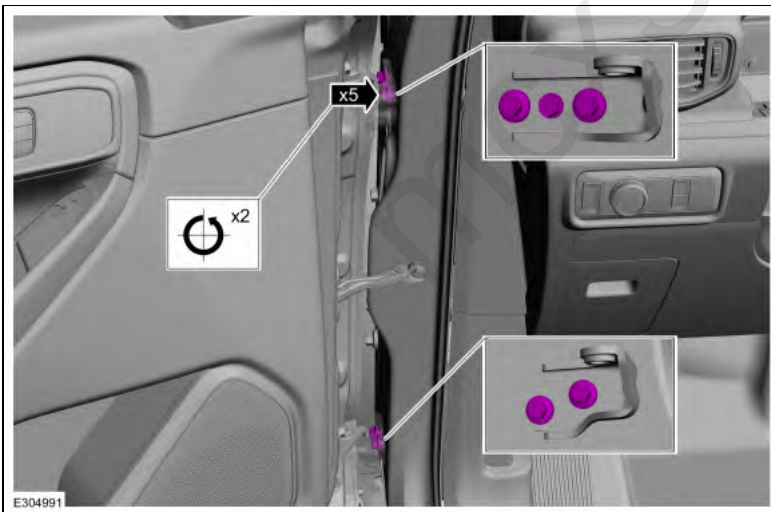

7. Carefully close the door.

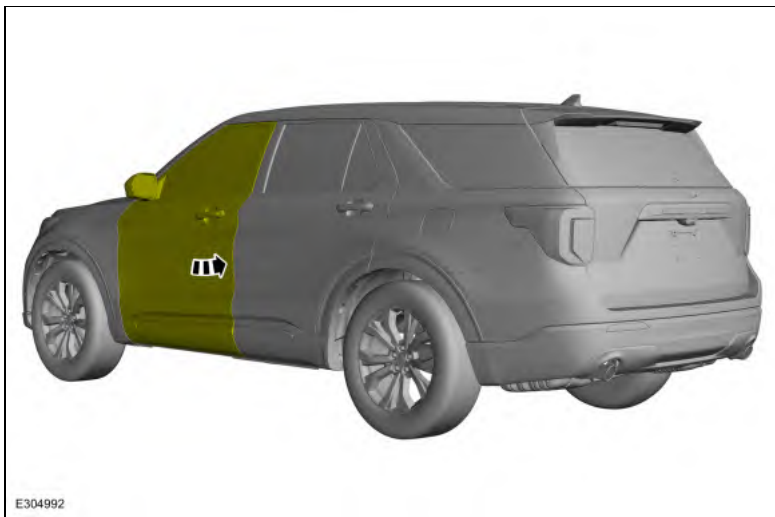

8. Adjust the door as required.

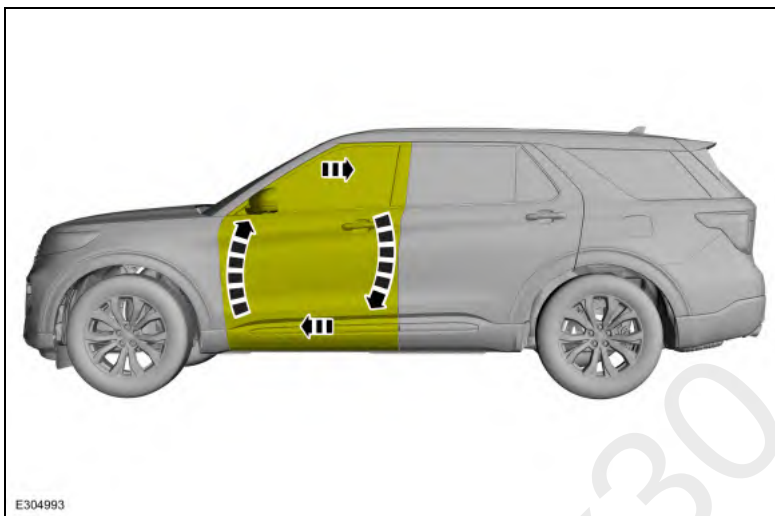

9. Carefully open the door.




10. Tighten the bolts.

Torque:


1.: 22 lb.ft (30 Nm)

2.: 89 lb.in (10 Nm)

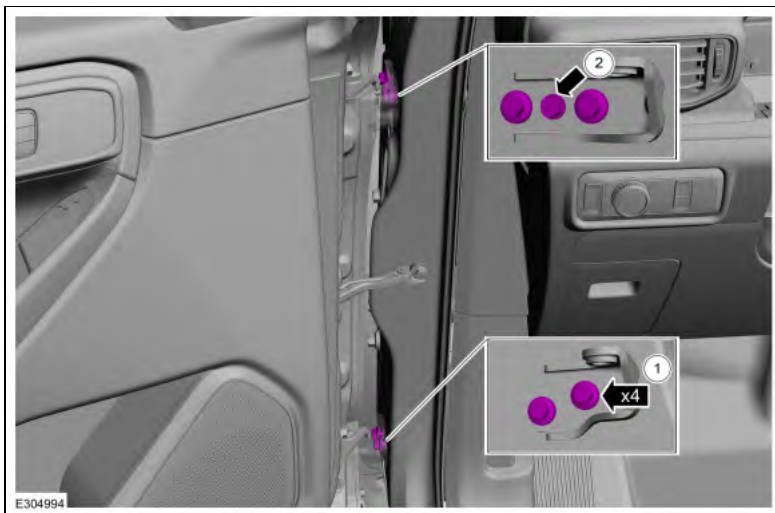


All alignments


11. Install the striker assembly.
Torque: 18 lb.ft (25 Nm)

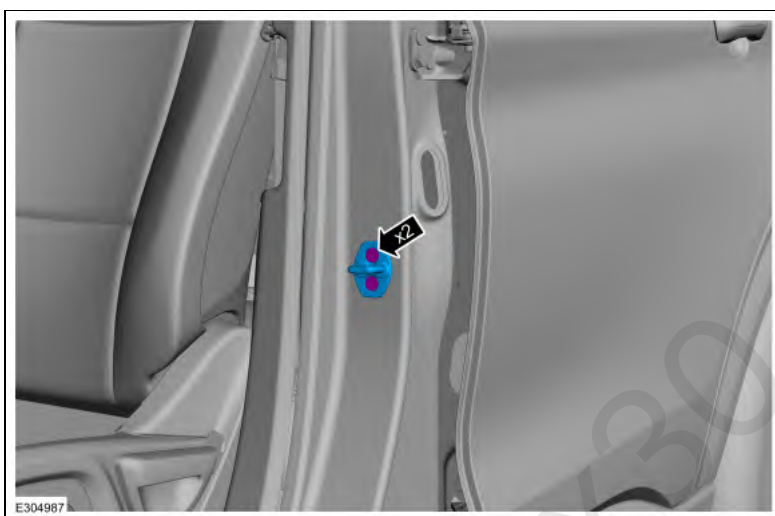



12. Loosen the bolts to permit movement of the striker assembly.
Loosen:
: 2 turn(s)

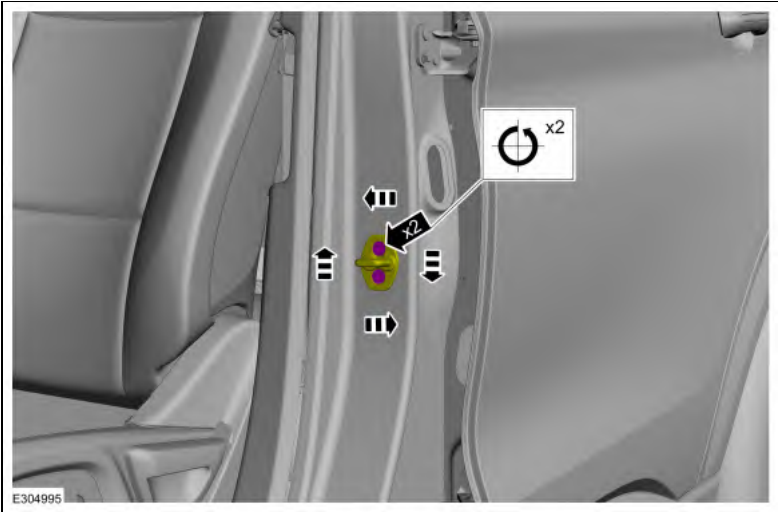

13. Tighten the bolts.
Torque: 18 lb.ft (25 Nm)

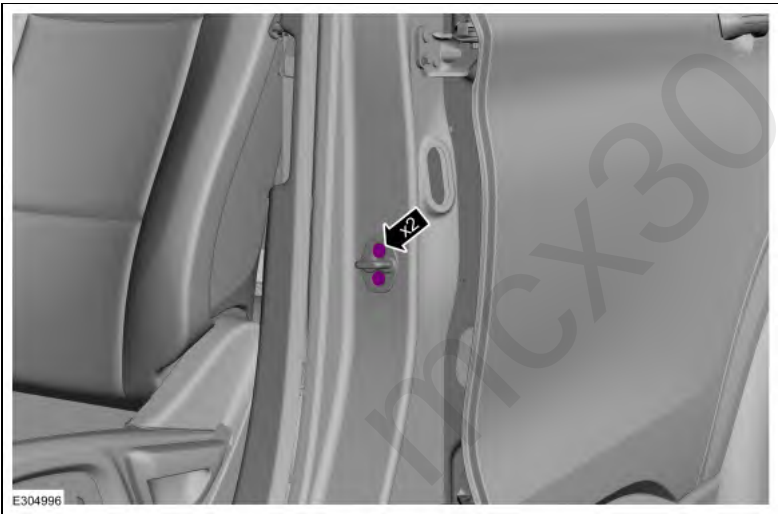

 14. Inspect the body-to-front door dimensions.

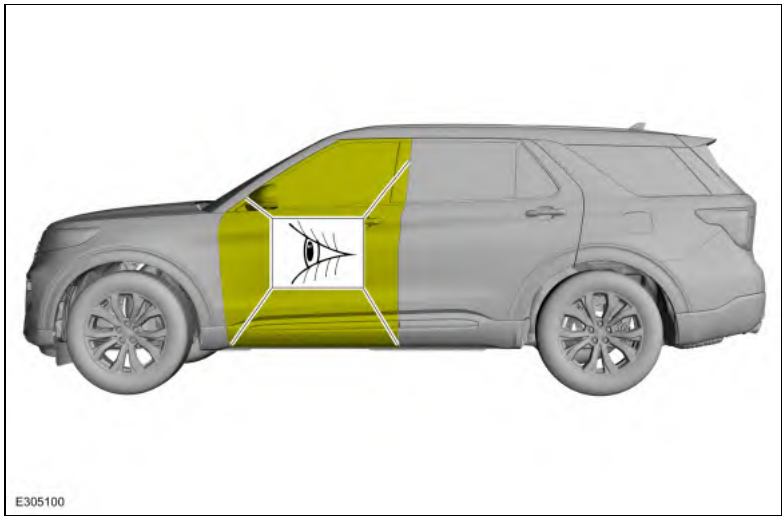

mcx30.com

Hood Alignment


Inspection

NOTE: Removal steps in this procedure may contain installation details.

1. Inspect the hood-to-body dimensions.


All alignments

2. Remove the hood latch.
Refer to: Hood Latch (501-14 Handles, Locks, Latches and Entry Systems, Removal and Installation).
3. Remove the nuts and the striker assembly.
Torque: 80 lb.in (9 Nm)

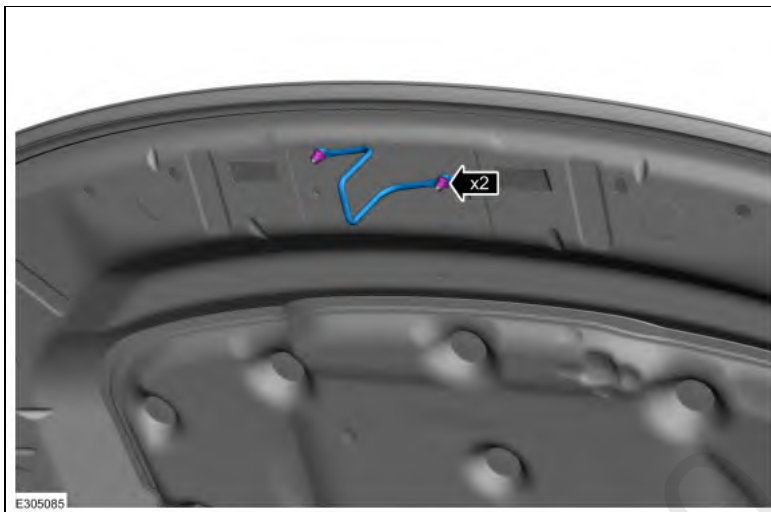


Hood fore and aft, left and right alignments

4. Loosen the nuts to permit movement of the hood.
Loosen:
: 2 turn(s)

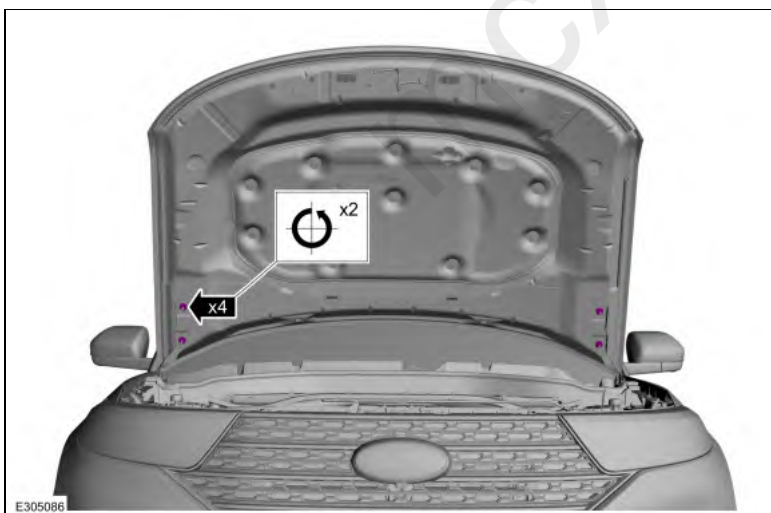


5. Carefully close the hood.

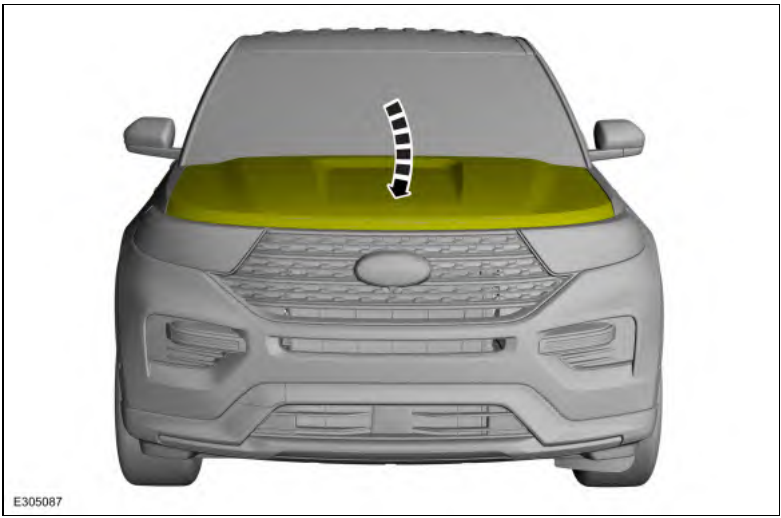

6. Adjust the hood as required.



7. Carefully open the hood.

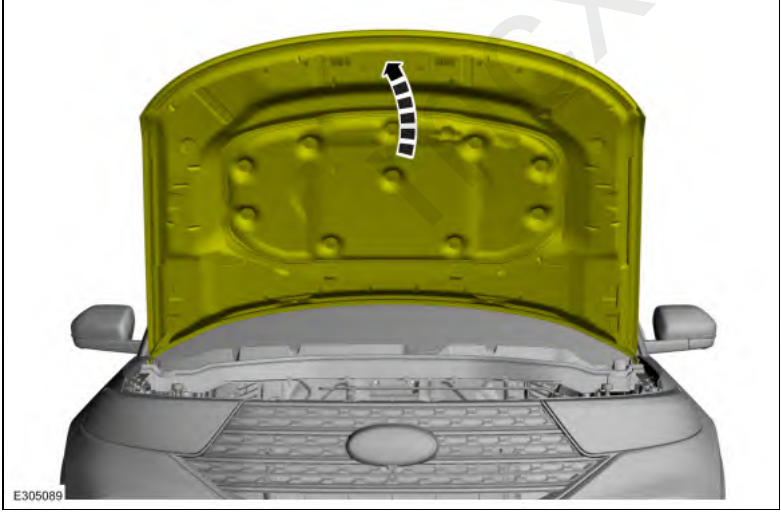

8. Tighten the nuts.
Torque: 159 lb.in (18 Nm)