

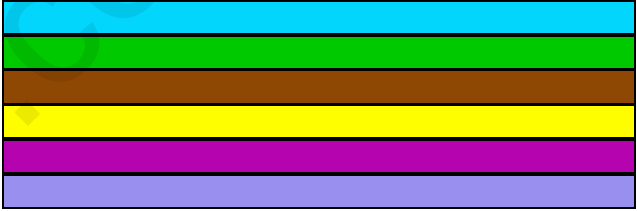


**Hood front up and down alignments**

9. Adjust the bump stop rubbers.

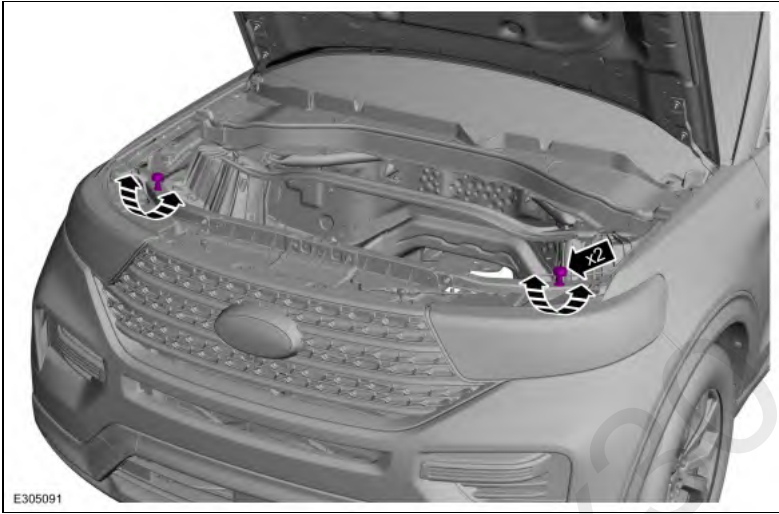


10. Adjust the hood as required.

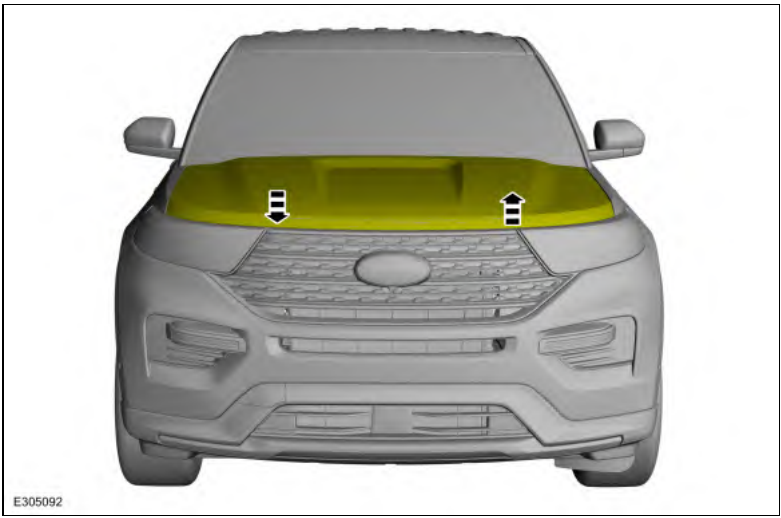


All alignments


11. Install the striker assembly.  
*Torque: 80 lb.in (9 Nm)*

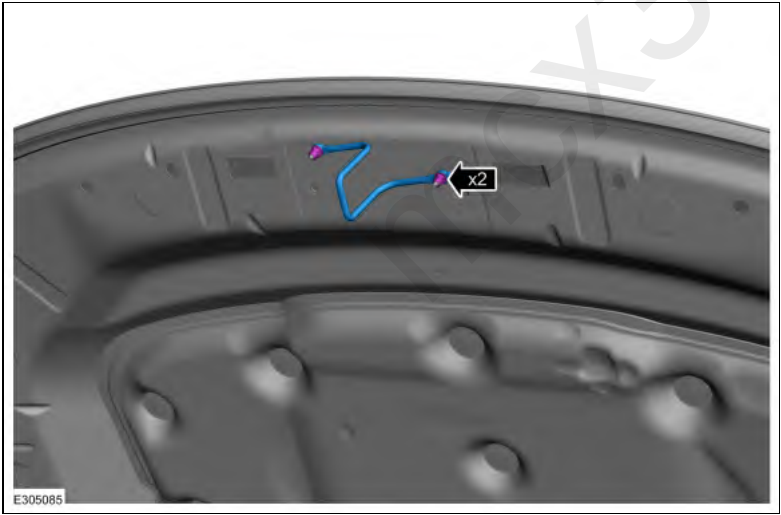

12. Loosen the nuts to permit movement of the striker assembly.  
Loosen:  
: 2 turn(s)

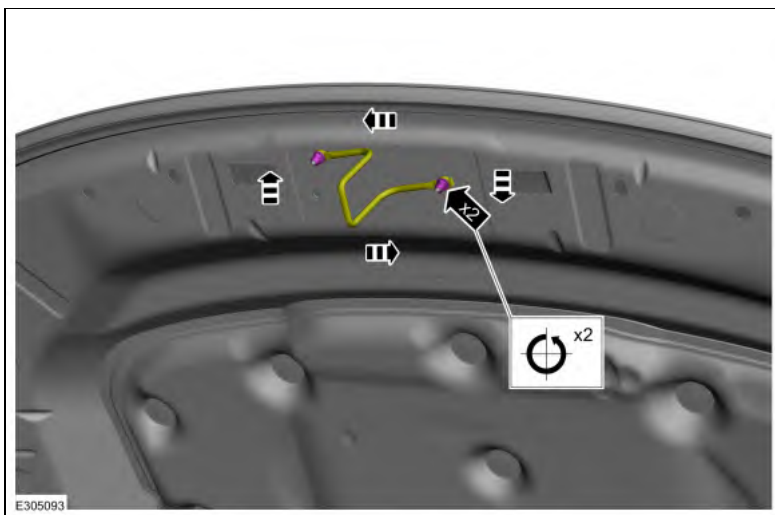

13. Tighten the nuts.  
*Torque: 80 lb.in (9 Nm)*

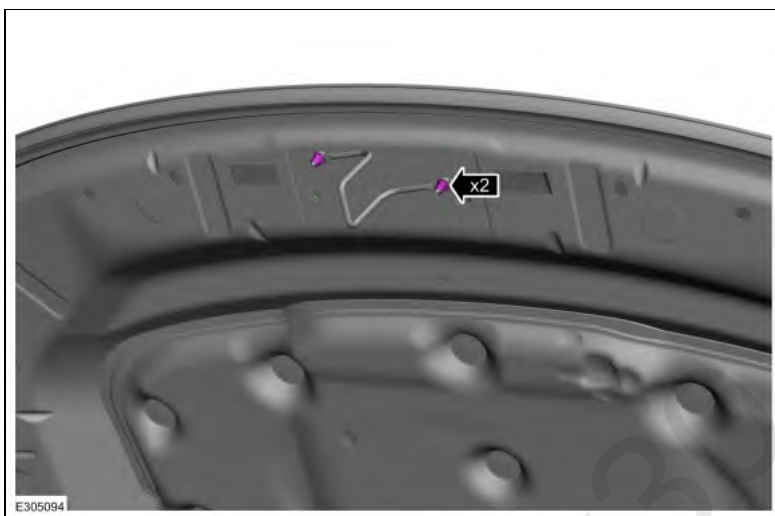

14. Inspect the body-to-hood dimensions.



15. Install the removed components.



# Liftgate Alignment

## Special Tool(s) / General Equipment

Interior Trim Remover

## Materials

| Name                                                | Specification |
|-----------------------------------------------------|---------------|
| Seam Sealer<br>TA-2-B, 3M, 08308, LORD Fusor 805DTM | -             |

## Inspection


**NOTE:** Removal steps in this procedure may contain installation details.

1. Check liftgate-to-body dimensions.


## Adjustment

### All alignments

1. Open the liftgate.

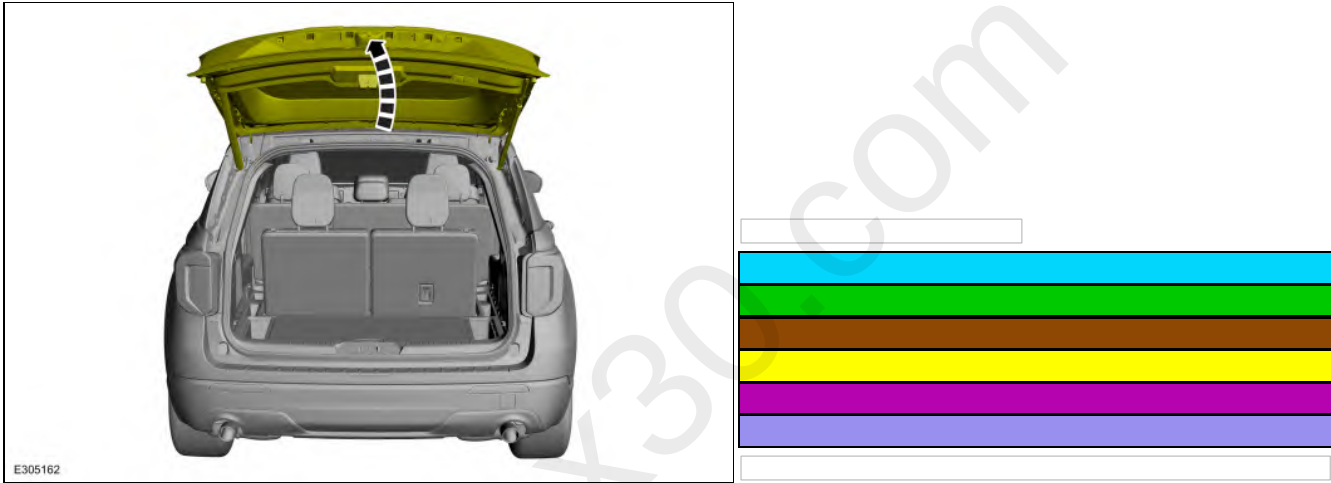

2. Position aside the liftgate weatherstrip and the load compartment cover.

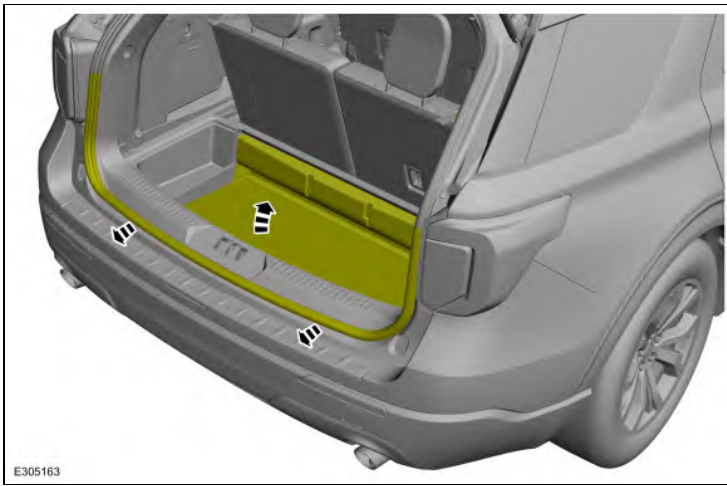

3. Remove the liftgate scuff plate trim panel.
  1. Release the liftgate scuff plate trim panel clips.  
Use the General Equipment: Interior Trim Remover
  2. If equipped  
Disconnect the keyless entry rear antenna electrical connector.