



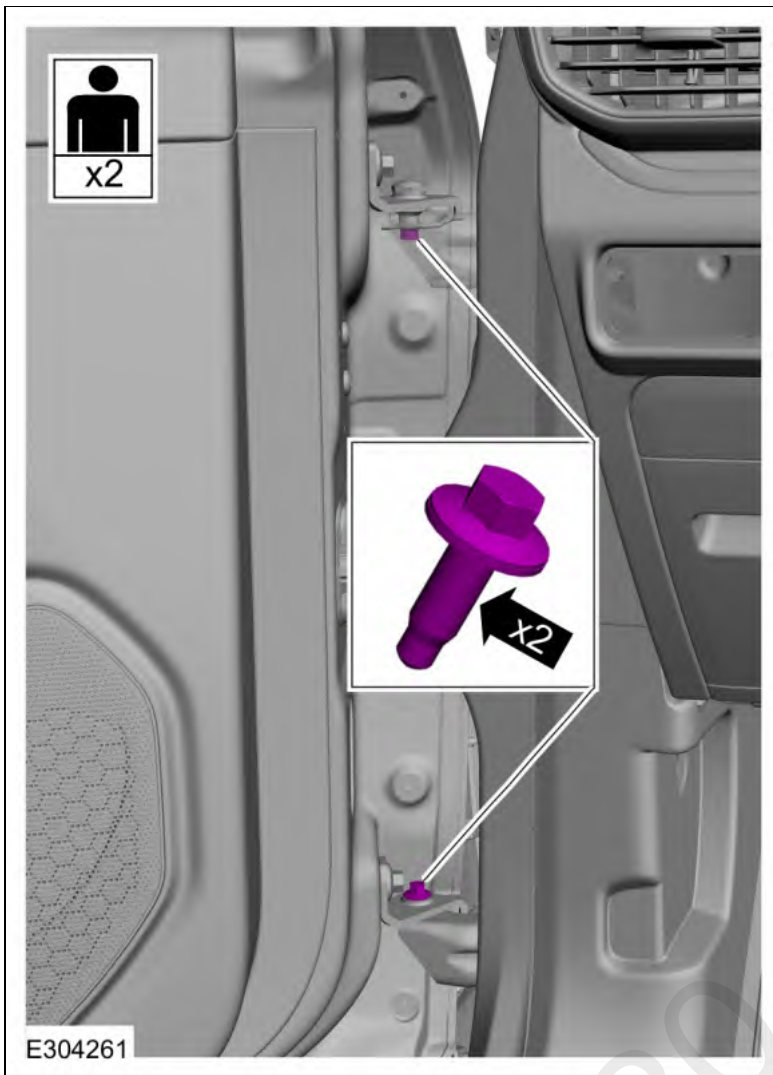

6. **NOTE:** This step requires the aid of another technician.

Remove the door.

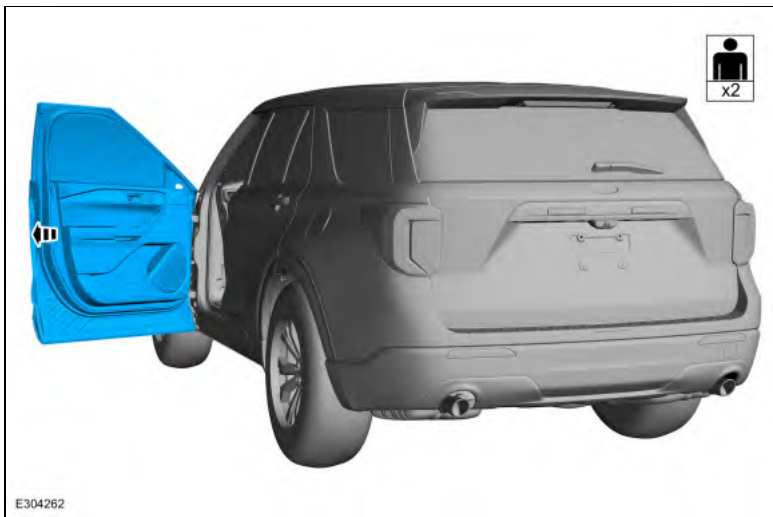

Installation

1. To install, reverse the removal procedure.
2. **NOTE:** *This step is only necessary when installing a new component.*

Check the door-to-body alignment. Align the door as necessary.
Refer to: Front Door Alignment (501-03 Body Closures, General Procedures).

mcx30.com

Front Door Check Arm

Removal

NOTE: Removal steps in this procedure may contain installation details.


NOTE: LH side shown, RH side similar.

1. Open the door.




Vehicles with police package

2. Remove the check arm bolt and position aside the check arm and tether strap.
Torque: 18 lb.ft (25 Nm)

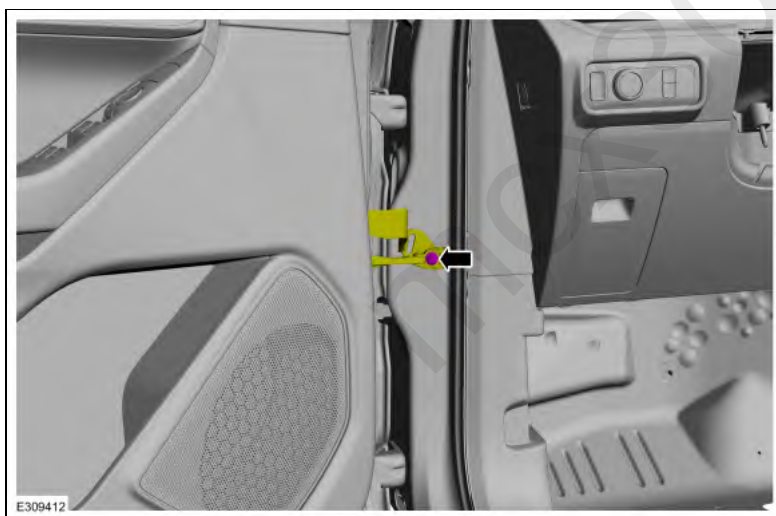


Vehicles without police package

3. Remove the check arm bolt and position aside the check arm.
Torque: 18 lb.ft (25 Nm)

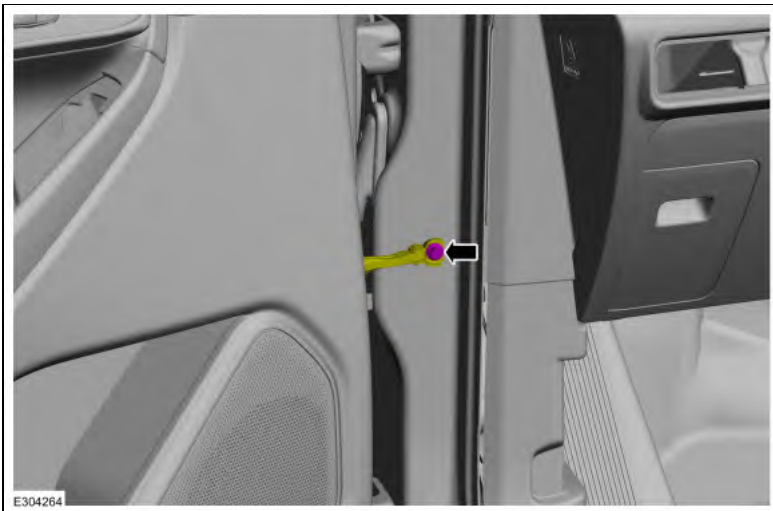

All vehicles

4. Remove the front door trim panel.
Refer to: Front Door Trim Panel (501-05 Interior Trim and Ornamentation, Removal and Installation).
5. Remove the front door speaker.
Refer to: Front Door Speaker (415-00A Information and Entertainment System - General Information - Vehicles Without: SYNC 3, Removal and Installation).
6. Remove the door check arm cover.

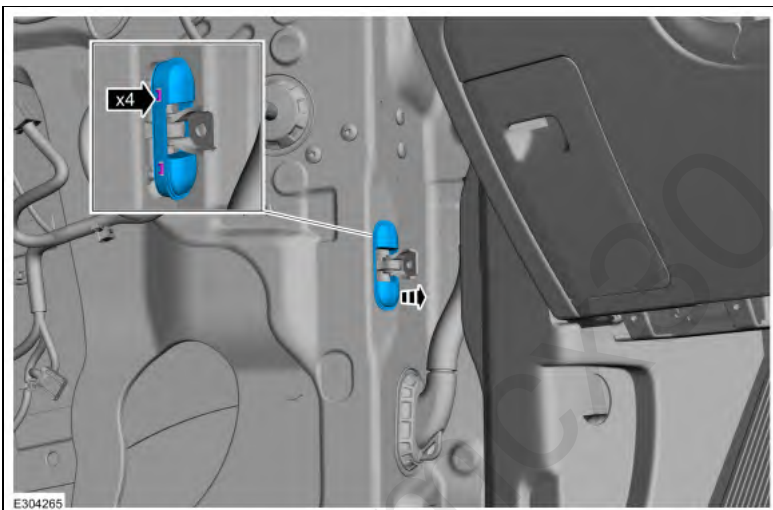

7. **NOTE:** Door removed from vehicle for clarity.

Remove the front door check arm nuts.
Torque: 80 lb.in (9 Nm)