
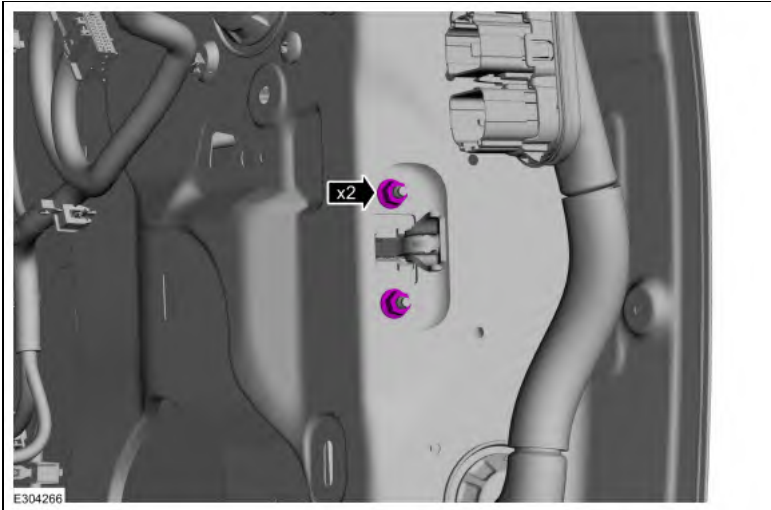


8. Remove the front door check arm assembly.

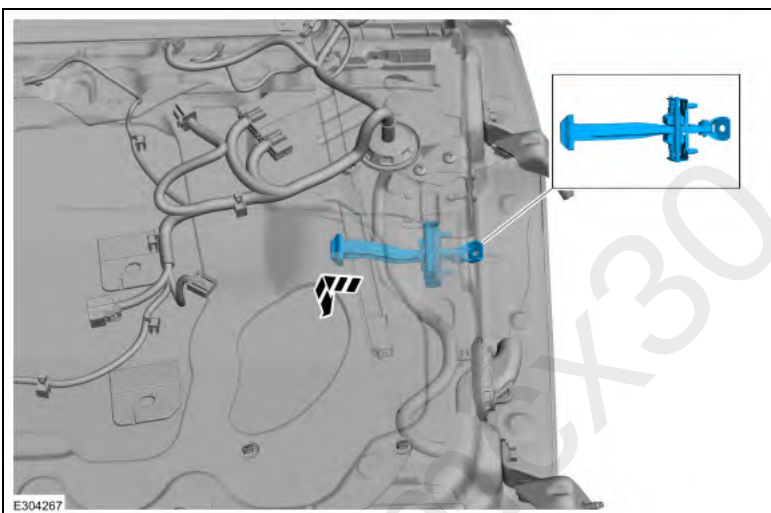

Installation


1. To install, reverse the removal procedure.

Fuel Filler Door


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Open the fuel filler door.

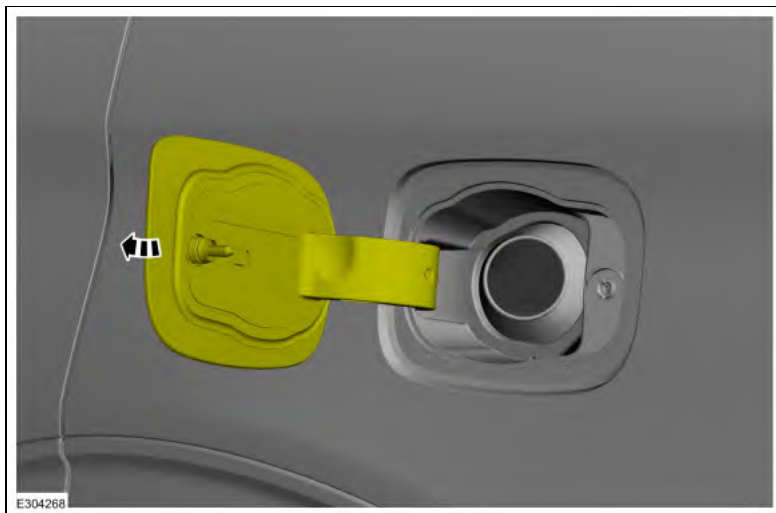

2. Using a screwdriver, pry the retaining tab back and slide the fuel filler door from the fuel filler door hinge.

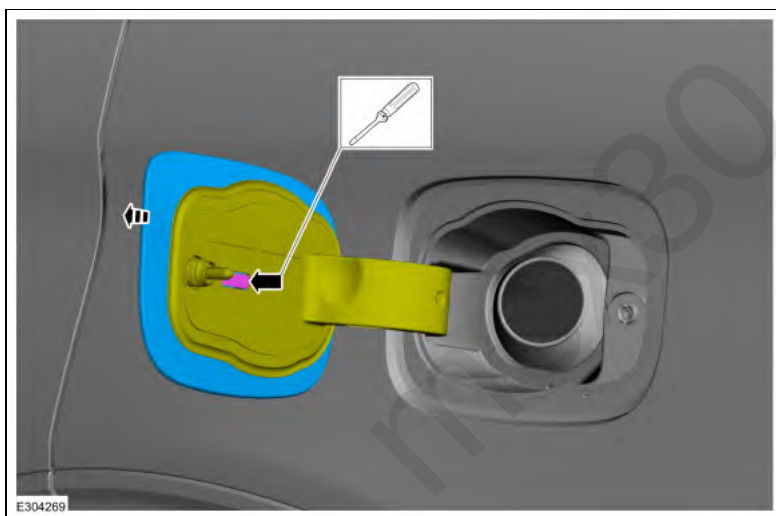

Installation

1. To install, reverse the removal procedure.

Fuel Filler Door Assembly

Special Tool(s) / General Equipment


Flat Headed Screw Driver
Knife

Removal

NOTE: Removal steps in this procedure may contain installation details.

NOTE: The fuel filler door assembly is damaged during the removal process and requires a new fuel filler door assembly installed.

1. Remove the fuel filler door.
Refer to: Fuel Filler Door (501-03 Body Closures, Removal and Installation).
2. Remove the fuel tank filler pipe.
Refer to: Fuel Tank Filler Pipe (310-01A Fuel Tank and Lines - 2.3L EcoBoost (201kW/273PS), Removal and Installation).
Refer to: Fuel Tank Filler Pipe (310-01B Fuel Tank and Lines - 3.0L EcoBoost, Removal and Installation).
Refer to: Fuel Tank Filler Pipe (310-01C Fuel Tank and Lines - 3.3L Duratec-V6, Removal and Installation).
Refer to: Fuel Tank Filler Pipe (310-01D Fuel Tank and Lines - 3.3L Duratec-V6 â€“ Hybrid (BP), Removal and Installation).
3. Using a knife, slice the holes in the indicated areas.
Use the General Equipment: Knife

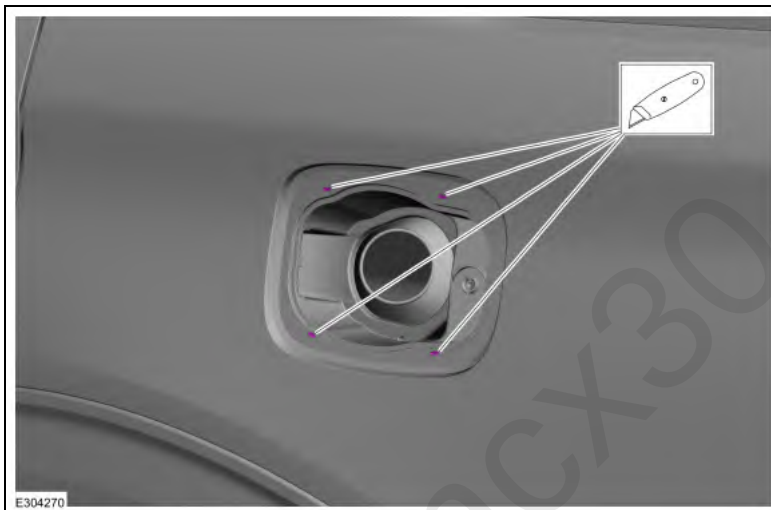

4. Insert the screwdriver and release the clips while pulling the fuel filler door housing away from the vehicle.
Use the General Equipment: Flat Headed Screw Driver