



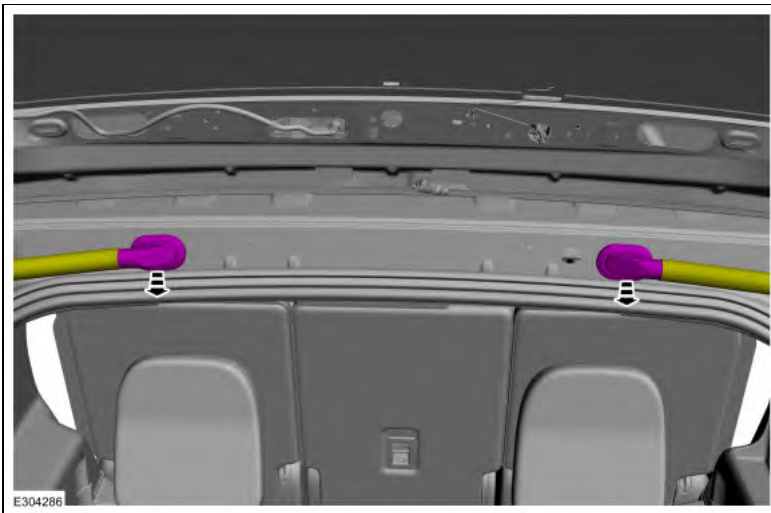

6. Mark the location of the liftgate hinge bolts.

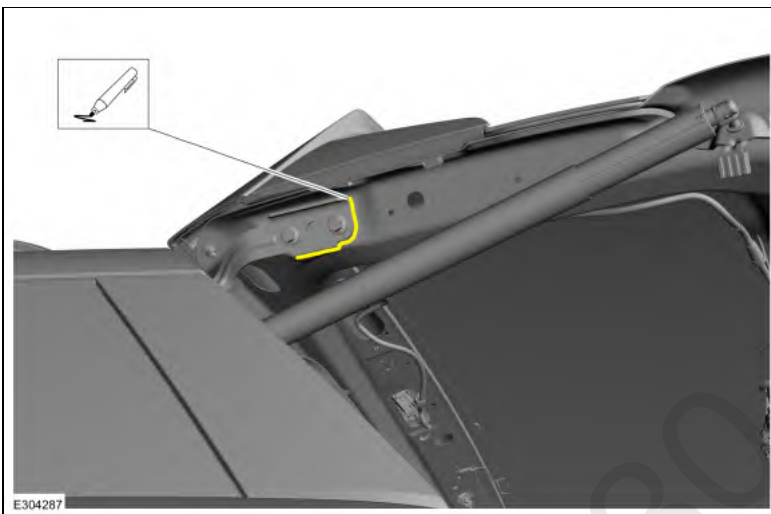

7. **NOTE:** This step requires the aid of another technician.

On both sides.

Remove the clips holding the liftgate struts or the power liftgate motor and position aside.