


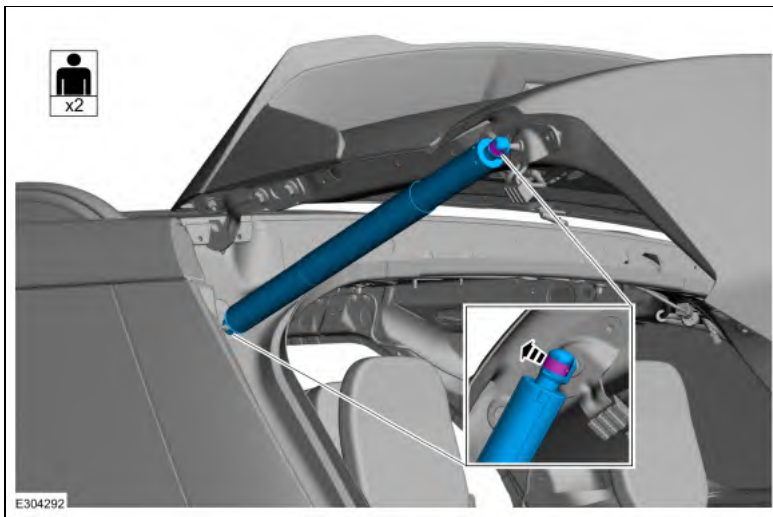

Installation

1. To install, reverse the removal procedure.
2. Carry-out the power liftgate initialization.
Refer to: Power Liftgate Initialization (501-03 Body Closures, General Procedures).

Rear Door

Removal


NOTE: Removal steps in this procedure may contain installation details.

NOTE: LH side shown, RH side similar.

1. Open the door.



2. Remove the check arm bolt.
Torque: 18 lb.ft (25 Nm)

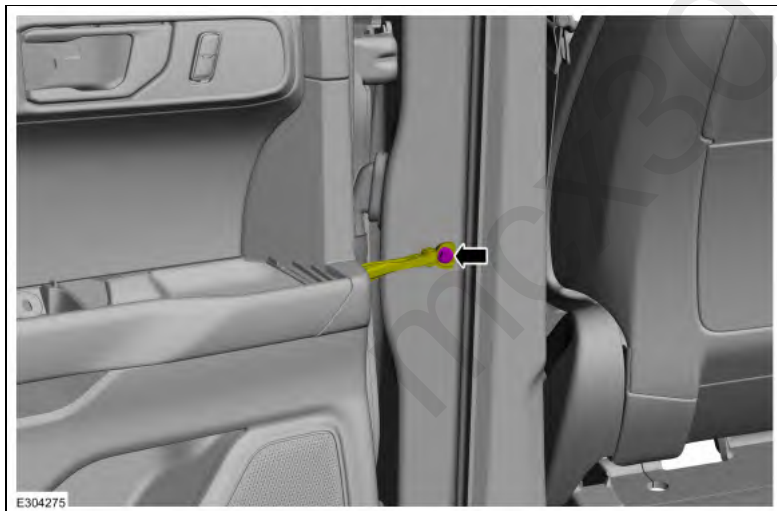

3. Disconnect the rear door electrical connector.



A horizontal bar chart consisting of six equally long bars stacked vertically. The bars are colored cyan, green, brown, yellow, purple, and light blue from top to bottom.

4. **NOTE:** *This step requires the aid of another technician.*

Remove the door hinge pivot bolts.

Torque: 22 lb.ft (30 Nm)