



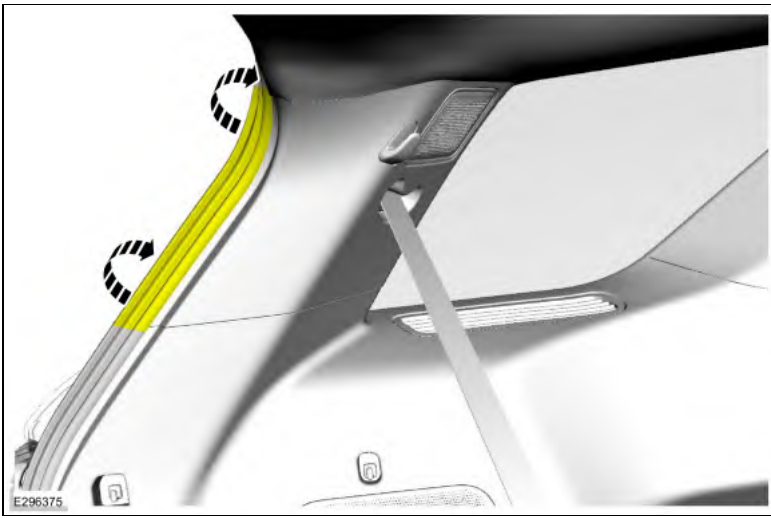


6. Release the D-pillar trim panel clips.
1. Release the D-pillar trim panel outer lower clip.
Use the General Equipment: Interior Trim Remover
 2. Release the D-pillar trim panel outer upper pin-type clip.
Use the General Equipment: Interior Trim Remover
 3. Release the D-pillar trim panel front lower clips.
Use the General Equipment: Interior Trim Remover

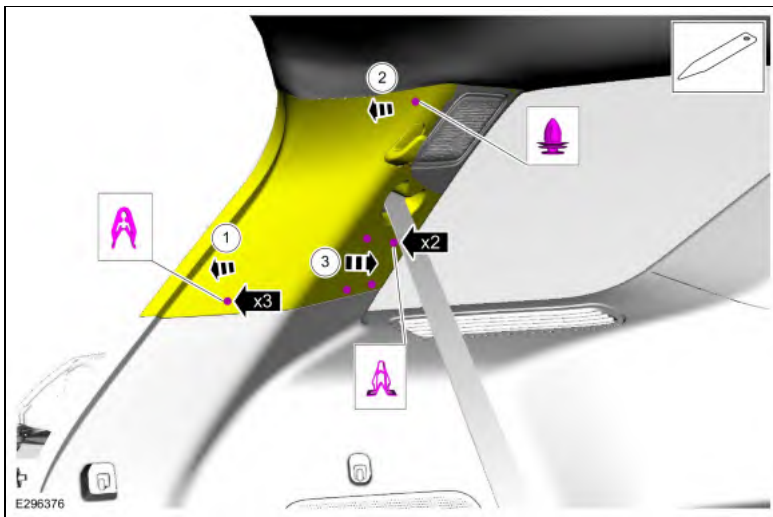

7. **NOTICE:** The D-pillar trim panel must be positioned downward to allow the upper clips to release correctly. Failure to follow this direction may cause damage to the D-pillar trim panel.


Slide the D-pillar trim panel down, aligning the upper clips to the slots in the sheet metal.

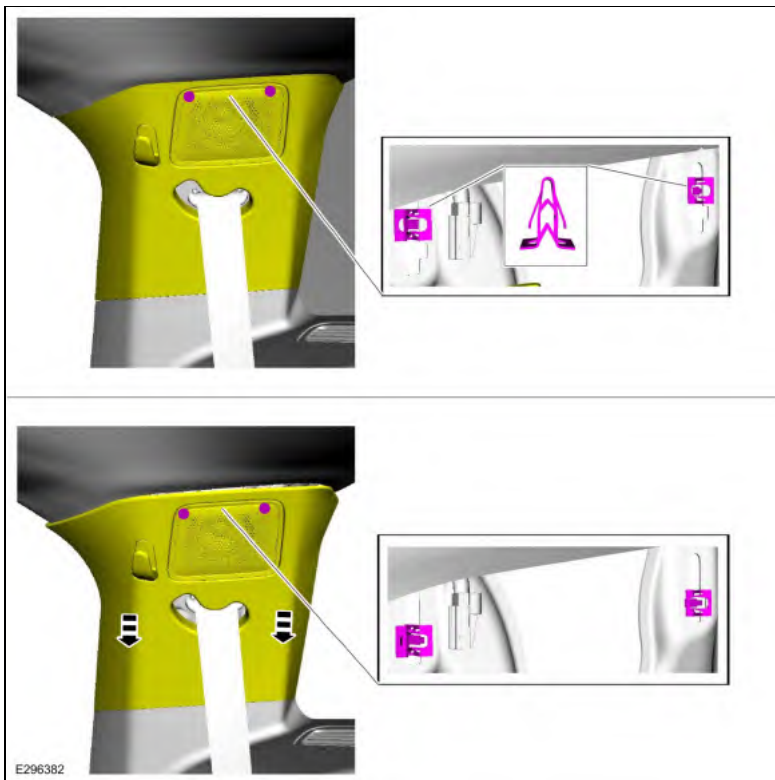

mcx30.com



8. Remove the D-pillar trim panel.
 1. Pull outward on the D-pillar trim panel.
 2. If equipped.
Disconnect the D-pillar speaker electrical connector.
 3. Feed the third row seatbelt retractor through the opening in the D-pillar trim panel.

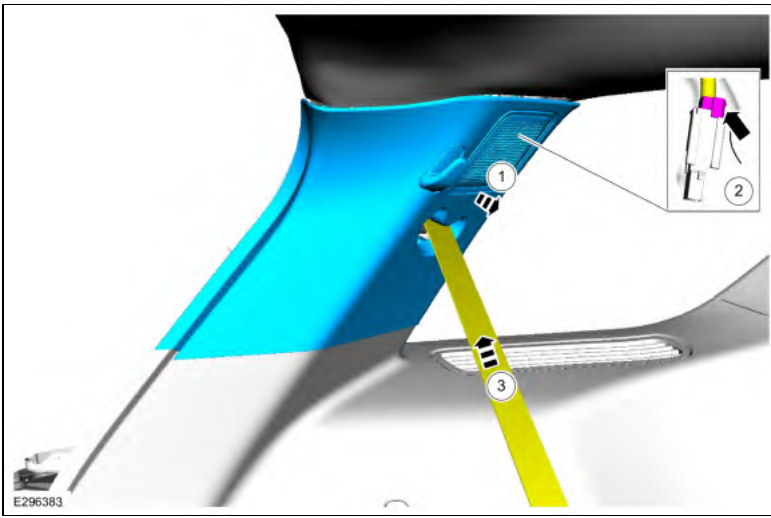

Installation

NOTE: During installation, make sure the seatbelt webbing is not twisted and the seatbelts and buckles are accessible to the occupants.

1. To install, reverse the removal procedure.
2. Check the seatbelt system for correct operation.
Refer to: Seatbelt Systems (501-20A Seatbelt Systems, Diagnosis and Testing).

D-Pillar Trim Panel - Police


Special Tool(s) / General Equipment

Interior Trim Remover


Removal

NOTE: LH (left hand) shown, RH (right hand) similar.

1. Position the liftgate opening weatherstrip aside.

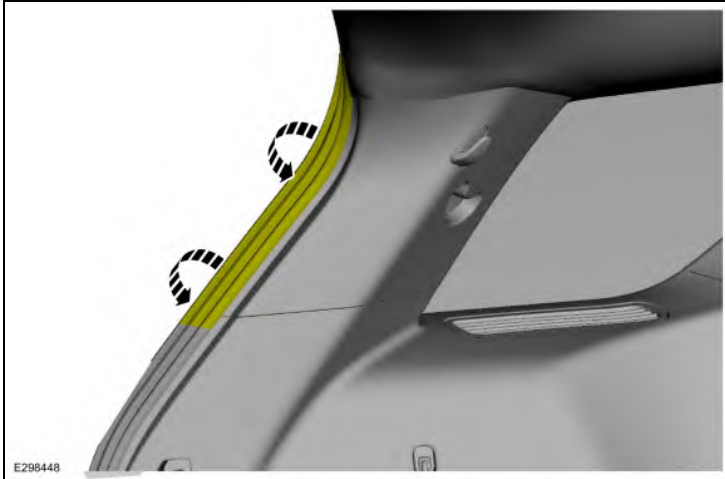


2. Release the D-pillar trim panel clips.
 1. Release the D-pillar trim panel outer lower clip.
Use the General Equipment: Interior Trim Remover
 2. Release the D-pillar trim panel outer upper pin-type clip.
Use the General Equipment: Interior Trim Remover
 3. Release the D-pillar trim panel front lower clips.
Use the General Equipment: Interior Trim Remover

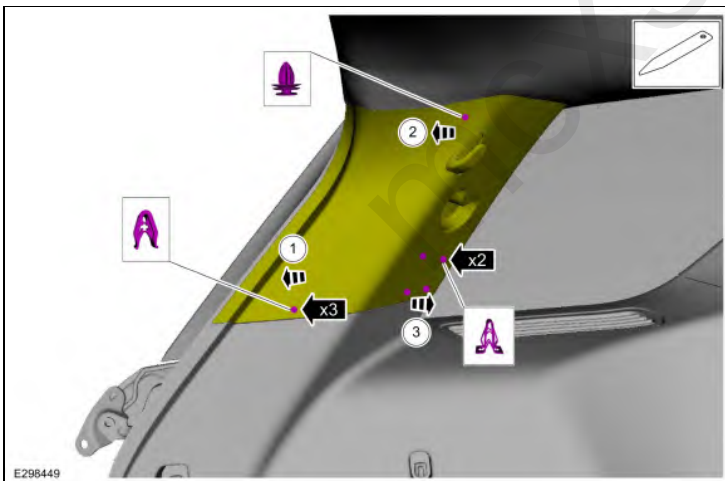


3. **NOTICE:** The D-pillar trim panel must be positioned downward to allow the upper clips to release correctly. Failure to follow this direction may cause damage to the D-pillar trim panel.

Slide the D-pillar trim panel down, aligning the upper clips to the slots in the sheet metal.

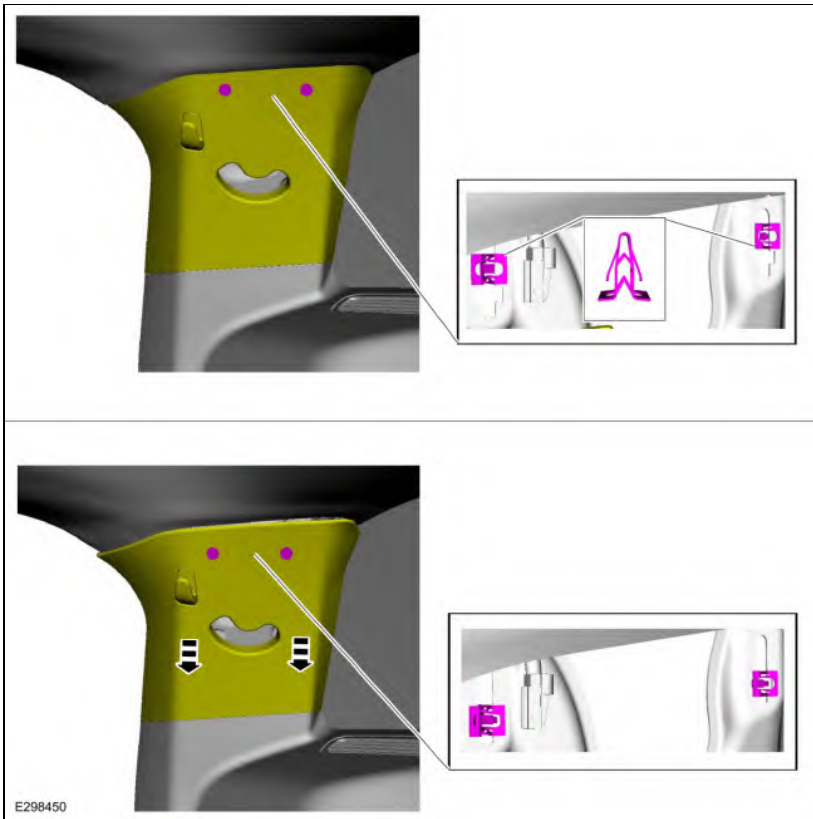

4. Remove the D-Pillar trim panel.

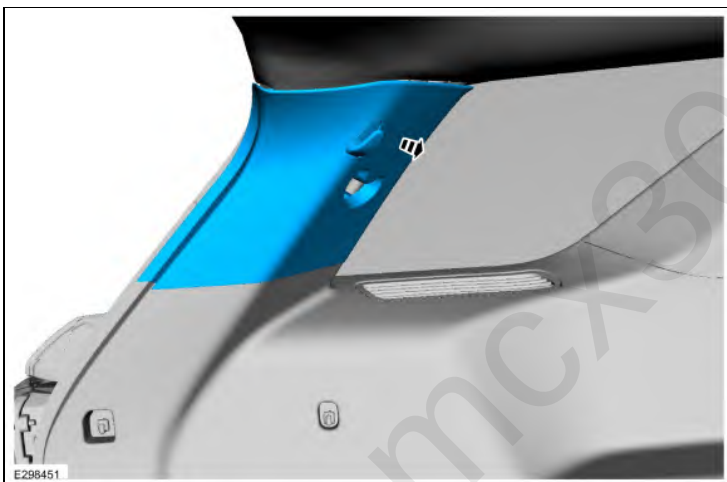

Installation

1. To install, reverse the removal procedure.