


3. Release the tab and position the interior front door cable aside.
4. If equipped.
Disconnect the front door ambient light electrical connector.
5. If equipped.
Disconnect the front door tweeter speaker electrical connector.
6. Disconnect the front door lock control switch electrical connector.
7. If equipped.
Disconnect the front door speaker electrical connector.

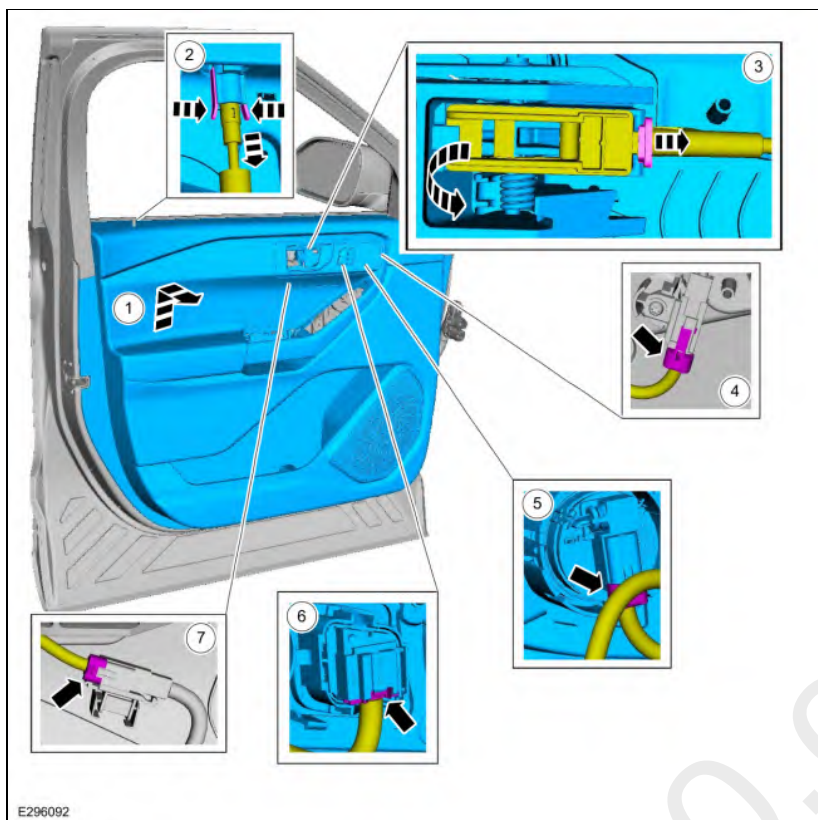

Installation

1. To install, reverse the removal procedure.

Front Scuff Plate Trim Panel

Special Tool(s) / General Equipment

Interior Trim Remover

Removal


NOTE: LH (left hand) shown, RH (right hand) similar.

Left hand side

1. Remove the hood latch release handle.
Refer to: Hood Latch Release Handle (501-14 Handles, Locks, Latches and Entry Systems, Removal and Installation).

All vehicles

2. Remove the front door scuff plate trim panel.
 1. Release the clips.
Use the General Equipment: Interior Trim Remover
 2. If equipped.
Disconnect the front door scuff plate trim panel electrical connector.

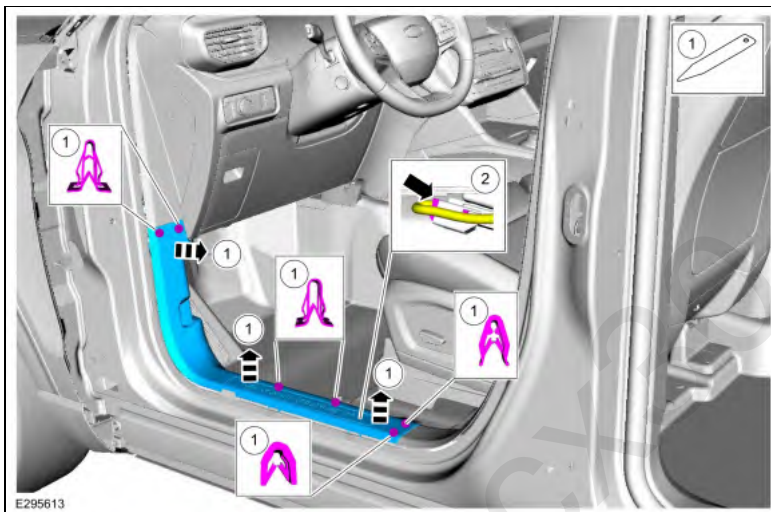


mc.com



Installation

1. To install, reverse the removal procedure.
2. Inspect and position the front door weather strip lip so that it overlaps the top of the front scuff plate trim panel.

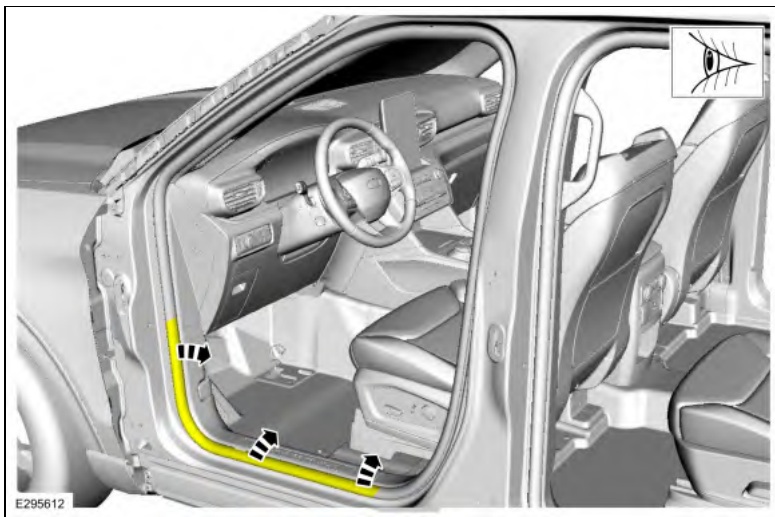

mcx30.com