


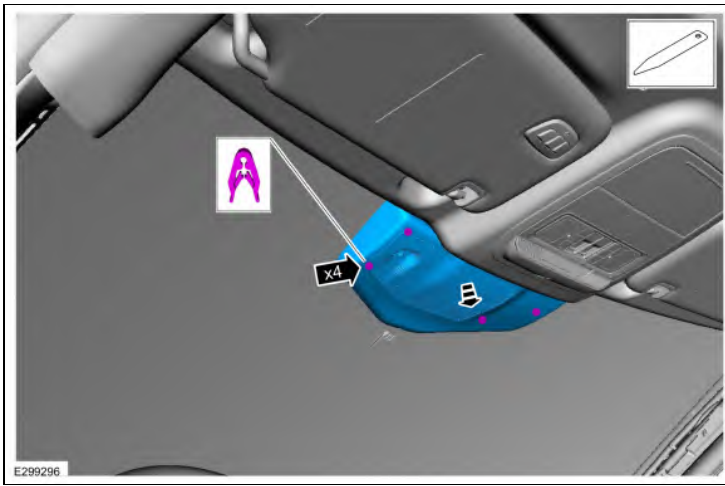


6. **NOTE:** Interior rear view mirror removed for clarity.

If equipped.

Disconnect the headliner wiring harness electrical connectors.

1. Disconnect the humidity and temperature sensor electrical connector.
2. Disconnect the rain sensor electrical connector.
3. Disconnect the front vision camera electrical connector.
4. Disconnect the interior rear view mirror electrical connector.
5. Disconnect the heated windshield grid electrical connector.

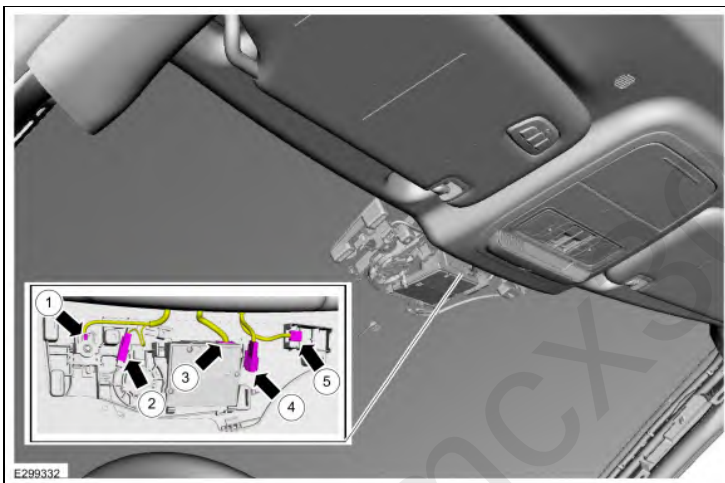


7. **NOTE:** LH (left hand) shown, RH (right hand) similar.

On both sides.


Remove the sun visor.

1. Position the sun visor screw cover aside.
2. Remove the sun visor screw.
3. Rotate the sun visor assembly down.
4. If equipped.
Disconnect the sun visor electrical connector.

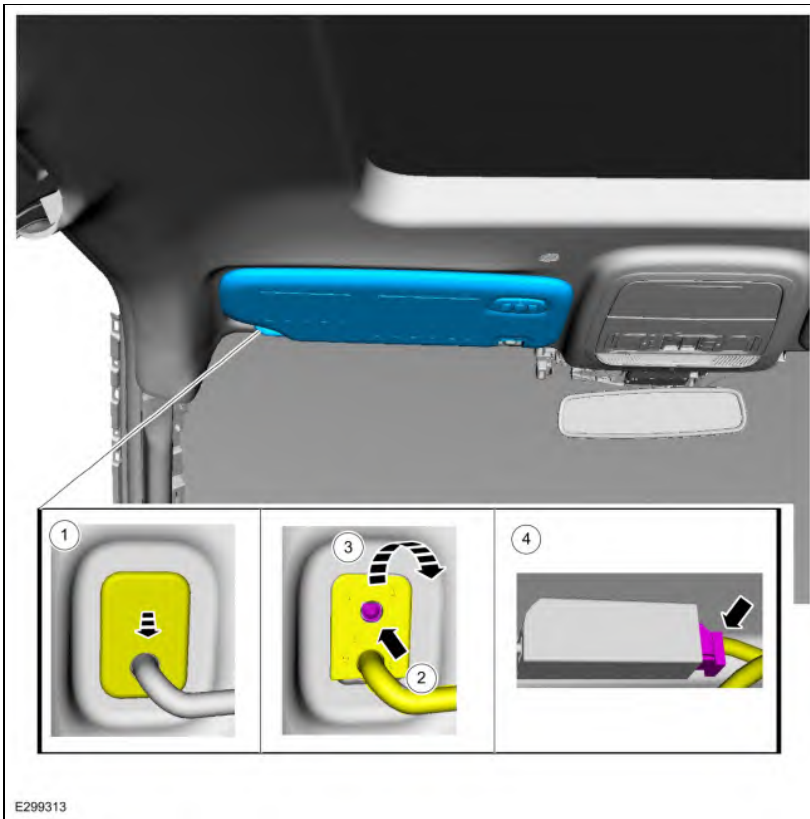


8. **NOTE:** LH (left hand) shown, RH (right hand) similar.

On both sides.
Remove the screw and the sun visor clip.

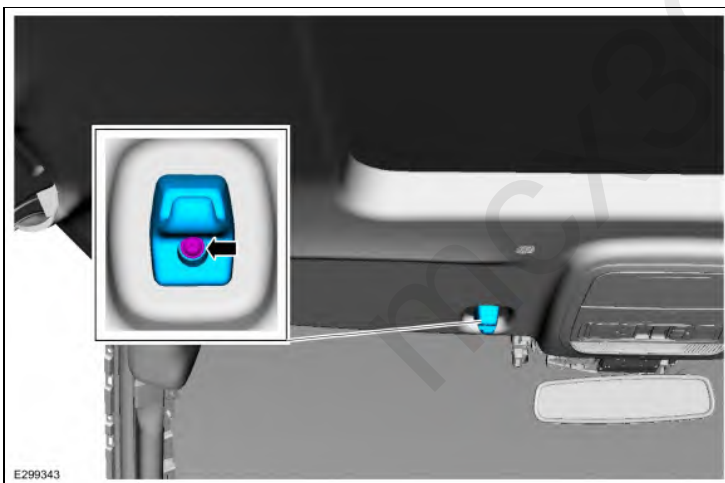

9. On RH side.
Remove the front assist handle.
1. Position the front assist handle down.
 2. Remove the front assist handle retainers.
Use the General Equipment: Pick Hook

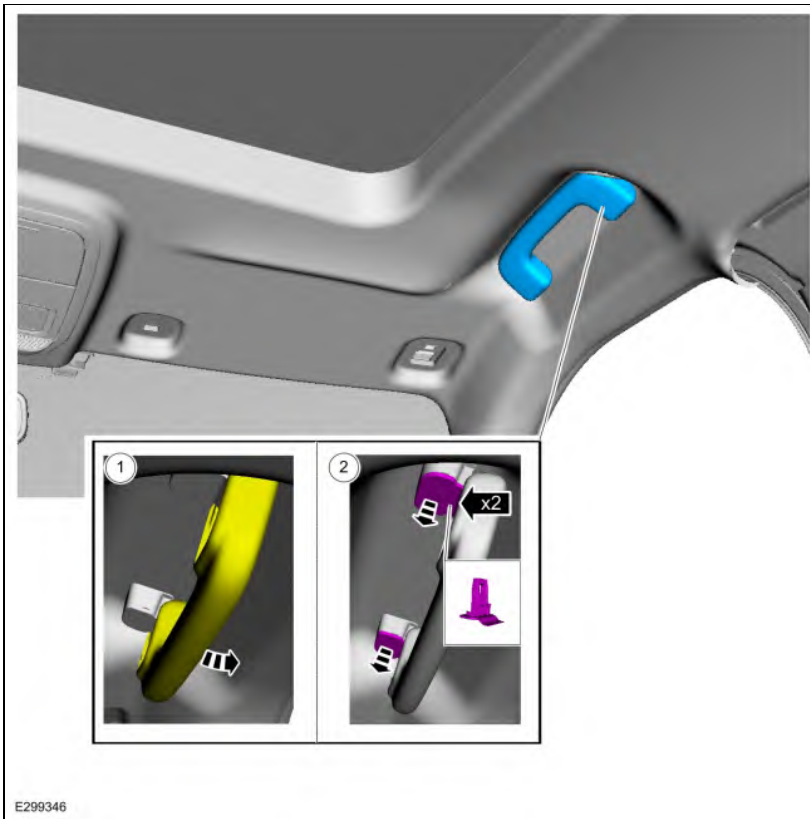

10. **NOTE:** LH (left hand) shown, RH (right hand) similar.

On both sides.

Remove the rear garment hook.


1. Position the rear garment hook screw cover aside.
Use the General Equipment: Pick Hook
2. Remove the rear garment hook screw.




11. On RH side.

Disconnect the rear wiper washer hose coupling.


Refer to: Washer Hose Coupling (501-16 Wipers and Washers, General Procedures).

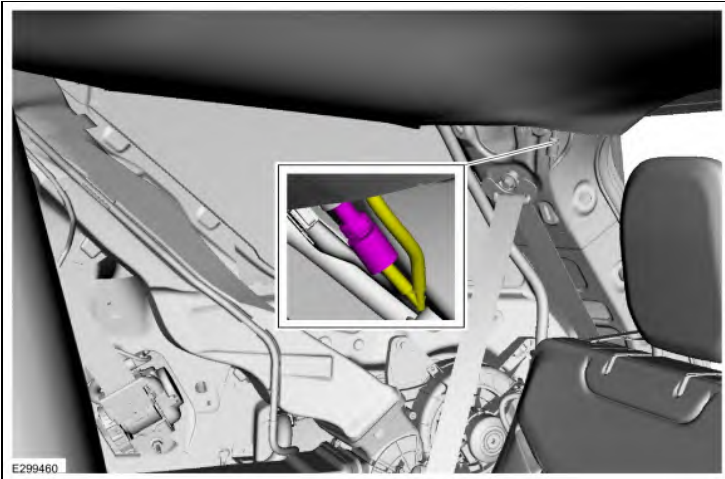

12. On both sides.
Position the front seat backrest in the fully reclined position.

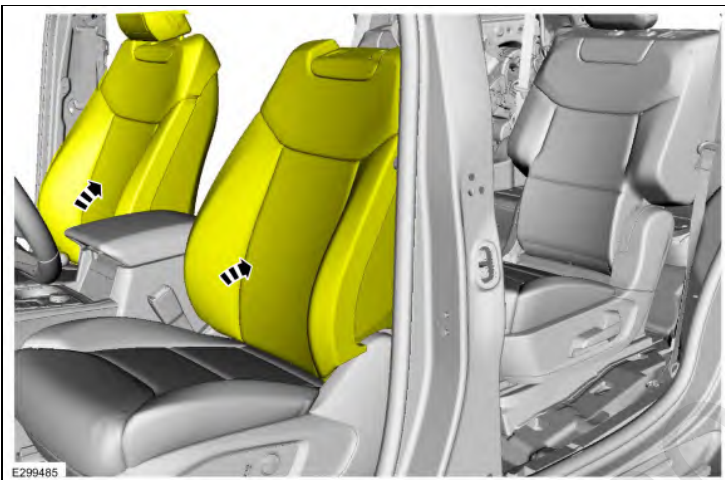



13. On both sides.
Position the second row seat backrest in the fold flat position.

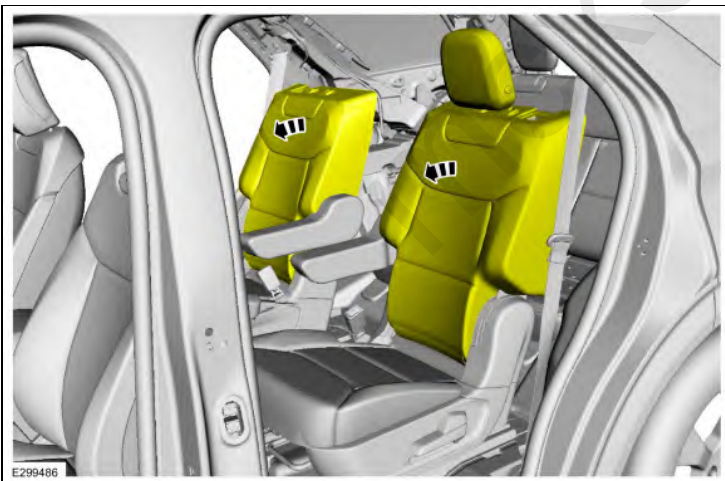

14. If equipped.
Position the third row seat backrests in the fold flat position.



15. **NOTE:** Seats removed for clarity.
Release the rear clips and lower the headliner.
Use the General Equipment: Interior Trim Remover

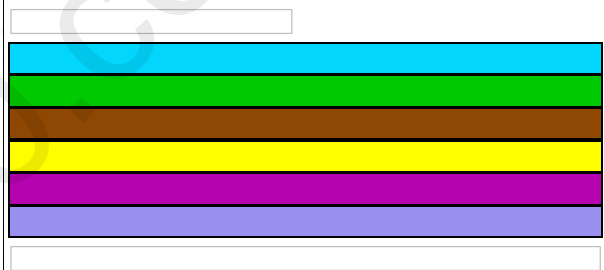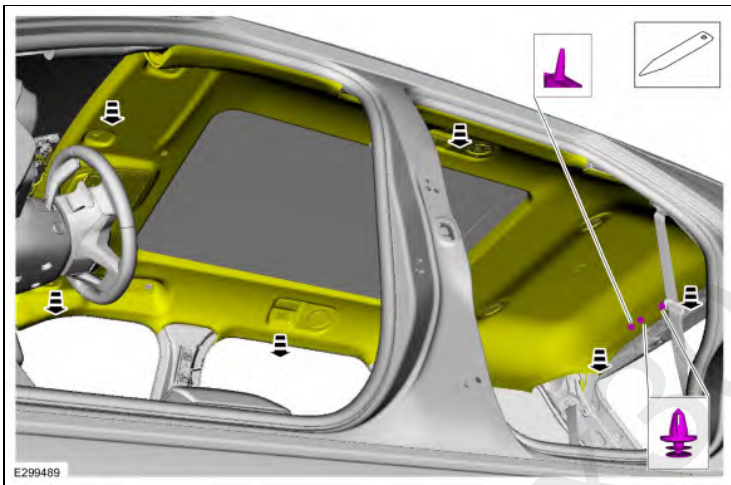


Liftgate Trim Panel

Special Tool(s) / General Equipment


Interior Trim Remover

Removal

1. Release the clips and remove the liftgate center upper trim panel.
Use the General Equipment: Interior Trim Remover

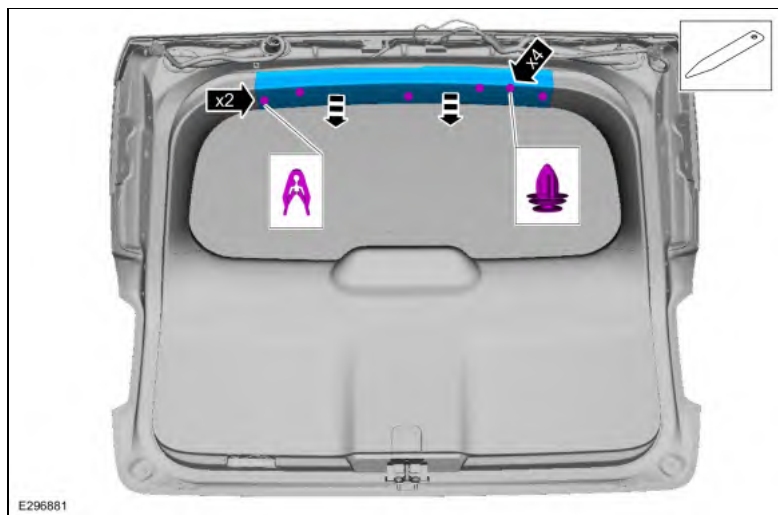


2. Release the clips in the order shown from the inside edge and remove the liftgate RH upper trim panel.
Use the General Equipment: Interior Trim Remover

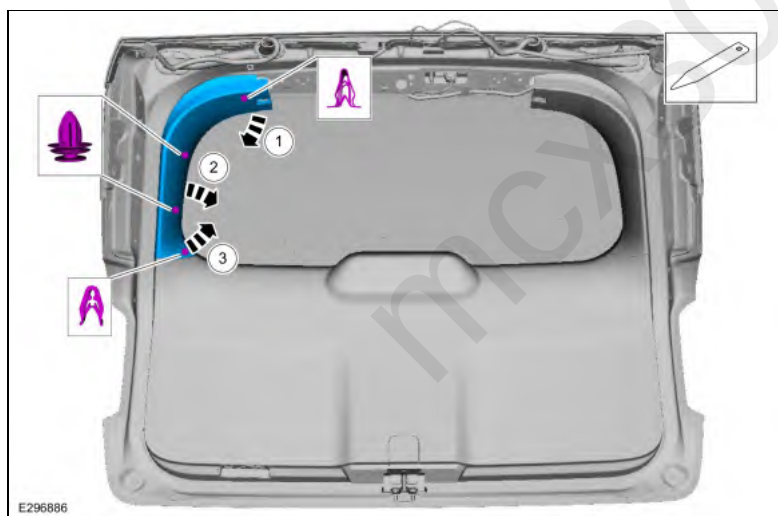

3. Release the clips in the order shown from the inside edge and remove the liftgate LH upper trim panel.
Use the General Equipment: Interior Trim Remover



4. Remove the liftgate lower trim panel.
1. Release the upper clips.
Use the General Equipment: Interior Trim Remover
 2. Release the middle clips.
Use the General Equipment: Interior Trim Remover
 3. Release the lower clips.
Use the General Equipment: Interior Trim Remover
 4. If equipped.
Disconnect the liftgate door lock control switch electrical connector.

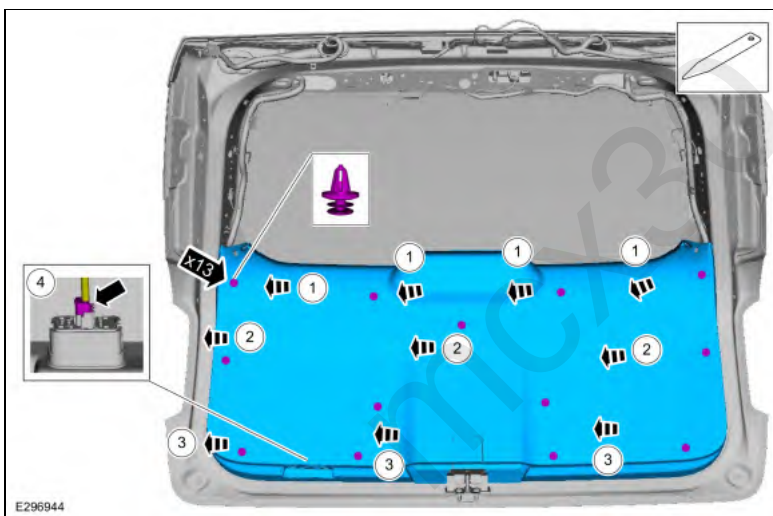

Installation

1. **NOTE:** Transfer parts as necessary.
To install, reverse the removal procedure.