



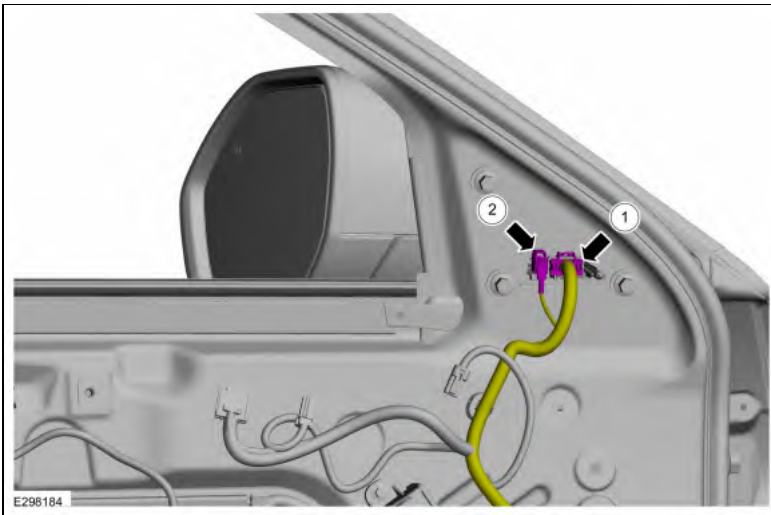

4. Remove the bolts and the exterior mirror assembly.

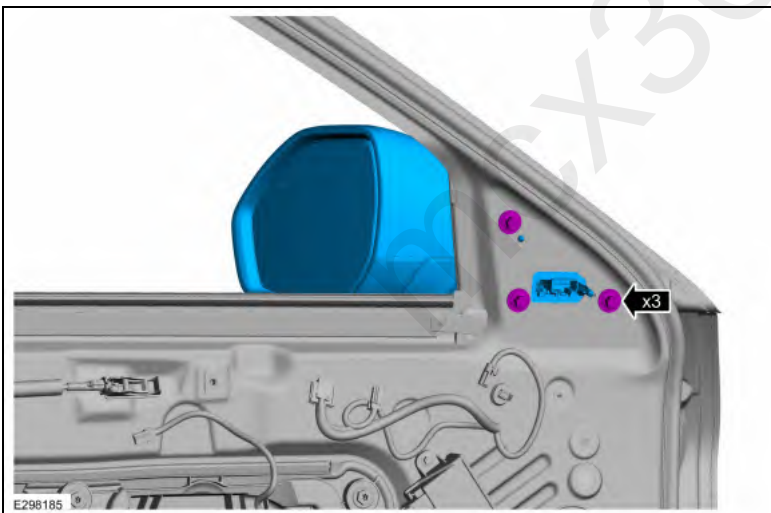

Exterior mirror glass

WARNING: Place a shop towel between the hands and the exterior mirror glass for protection in case of glass breakage during mirror service. Failure to follow this instruction may result in serious personal injury.

NOTICE: Position the screwdriver using the service slot in the mirror glass backing plate to remove the mirror glass. Prying on the backing plate in other locations may damage the mirror glass.

5.

Remove the exterior mirror glass.

1. Position the exterior mirror glass fully in and up.
2. Using a flat blade screwdriver to release the tabs starting at the lower outboard side of mirror and continuing around the mirror until all the tabs are released.
Use the General Equipment: Flat Headed Screw Driver

3. **NOTE:** The number and location of the electrical connectors will vary based on mirror option content.

Disconnect the exterior mirror glass electrical connectors.