


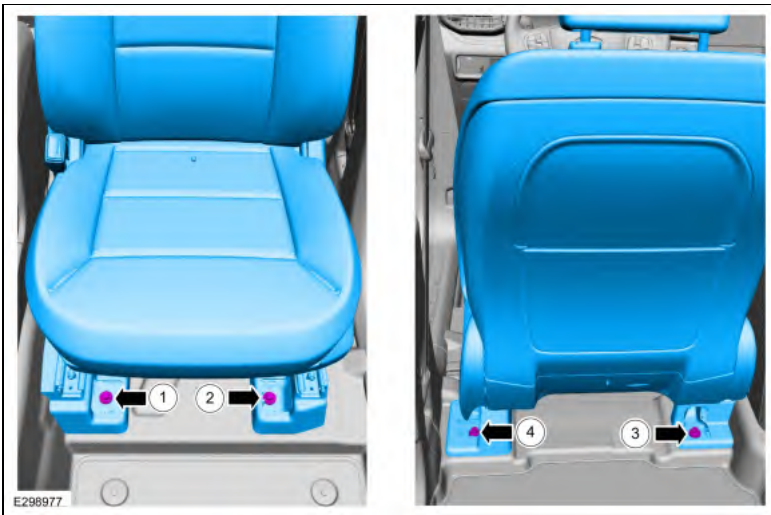

3. Repower the SRS.

Refer to: Supplemental Restraint System (SRS) Repowering (501-20B Supplemental Restraint System, General Procedures).

mcx30.com

Front Seat Backrest Blower Motor


Special Tool(s) / General Equipment

Interior Trim Remover

Removal


NOTE: Driver seat shown, passenger seat similar.

1. Remove the front seat.
Refer to: Front Seat (501-10A Front Seats, Removal and Installation).
2. Release the front seat backrest panel straps.
 1. If equipped with heated seat.
Detach the retainer and position the wiring harness aside.
 2. Release the backrest panel straps.

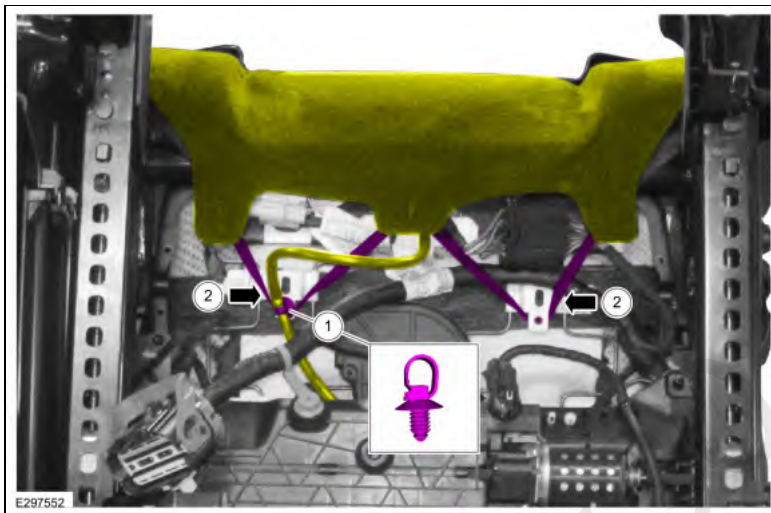


3. **NOTE:** The back panel finish can be easily marred or torn, use care when working around it.

On both sides, grasp the back panel where it meets the module trim, pull to release the clips and separate the back panel from the module trim.

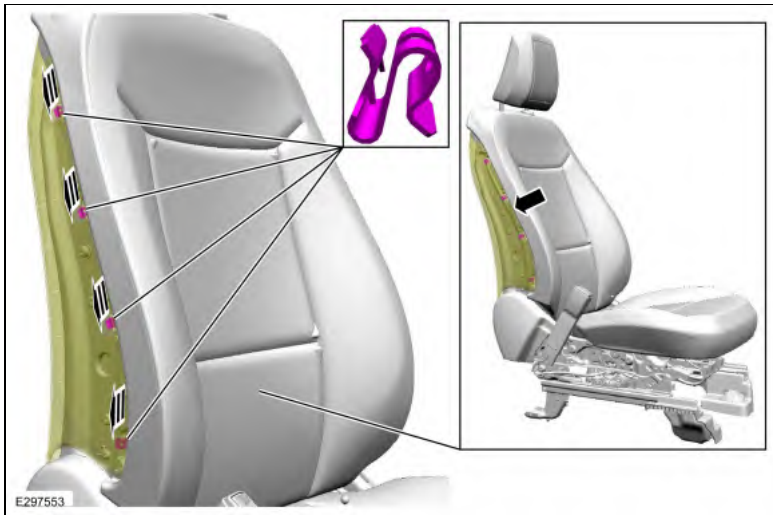

4. Pull out at the bottom, release the clips and detach the back panel from the backrest frame.
Use the General Equipment: Interior Trim Remover

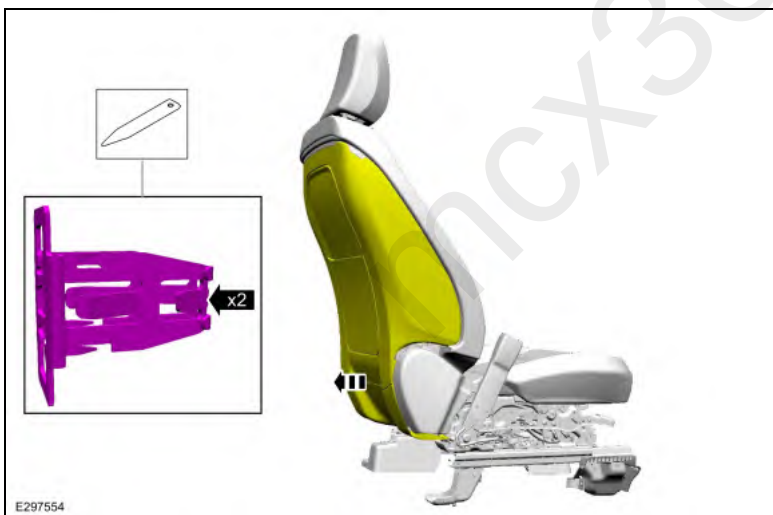

5. Pull down and out and remove the back panel.