






7. Remove the screws and the front seat valance.

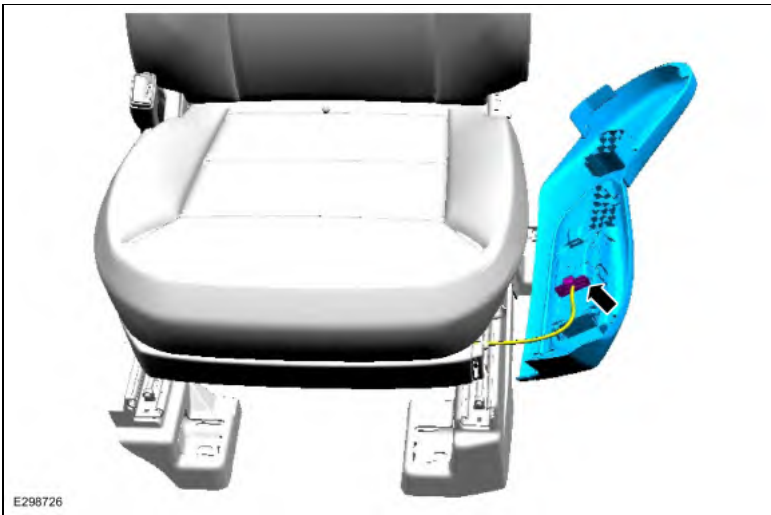


8. Release the front seat backrest panel straps.
1. If equipped with heated seat.
Detach the retainer and position the wiring harness aside.
 2. Release the backrest panel straps.

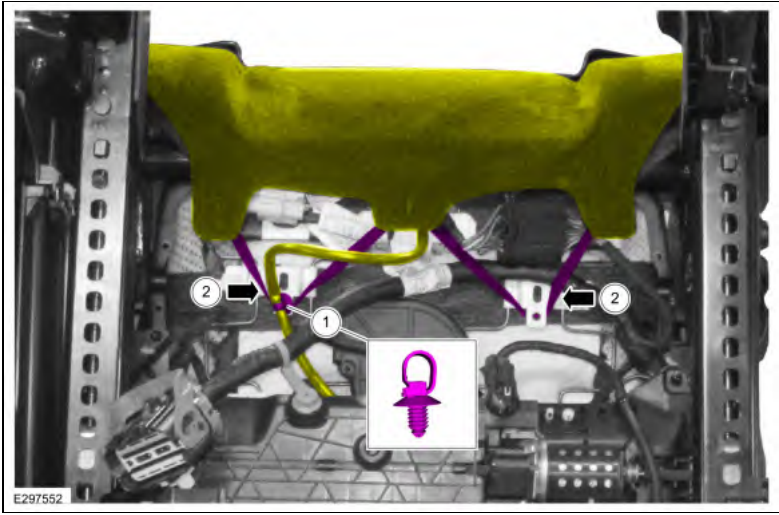



9. Detach the front seat electrical connectors and wiring harness retainers and position the wiring harnesses aside.

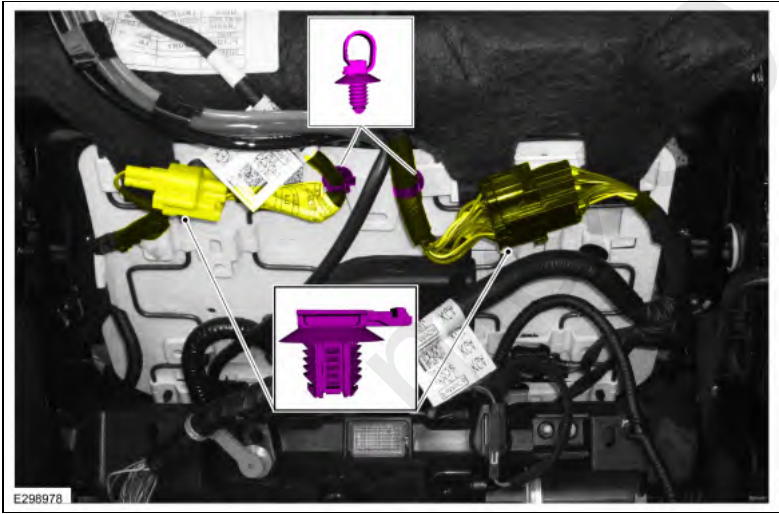



10. Detach the front seat cushion cover rear J-clips and position the cushion cover aside.

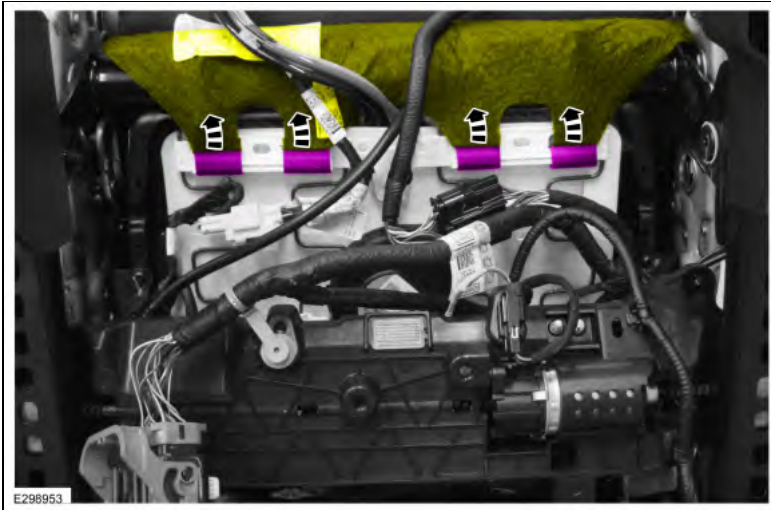

 11. If equipped with heated seat.
Disconnect the front seat cushion heater mat electrical connector.

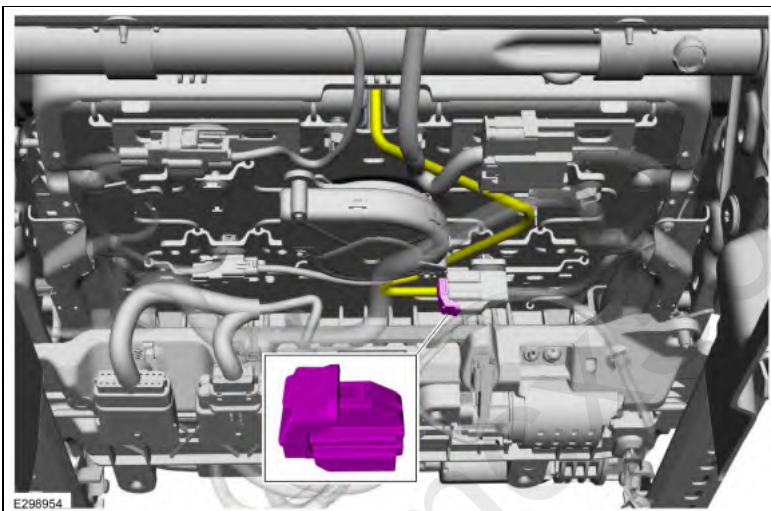

 
12. Remove the front seat cushion cover and foam as an assembly.
1. Detach the cushion cover J-clip.
 2. On both sides.
Detach the cushion cover J-clips.

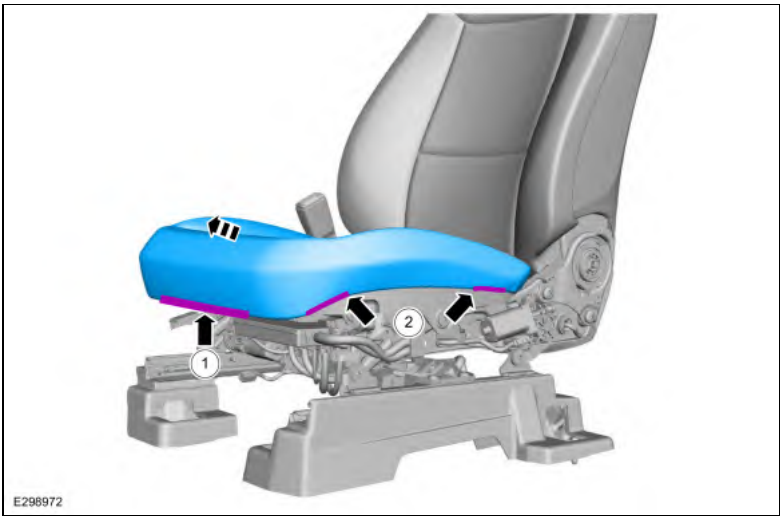

All seats

13. **NOTE:** This step is only necessary when installing a new component.

 Position the rear portion of the seat cushion cover from the foam.



14. **NOTE:** This step is only necessary when installing a new component.

NOTE: Base seat shown, all others similar.


Remove the seat cushion cover.

1. Invert the seat cushion cover.
2. **NOTICE:** Use care when separating the seat cushion trim cover from the hook-and-loop strips or the hook-and-loop strips may be torn from the seat cushion foam pad.

Release hook-and-loop strips.

3. **NOTICE:** Use care when separating the seat cushion from the hook-and-arrow or the hook may be torn from the seat cushion foam pad.

Release the hook and arrows.

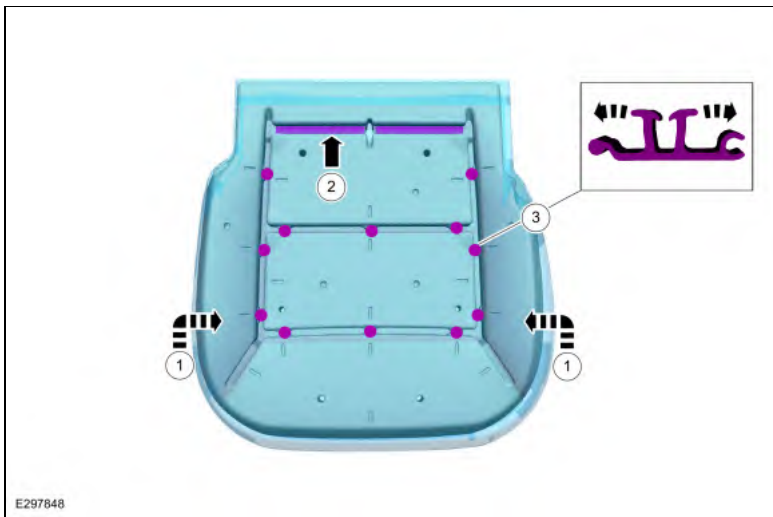

Installation

- 1. To install, reverse the removal procedure.

mcx30.com

Front Seat Power Lumbar Assembly - Vehicles Without: Multi-Contour Seats


Special Tool(s) / General Equipment

Interior Trim Remover

Removal


NOTE: Driver seat shown, passenger seat similar.

1. Remove the front seat.
Refer to: Front Seat (501-10A Front Seats, Removal and Installation).
2. Release the front seat backrest panel straps.
 1. If equipped with heated seat.
Detach the retainer and position the wiring harness aside.
 2. Release the backrest panel straps.

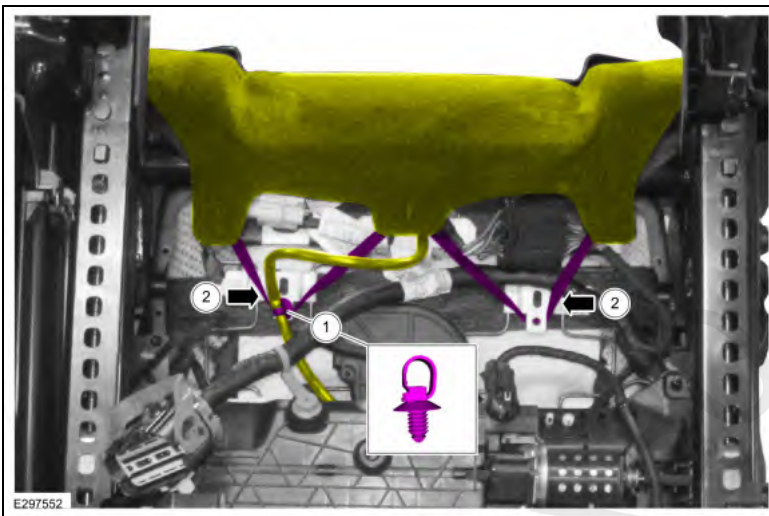


3. **NOTE:** The back panel finish can be easily marred or torn, use care when working around it.

On both sides, grasp the back panel where it meets the module trim, pull to release the clips and separate the back panel from the module trim.

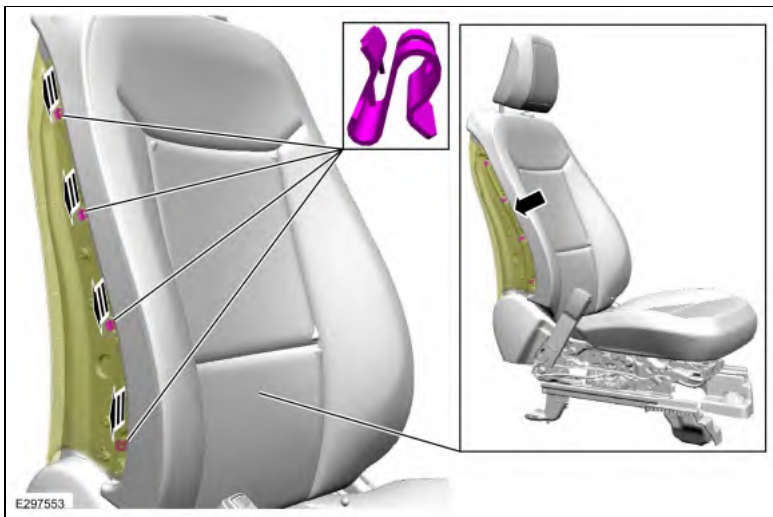

4. Pull out at the bottom, release the clips and detach the back panel from the backrest frame.
Use the General Equipment: Interior Trim Remover

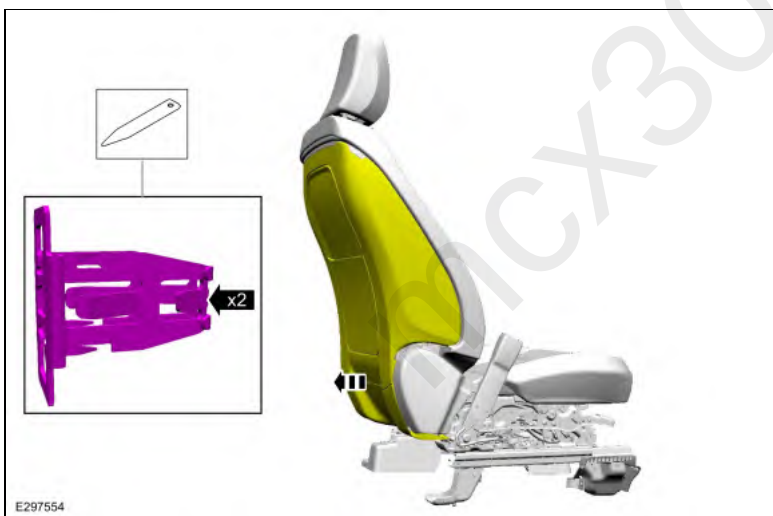

5. Pull down and out and remove the back panel.