






6. Release the tabs and remove the second row center seat rear bolt covers.
Use the General Equipment: Interior Trim Remover

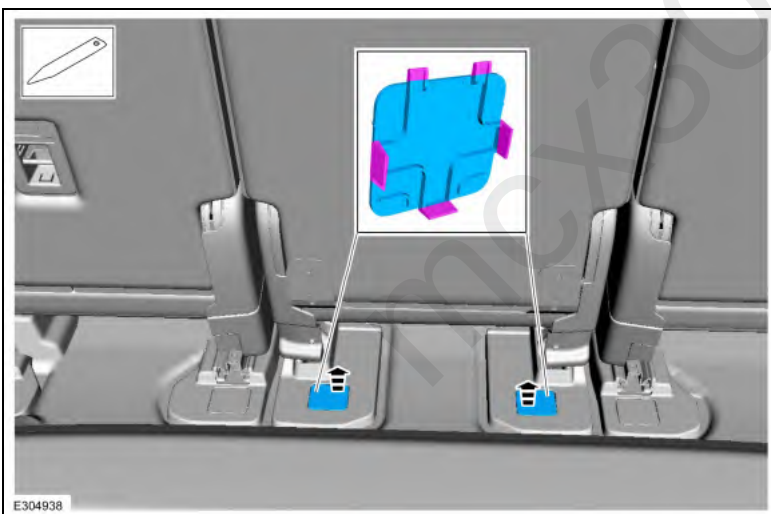

7. Remove the second row center seat rear bolts.
Torque: 35 lb.ft (48 Nm)

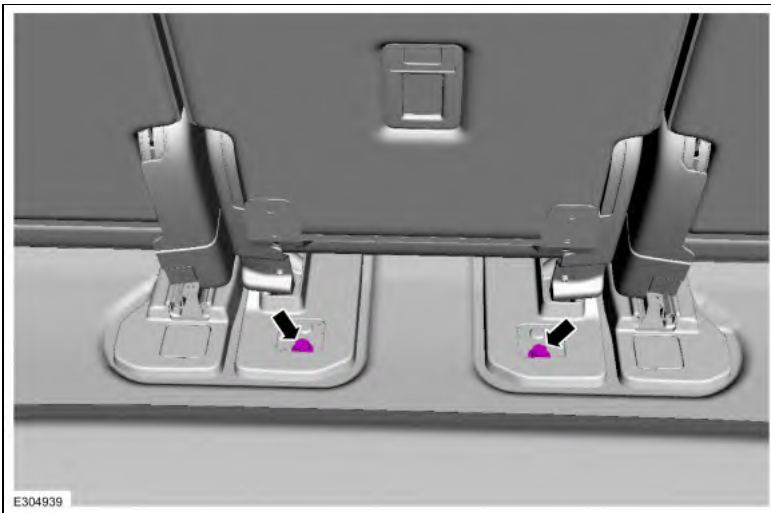

8. Remove the second row center seat.

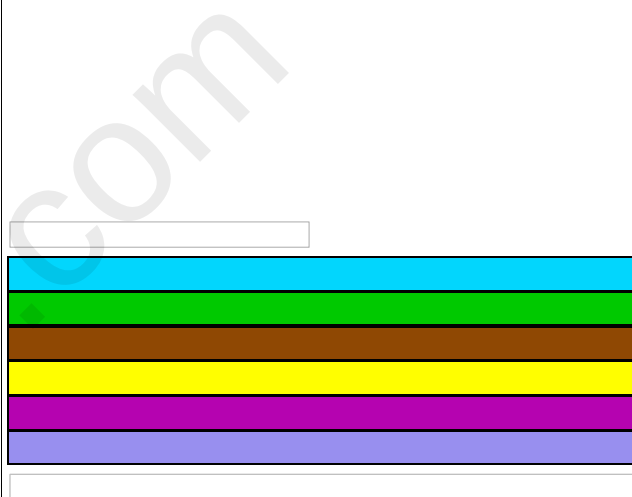

Installation


1. To install, reverse the removal procedure.

Second Row Center Seat - Police


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Release the pin-type retainers and position the second row center seat cover upward.

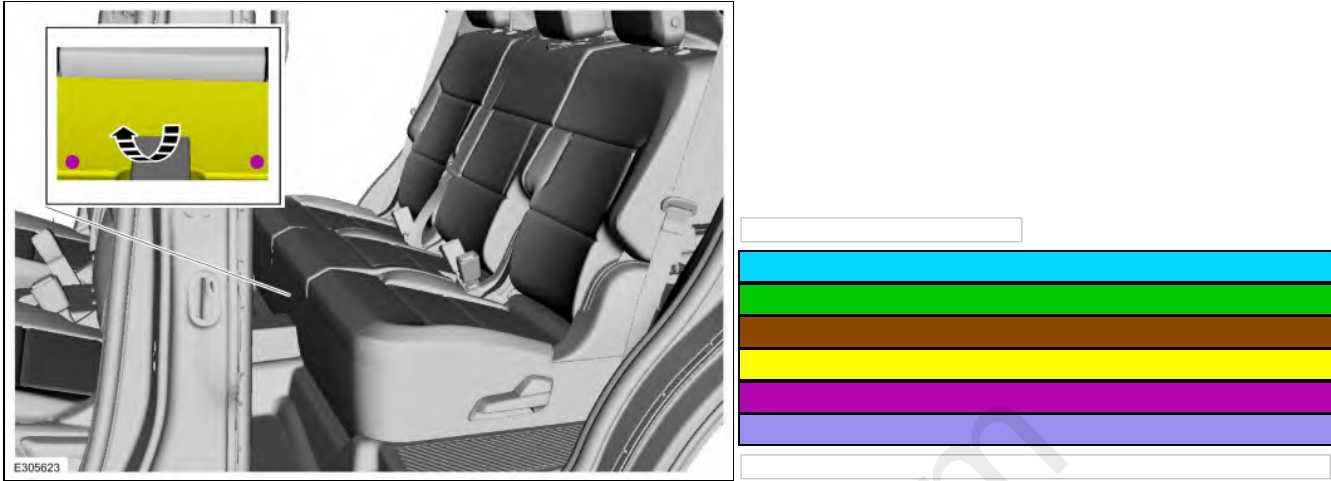


- 2.
1. Disconnect the second row center seat electrical connector.
2. Remove the second row center seat nuts.
- Torque: 33 lb.ft (45 Nm)

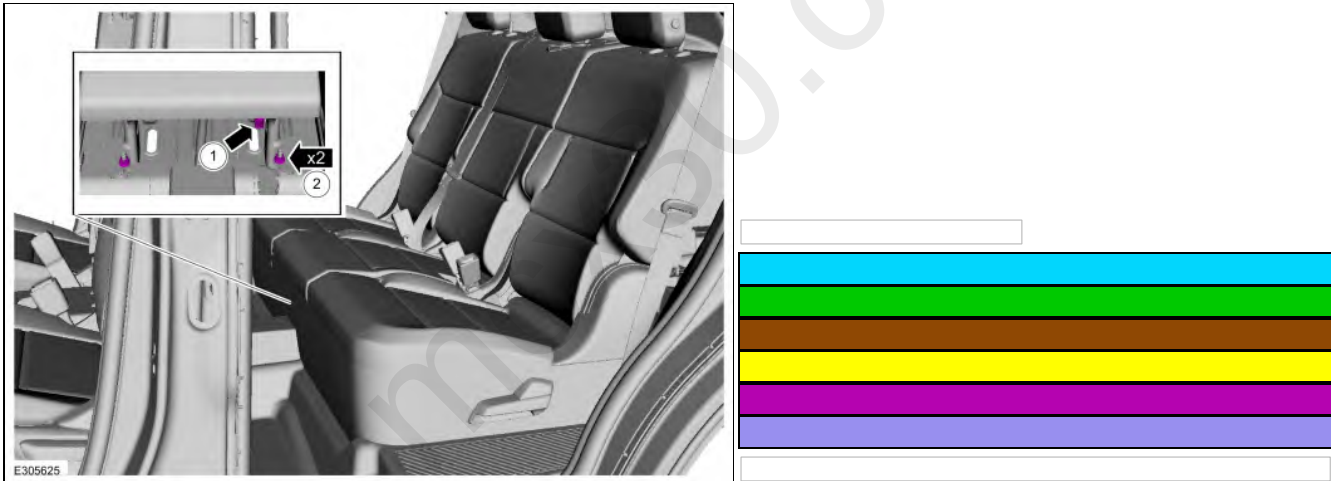

3. Remove the rear loadspace floor covering.



4. Remove the front loadspace floor covering.
1. Remove the front loadspace floor covering bolts.
 2. Lift upward and outward and remove the front loadspace floor covering.

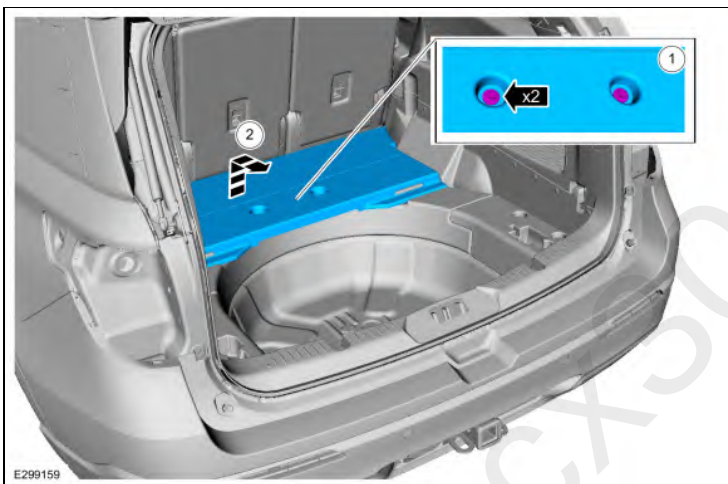

5. **NOTE:** *RH (right hand) shown, LH (left hand) similar.*

On both sides.
Remove the bolts and loadspace floor side trim panel.