




6. Remove the loadspace floor rear trim panel.
1. Remove the loadspace floor rear trim panel bolts.
 2. Disconnect the lighting and siren control module electrical connectors.
 3. Disconnect the body harness electrical connectors.

mcx30.com

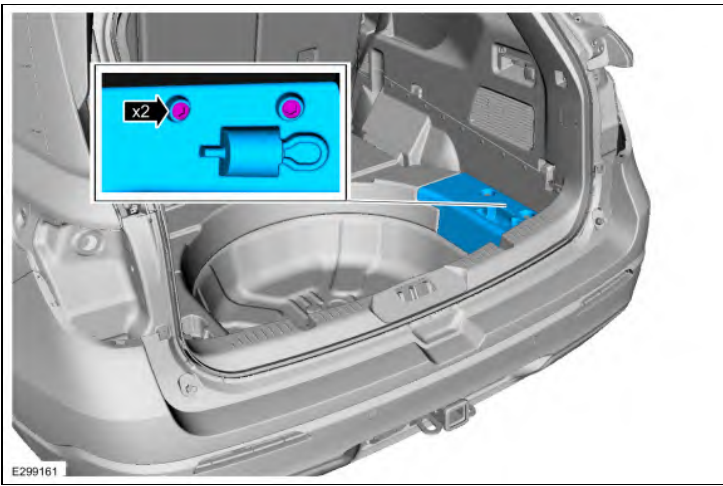

7. Remove the second row center seat rear bolts.
Torque: 33 lb.ft (45 Nm)

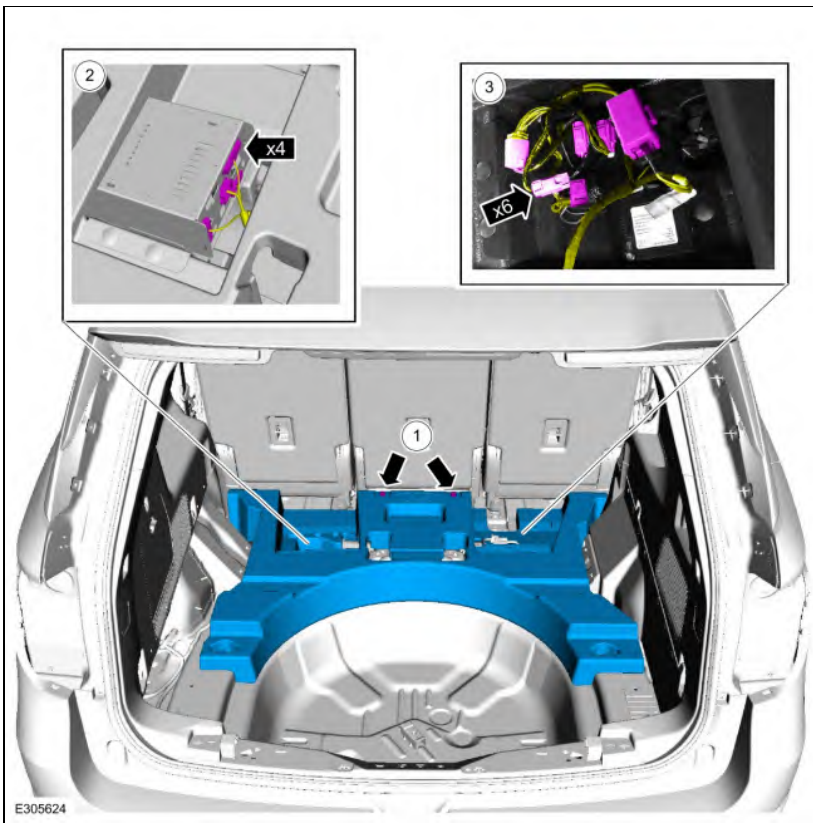

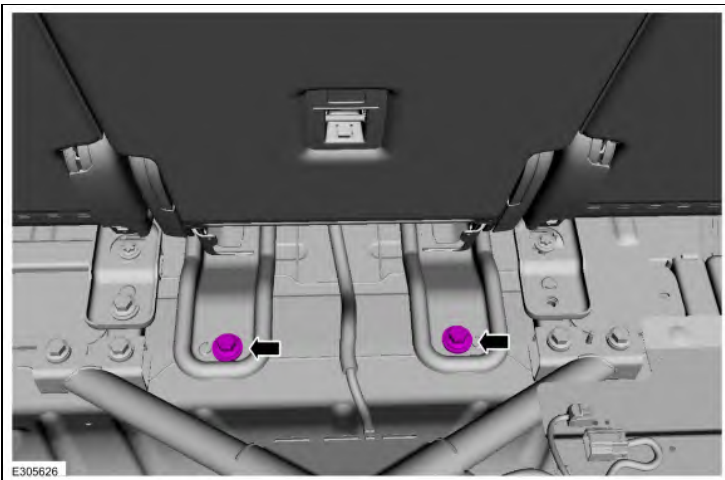

8. Remove the second row center seat.



Installation

1. To install, reverse the removal procedure.

Second Row Center Seat Backrest Cover

Special Tool(s) / General Equipment

Interior Trim Remover

Removal


NOTE: Removal steps in this procedure may contain installation details.

NOTE: Base vehicle shown, police similar.


1. Remove the second row center seat.
Refer to: Second Row Center Seat (501-10B Second Row Seats, Removal and Installation).
Refer to: Second Row Center Seat - Police (501-10B Second Row Seats, Removal and Installation).
2. Remove the bolt and position the second row center seatbelt anchor aside.
Torque: 30 lb.ft (40 Nm)



3. Remove the second row center seatbelt guide bezel.
 1. Remove the cover.
 2. Remove the screws.
 3. Release the bezel guide pins.
 4. Route the seatbelt through the bezel.

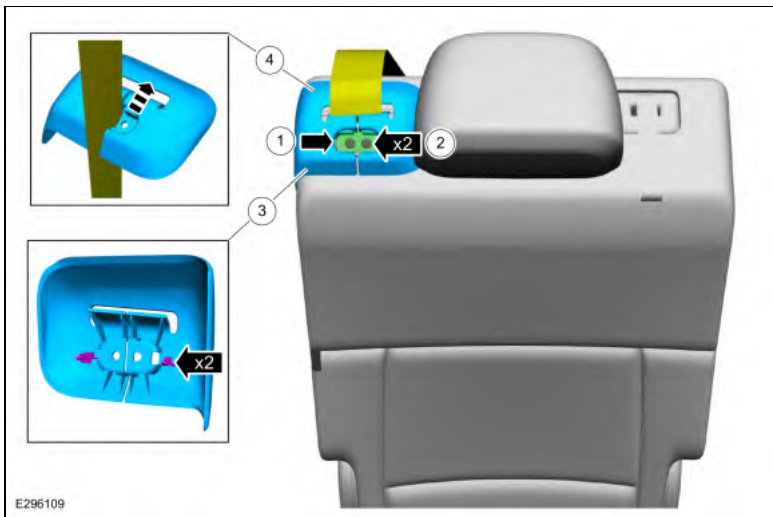

4. Remove the second row center seat head restraint guide sleeves.
Refer to: Second Row Seat Head Restraint Guide Sleeve (501-10B Second Row Seats, Removal and Installation).
5. Release the retainers and remove the manual fold release strap bezel.

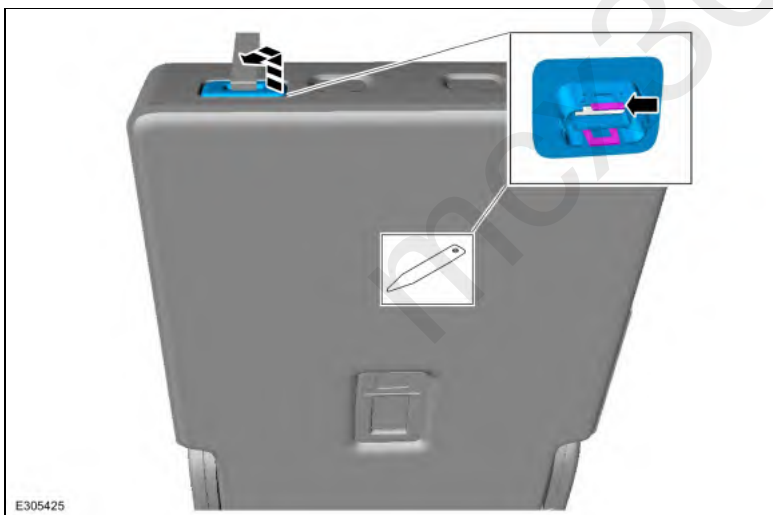

6. Lift the second row center seat backrest cover.
 1. Remove the child safety seat tether anchor bezel.
Use the General Equipment: Interior Trim Remover
 2. Release the J-clip.
 3. Unzip the backrest cover.
 4. Lift the backrest cover.