


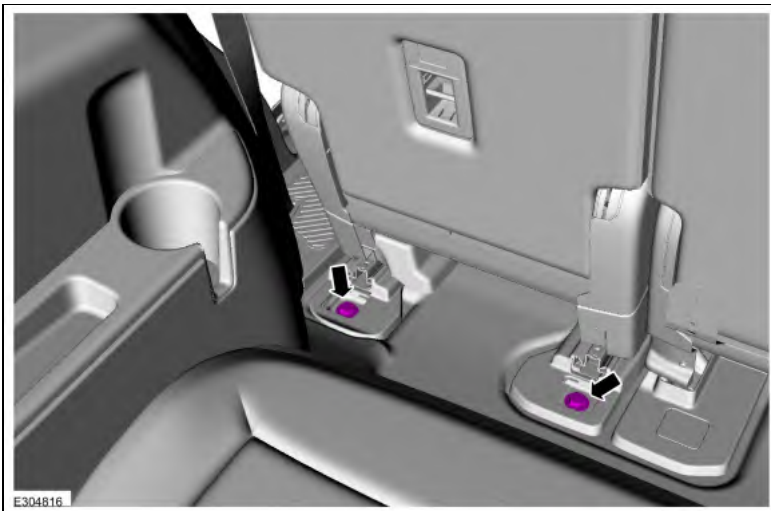

7. Remove the second row seat.



Installation

1. To install, reverse the removal procedure.


Second Row Seat - Police

Removal


NOTE: LH (left hand) shown, RH (ight hand) similar.

NOTE: Removal steps in this procedure may contain installation details.

1. Release the pin-type retainers and position the front of the second row seat cover upward.

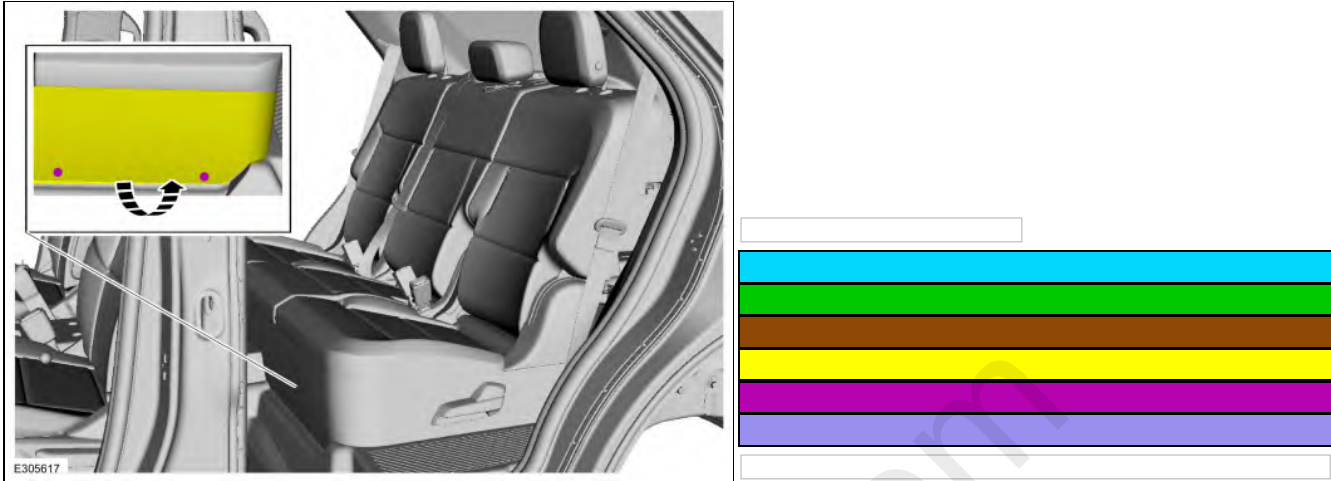


- 2.
1. Disconnect the second row seat wire harness electrical connector.
2. Remove the second row seat front nuts.
- Torque: 33 lb.ft (45 Nm)

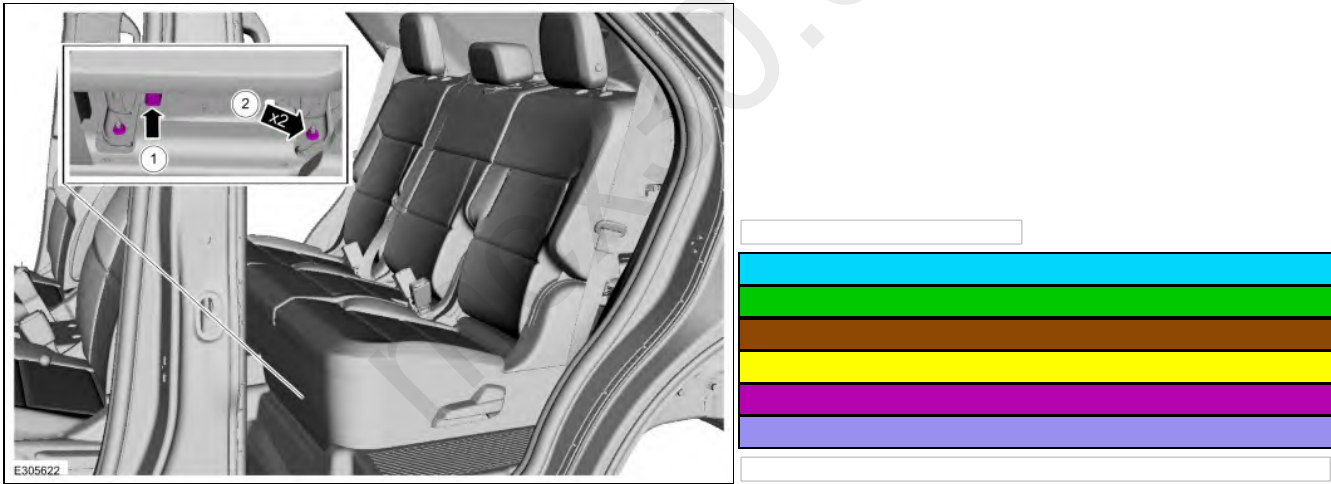

3. Remove the rear loadspace floor covering.



4. Remove the front loadspace floor covering.
1. Remove the front loadspace floor covering bolts.
 2. Lift upward and outward and remove the front loadspace floor covering.

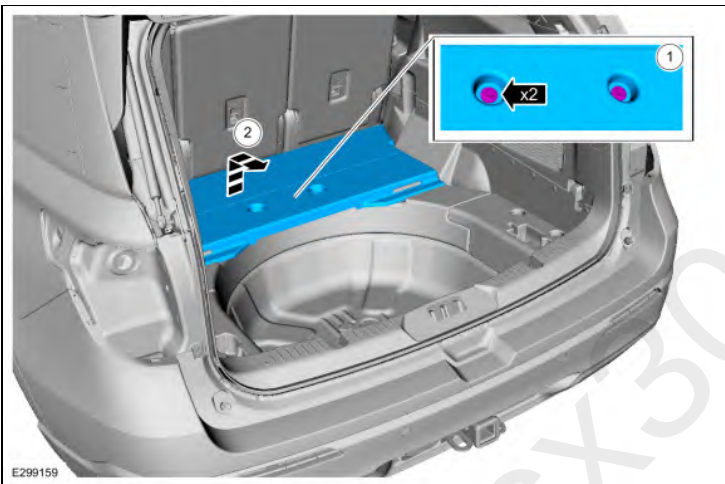

5. **NOTE:** RH (right hand) shown, LH (left hand) similar.

On both sides.
Remove the bolts and loadspace floor side trim panel.