


Second Row Seat Backrest Blower Motor

Removal


NOTE: Removal steps in this procedure may contain installation details.

NOTE: LH (left hand) shown, RH (right hand) similar.


1. Remove the second row single seat backrest cover.
Refer to: Second Row Single Seat Backrest Cover - Vehicles With: Second Row Captain Chairs (501-10B Second Row Seats, Removal and Installation).
2. Disconnect the second row seat backrest blower motor electrical connector.

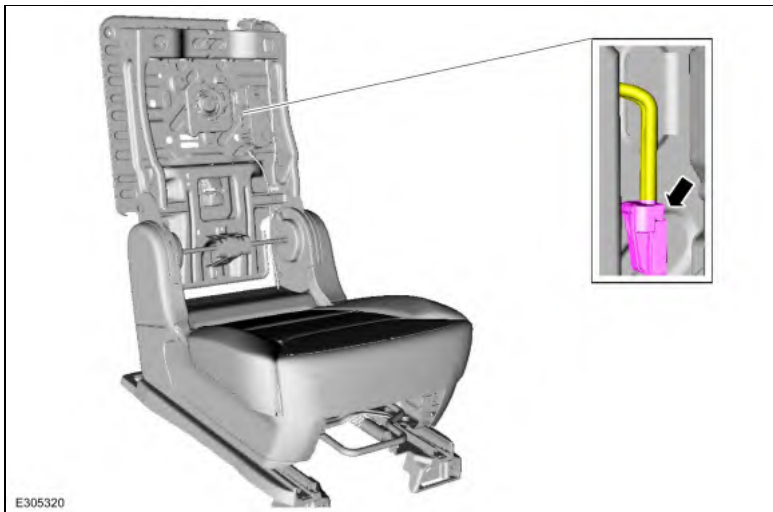

3. Remove the second row seat backrest blower motor screws.
Torque: 71 lb.in (8 Nm)

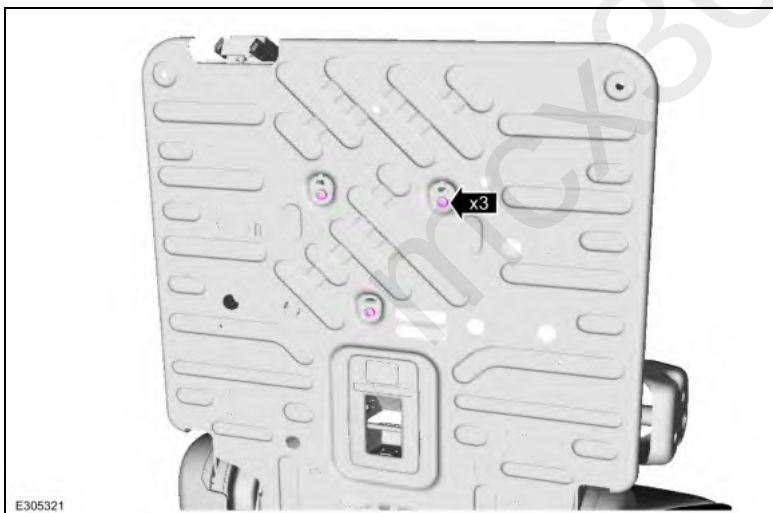

4. Remove the second row seat backrest blower motor.
 1. Release the second row seat backrest blower motor clips.
 2. Remove the second row seat backrest blower motor.

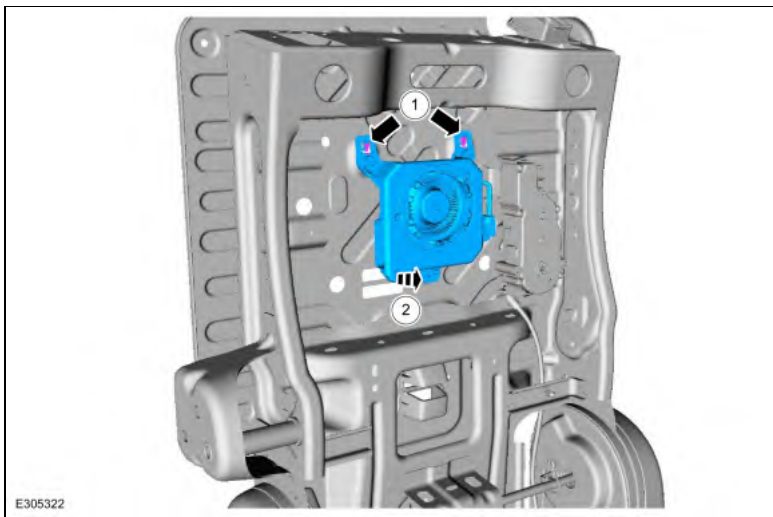

Installation

- 1. To install, reverse the removal procedure.

mcx30.com