


Driver Door Window Control Switch

Special Tool(s) / General Equipment

Interior Trim Remover

Removal


1. Remove the driver door window control switch and bezel as an assembly.
 1. Release the clips.
Use the General Equipment: Interior Trim Remover
 2. Disconnect the electrical connector and remove the driver door window control switch and bezel as an assembly.

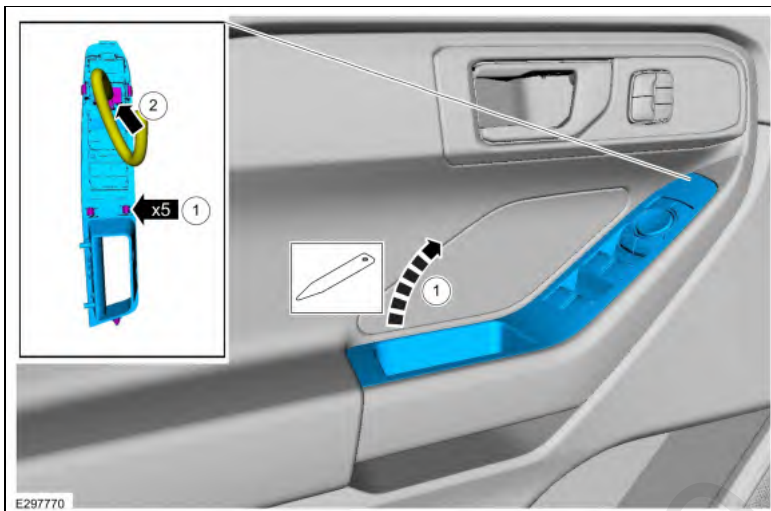

2. **NOTE:** This step is only necessary when installing a new component.

Remove the driver door window control switch.

1. Remove the screws from driver door window control switch.
2. Remove the driver door window control switch from the bezel assembly.

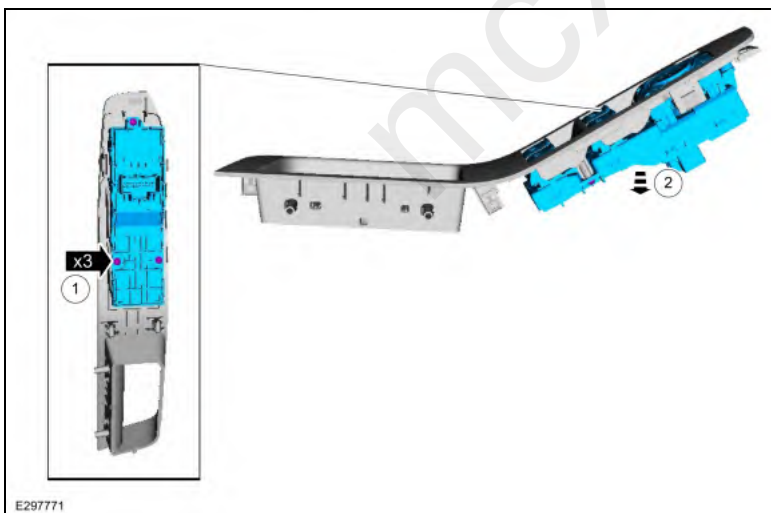

Installation

1. To install, reverse the removal procedure.