


Front Door Glass Run and Bracket

Removal

NOTE: LH (left-hand) side shown, RH (right-hand) side similar.

1. Remove the exterior front door handle reinforcement.
Refer to: Exterior Front Door Handle Reinforcement (501-14 Handles, Locks, Latches and Entry Systems, Removal and Installation).
2. Remove the front door glass run and bracket.
 1. Release the exterior front door handle reinforcement handle cable from the routing tabs.
 2. Disconnect and remove the front door latch harness electrical connector.
 3. Release the front door glass run and bracket retaining tabs.
 4. Remove the front door glass run and bracket from the front door latch.

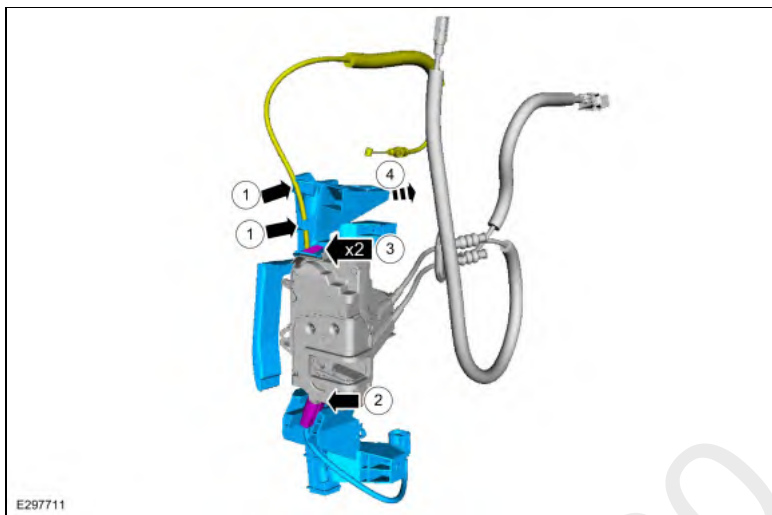

Installation

1. To install, reverse the removal procedure.
2. Carry out the power door window initialization.
Refer to: Power Door Window Initialization (501-11 Glass, Frames and Mechanisms, General Procedures).


Front Door Glass Top Run

Removal

NOTE: LH (left-hand) side shown, RH (right-hand) side similar.

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the front door window glass.
Refer to: Front Door Window Glass (501-11 Glass, Frames and Mechanisms, Removal and Installation).
2.
 - Remove the front door outer belt moulding.
 1. Remove the front door outer belt moulding screw.
Torque: 12 lb.in (1.3 Nm)
 2. Remove the front door outer belt moulding.

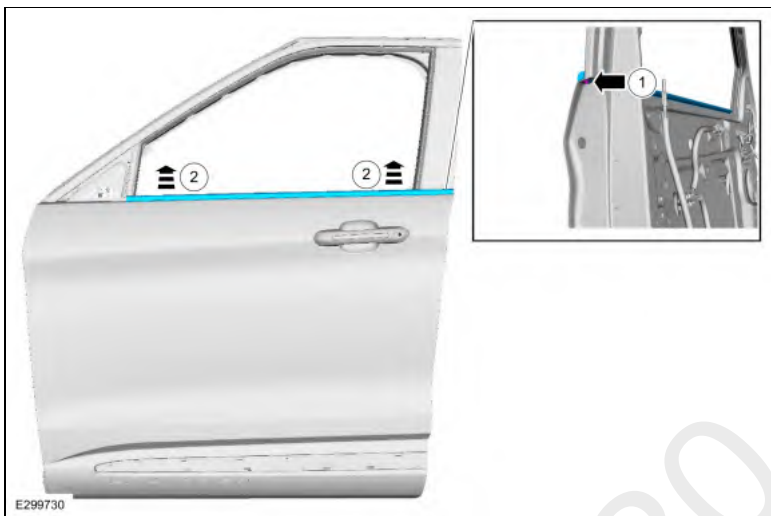

3.
 - Remove the front door glass top run.
 1. Remove the front door glass top run screw.
Torque: 12 lb.in (1.3 Nm)
 2. Remove the front door glass top run screw.
Torque: 12 lb.in (1.3 Nm)
 3. Release the front door glass top run from the door run channel.
 4. Release the front door glass top run from the door run channel.
 5. Remove the front door glass top run.