


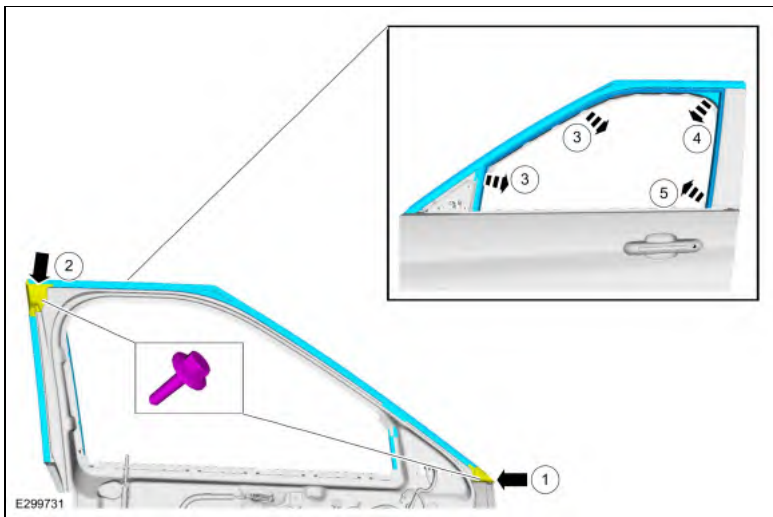

Installation

1. To install, reverse the removal procedure.
2. Carry out the power door window initialization.
Refer to: Power Door Window Initialization (501-11 Glass, Frames and Mechanisms, General Procedures).