

Auxiliary Power Point

Special Tool(s) / General Equipment




Removal

1. Open the power point cover.



2. Position the power point extractor so that it engages in the adjacent slots in the power point socket.
Remove Suggested Tool: 501-194 Remover, Power Point.

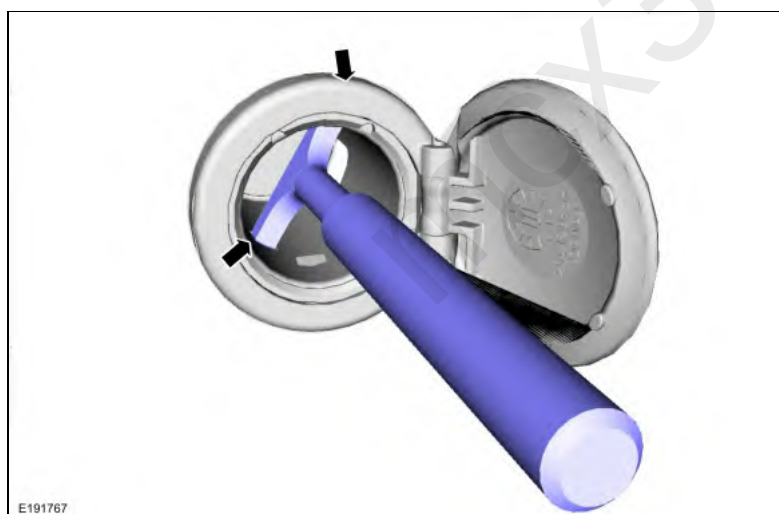

3.
 1. Install the receiver cup.
 2. Install and tighten the wing nut.
Remove Suggested Tool: 501-194 Remover, Power Point.