

7	Keyless Entry Keypad
8	GWM
9	RGTM
10	Liftgate Latch
11	Turn Signals
12	Horn
13	IPC
14	IKT/Keyfob (if equipped) (except police vehicles)
15	With Passive Entry
16	Left Rear Door Latch
17	Right Rear Door Latch
18	Left Front Door Latch
19	Right Front Door Latch
20	Liftgate Release Enable Switch
21	DDM
22	PDM
23	Door Lock Control Switch
24	Door Lock Control Switch
25	Keyless Entry Rear Antenna
26	Power Liftgate
27	Police Only
28	Without Passive Entry or Without Police
29	Fuel Filler Door Release Solenoid
30	PCM
31	Hybrid Vehicles
32	Headlamp Switch
33	Fuel Door Release Switch
34	Fuel Filler Door Ajar Switch
35	Fuel Filler Door Lock
36	Non-Hybrid Vehicles

Network Message Chart

BCM Network Input Messages

Broadcast Message	Originating Module	Message Purpose
Vehicle speed	PCM	The BCM uses the vehicle speed data for the autolock and auto-unlock features (if equipped)
Door lock switch status	DDM/ PDM	Provides the BCM with lock/unlock requests based on the input from the door lock control switch.

IPC Module Network Input Messages

Broadcast Message	Originating Module	Message Purpose
-------------------	--------------------	-----------------