



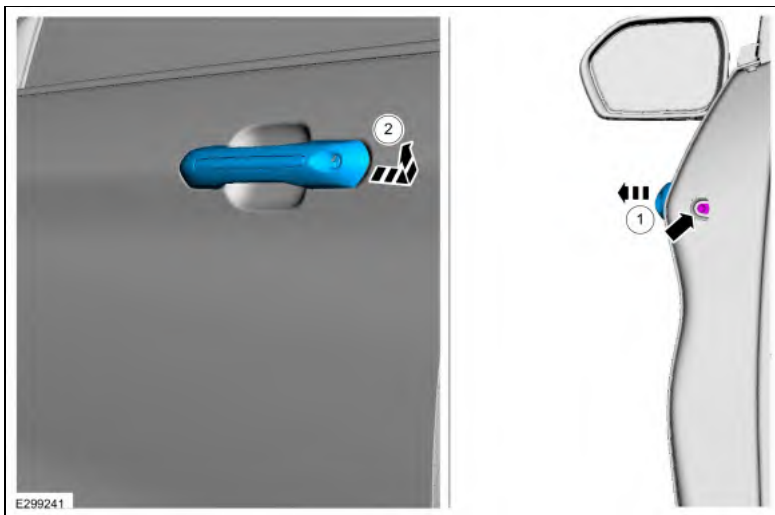

5. Remove the exterior front door handle gaskets.
1. Remove the exterior front door handle gasket.
 2. Remove the exterior front door handle gasket.

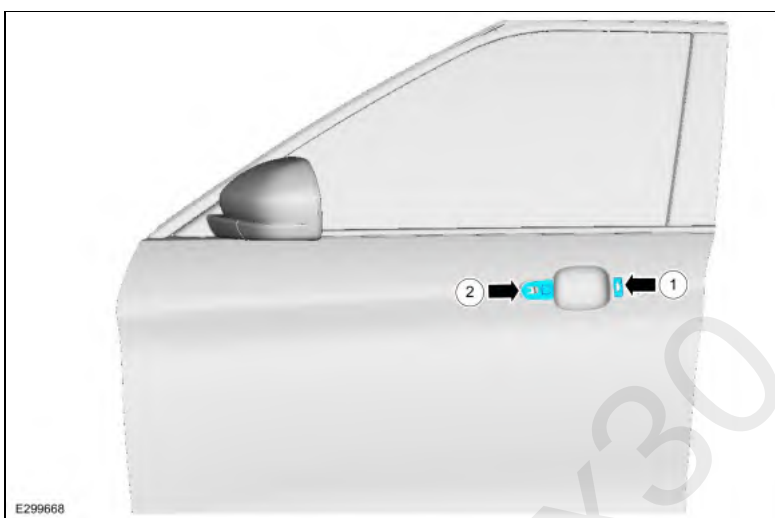

Installation

1. To install, reverse the removal procedure.
2. Carry out the power door window initialization.
Refer to: Power Door Window Initialization (501-11 Glass, Frames and Mechanisms, General Procedures).