


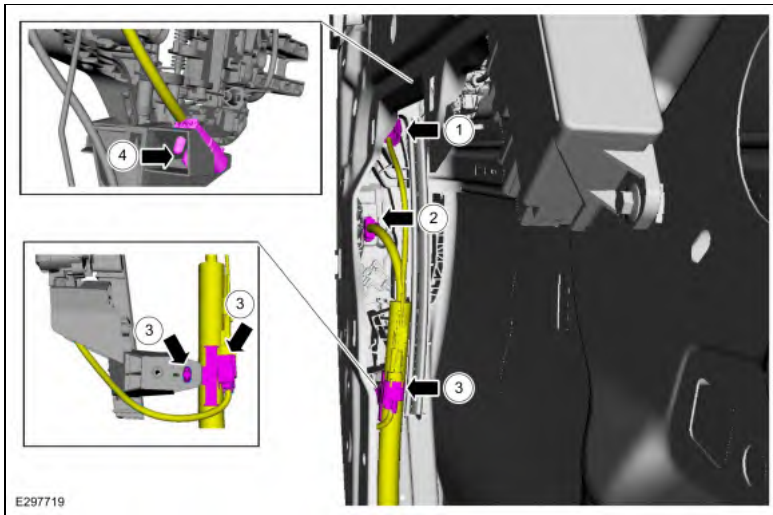


7. Remove the front door latch bolts.
Torque: 71 lb.in (8 Nm)



8. Remove the front door latch.




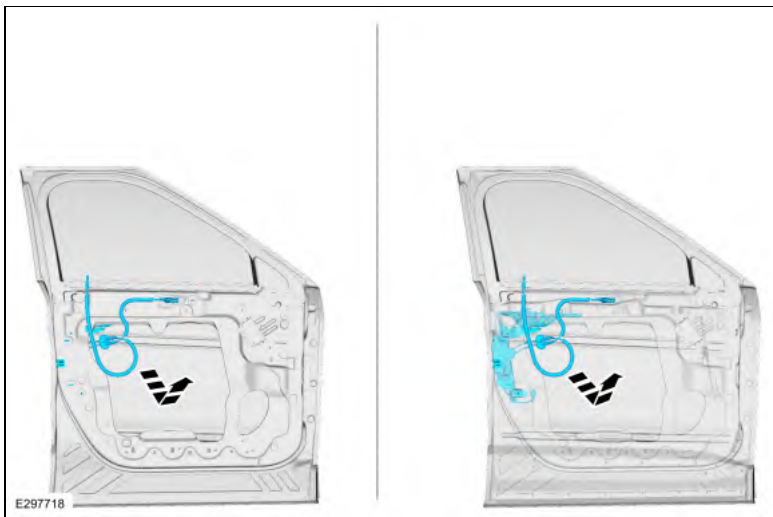

9. **NOTE:** This step is only necessary when installing a new component.

Release the cable tension by turning the release screw until the handle lever releases from the stop.


1. Turn the release screw until the handle lever releases from the stop.
2. Release the handle lever from the stop.

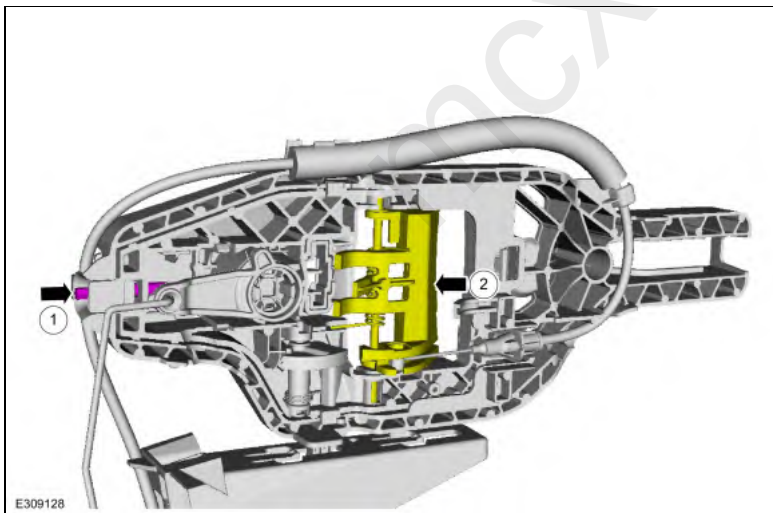

10. **NOTE:** This step is only necessary when installing a new component.


Remove the exterior front door handle reinforcement.

1. Press the locking tab down.
2. If equipped.
Disconnect the door lock cylinder rod.
3. Release the cable from the routing clips and detach the exterior front door handle reinforcement.
4. Detach the cable from the exterior front door handle reinforcement cable bracket.
5. Remove the cable eyelet from the lever.

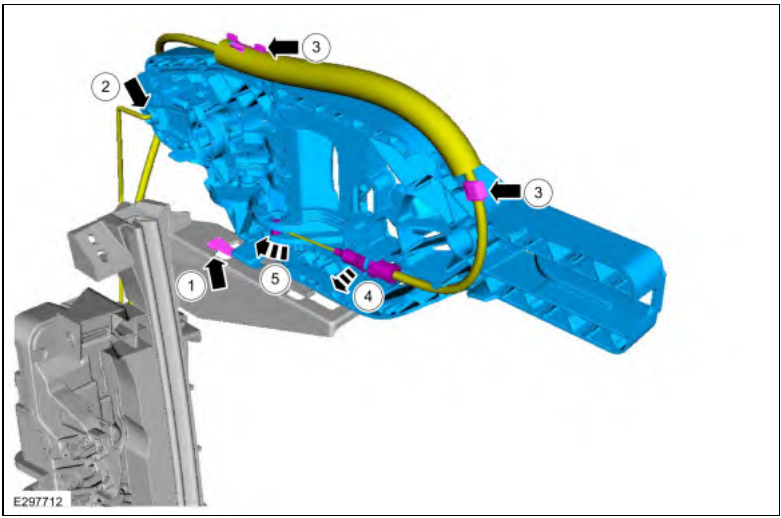


11. **NOTE:** This step is only necessary when installing a new component.

- Remove the front door glass run and bracket.
1. Release the exterior front door handle reinforcement handle cable from the routing tabs.
 2. Disconnect and remove the front door latch harness electrical connector.
 3. Release the front door glass run and bracket retaining tabs.
 4. Remove the front door glass run and bracket from the front door latch.

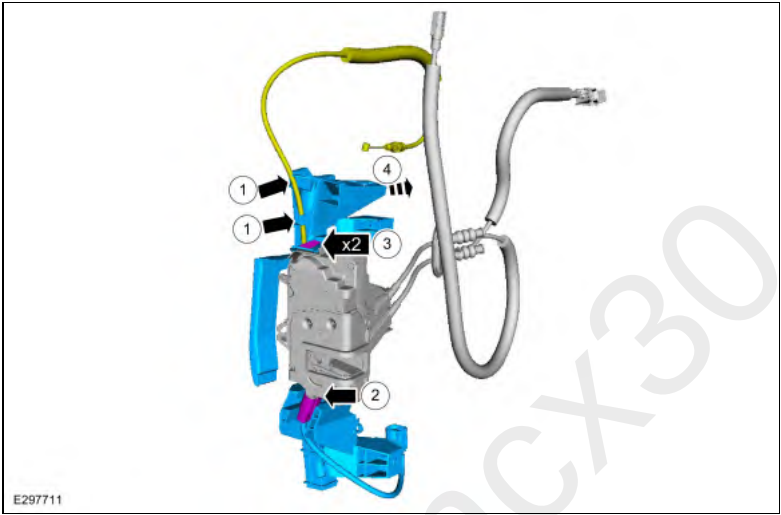


12. **NOTE:** This step is only necessary when installing a new component.

Remove the front door latch lock rod.

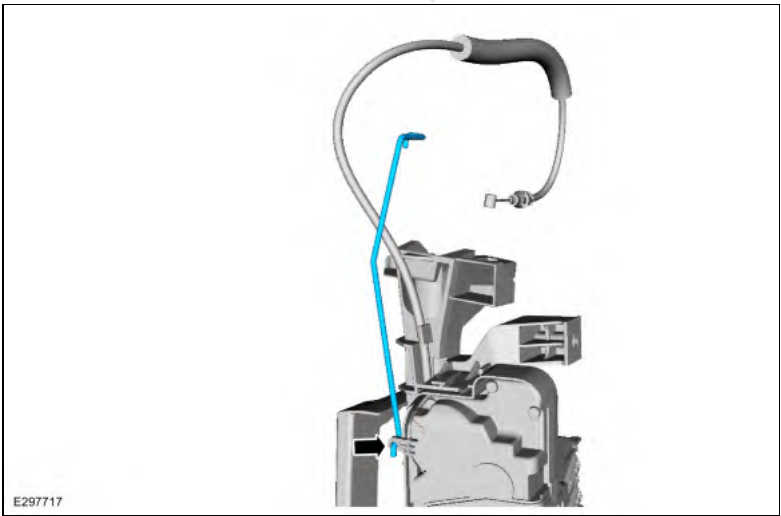


13. **NOTE:** This step is only necessary when installing a new component.

Remove the exterior front door handle reinforcement to front door latch cable access cover.

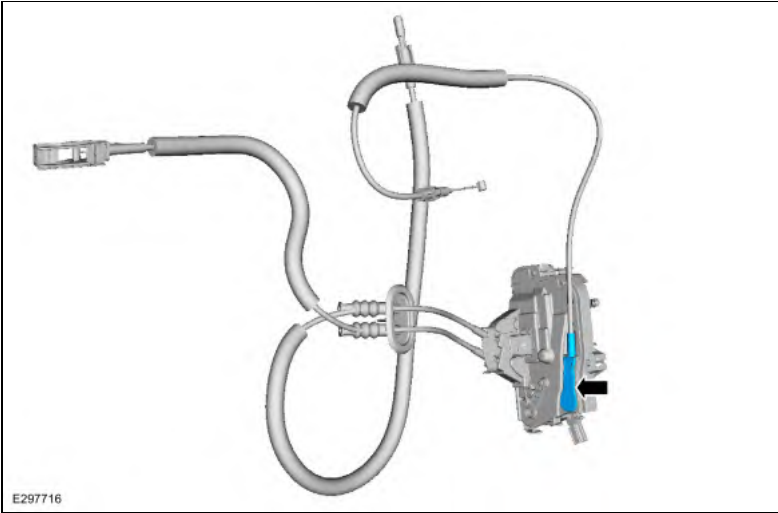


14. **NOTE:** This step is only necessary when installing a new component.

Remove the exterior front door handle reinforcement to front door latch cable.

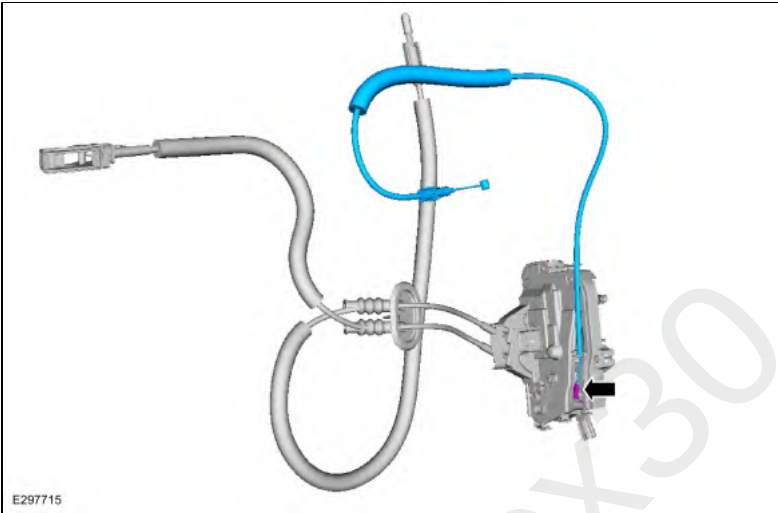

15. **NOTE:** This step is only necessary when installing a new component.


- Remove the interior front door handle cable and lock indicator cable access covers.
1. Remove the lock indicator cable access cover.
 2. Remove the interior front door handle cable access cover.

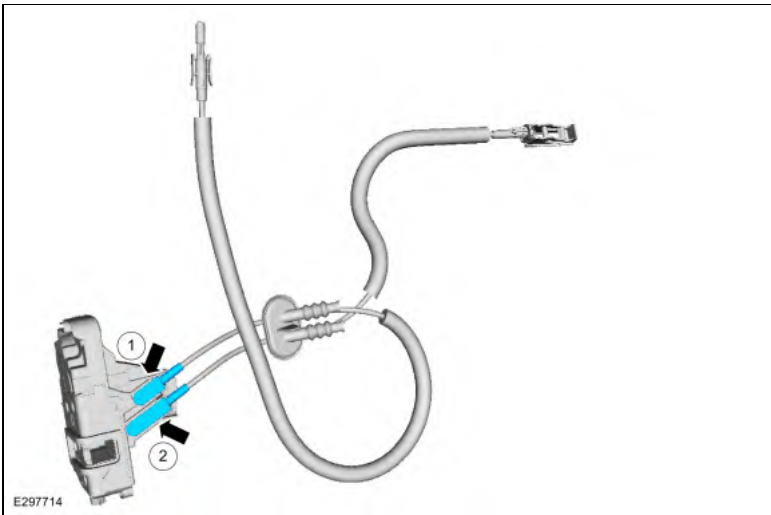

16. **NOTE:** This step is only necessary when installing a new component.

Remove the interior front door handle cable and lock indicator cable.

1. Remove the lock indicator cable.
2. Remove the interior front door handle cable.

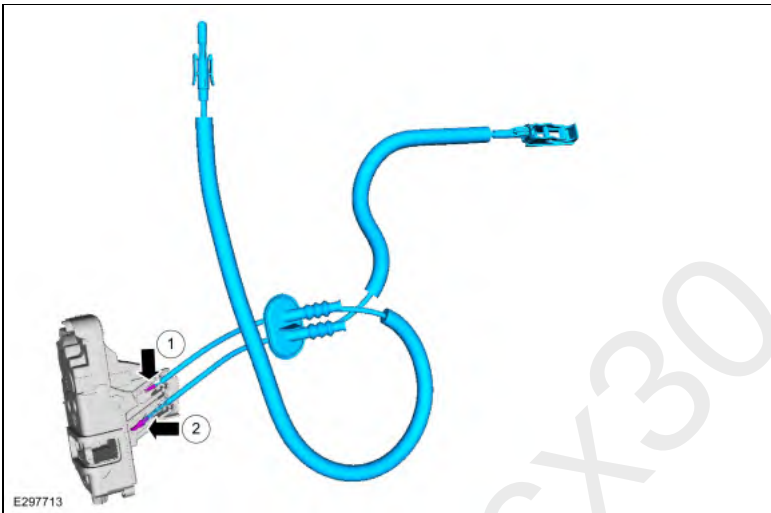


Installation

1. To install, reverse the removal procedure.
2. **NOTE:** This step is only necessary when installing a new component.

NOTE: This step must be done correctly or the exterior door handle will not engage the lever on installation.

Position the exterior front door handle reinforcement in the service position.

1. While keeping tension on the cable and holding the handle lever in the engaged position against the stop.
2. Turn the release screw until the handle lever is positioned against the stop.

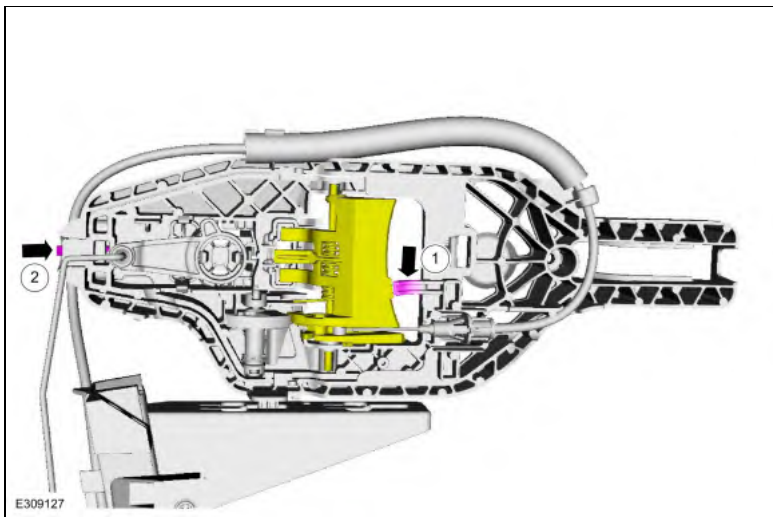

3. Carry out the power door window initialization.
Refer to: Power Door Window Initialization (501-11 Glass, Frames and Mechanisms, General Procedures).


mcx30.com

Front Door Lock Control Switch

Removal

NOTE: LH (left-hand) side shown, RH (right-hand) side similar.

1. Remove the front door trim panel.
Refer to: Front Door Trim Panel (501-05 Interior Trim and Ornamentation, Removal and Installation).
2. Remove the front door lock control switch.
 1. Release the retaining clips.
 2. Remove the front door lock control switch.

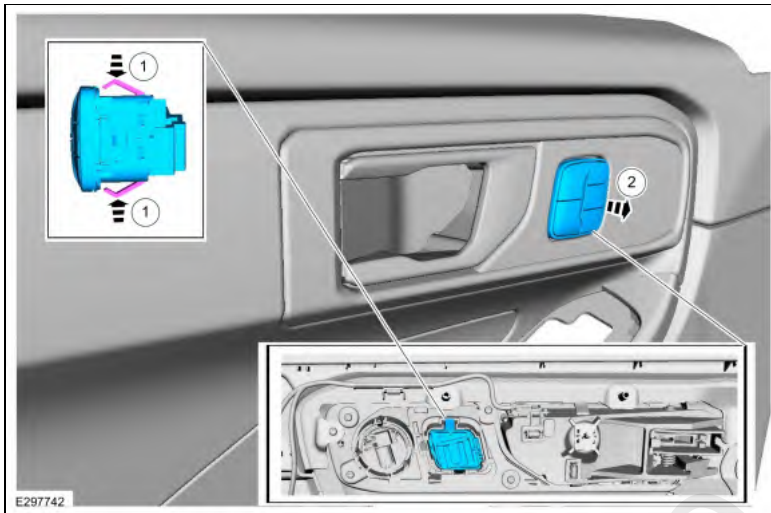


Installation

1. To install, reverse the removal procedure.

Fuel Filler Door Latch

Removal

1. Remove the fuel filler door assembly.
Refer to: Fuel Filler Door Assembly (501-03 Body Closures, Removal and Installation).
2. Remove the fuel filler door latch.
 1. Release the fuel filler door latch retaining tabs.
 2. Remove the fuel filler door latch.

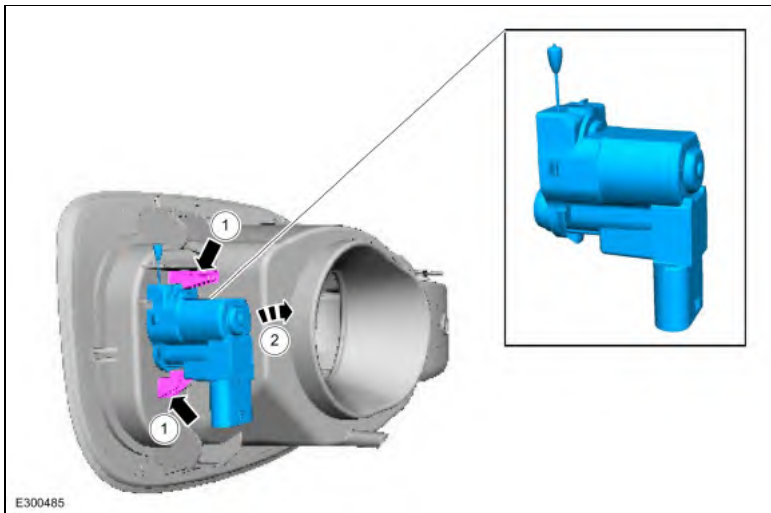

Installation

1. To install, reverse the removal procedure.