

Brake Caliper

Removal

NOTICE: Make sure that all openings are sealed.

NOTICE: If the fluid is spilled on the paintwork, the affected area must be immediately washed down with cold water.

NOTE: Removal steps in this procedure may contain installation details.


All vehicles

1. Remove the wheel and tire.
Refer to: Wheel and Tire (204-04A Wheels and Tires, Removal and Installation).

2. **NOTE:** Make sure all openings are sealed.

Remove the bolt and disconnect the brake hose. Discard the washers.

Torque: 26 lb.ft (35 Nm)

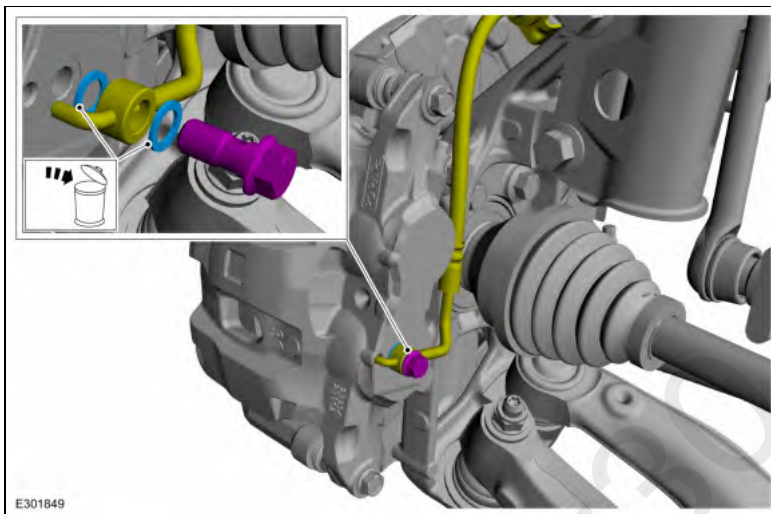

Vehicles without adhesive on outboard brake pad insulator

3. Remove the bolts and the brake caliper.

Torque:

M8 :: 20 lb.ft (27 Nm)

M10 :: 34 lb.ft (46 Nm)