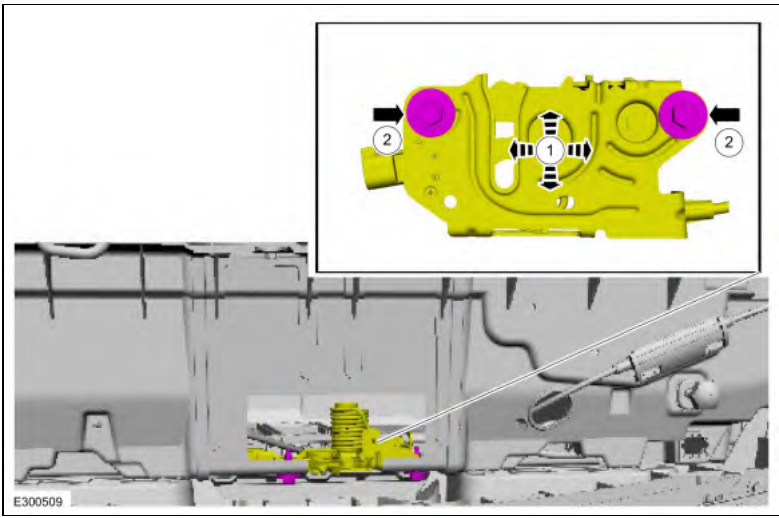


mcx30.com

Hood Latch Release Cable


Removal

Front Cable

1. Remove the hood latch.
Refer to: Hood Latch (501-14 Handles, Locks, Latches and Entry Systems, Removal and Installation).
2. **NOTE:** This step is only necessary when installing a new component.


Disconnect the hood latch release cable from the hood latch.

1. Detach the cable from the mounting bracket.
2. Disconnect the hood latch release cable end.

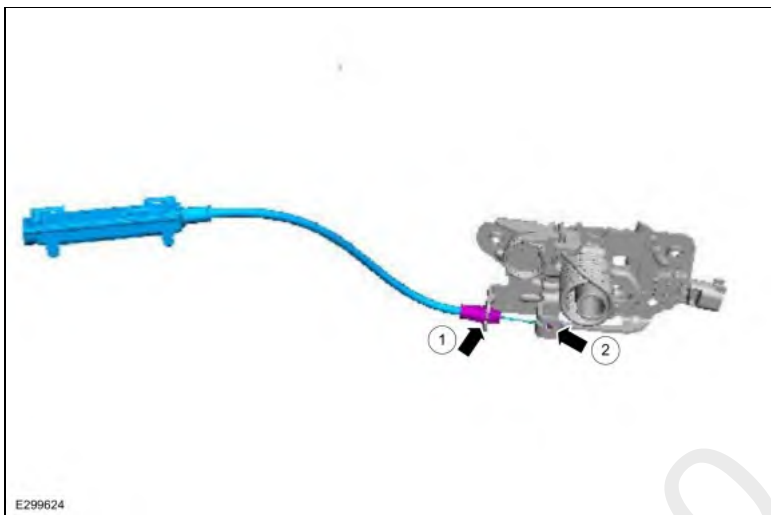


Rear Cable

3. On LH side.
Remove the front scuff plate trim panel.
Refer to: Front Scuff Plate Trim Panel (501-05 Interior Trim and Ornamentation, Removal and Installation).
4.
Remove the hood latch release and disconnect the rear hood latch release cable.
 1. Remove the bolts.
 2. Release the rear hood latch release cable from the mounting bracket.
 3. Disconnect the rear hood latch release cable eyelet and remove the hood latch release.

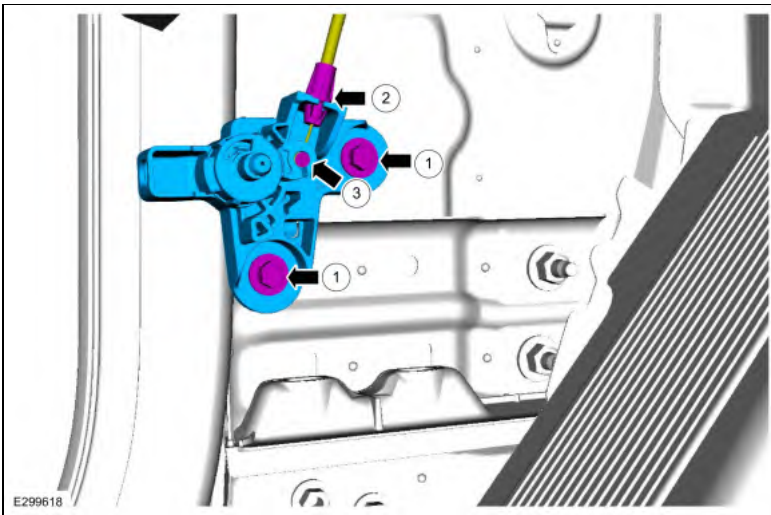

5. Route the rear hood latch release cable through the cowl.

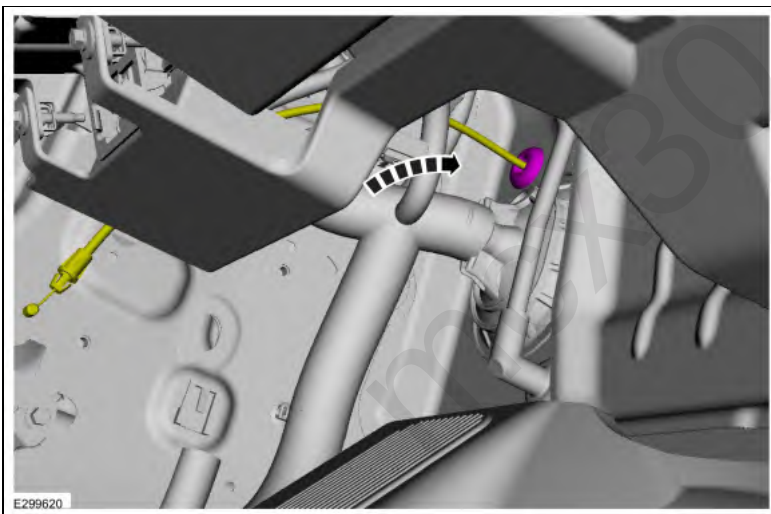

6. Remove the cowl access panel.