

Keyless Entry Keypad

Removal

NOTE: *The keyless entry keypad is serviced as an assembly with the front door upper moulding.*

1. Remove the front door upper moulding.
Refer to: Front Door Upper Moulding (501-08 Exterior Trim and Ornamentation, Removal and Installation).

Installation

1. To install, reverse the removal procedure.
 2. Carry out the power door window initialization.
Refer to: Power Door Window Initialization (501-11 Glass, Frames and Mechanisms, General Procedures).
-


Keyless Entry Rear Antenna

Special Tool(s) / General Equipment

Interior Trim Remover

Removal

1. Position the liftgate weatherstrip aside.

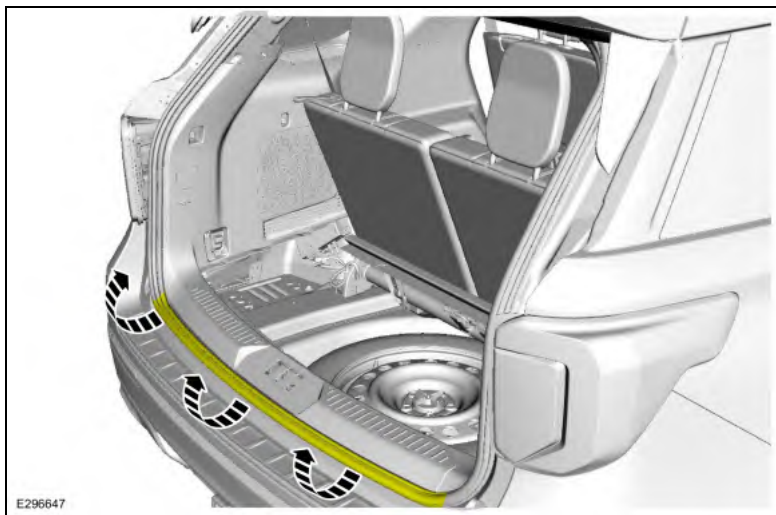

2. Remove the liftgate scuff plate trim panel.
 1. Release the liftgate scuff plate trim panel clips.
Use the General Equipment: Interior Trim Remover
 2. Disconnect the keyless entry rear antenna electrical connector.