


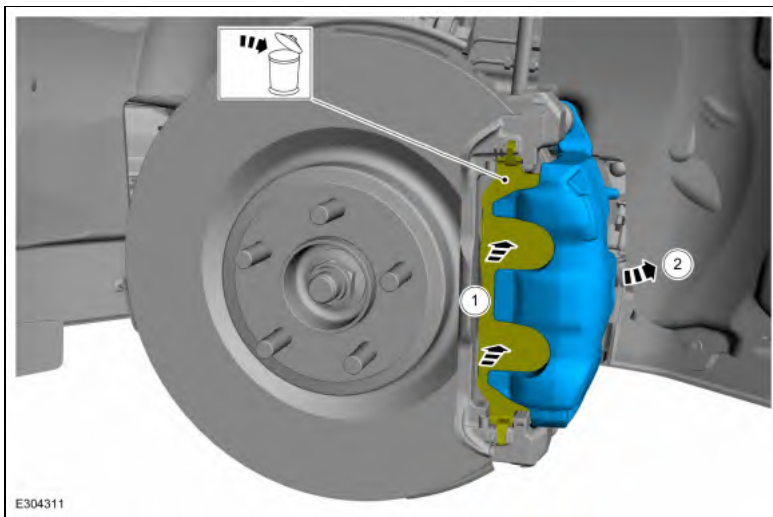

Installation

Vehicles with adhesive on outboard brake pad insulator

1. Install the new brake pads.
Refer to: Brake Pads (206-03 Front Disc Brake, Removal and Installation).

All vehicles

NOTICE: Make sure that the brake hose is not twisted when installing the brake caliper or damage to the brake flexible hose may occur.


2. To install, reverse the removal procedure.
3. Bleed the brake system
Refer to: Brake System Pressure Bleeding (206-00 Brake System - General Information, General Procedures).

Brake Caliper Anchor Plate

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the brake pads.
Refer to: Brake Pads (206-03 Front Disc Brake, Removal and Installation).
2. Remove the bolts and the anchor plate. Discard the bolts
Torque: 129 lb.ft (175 Nm)

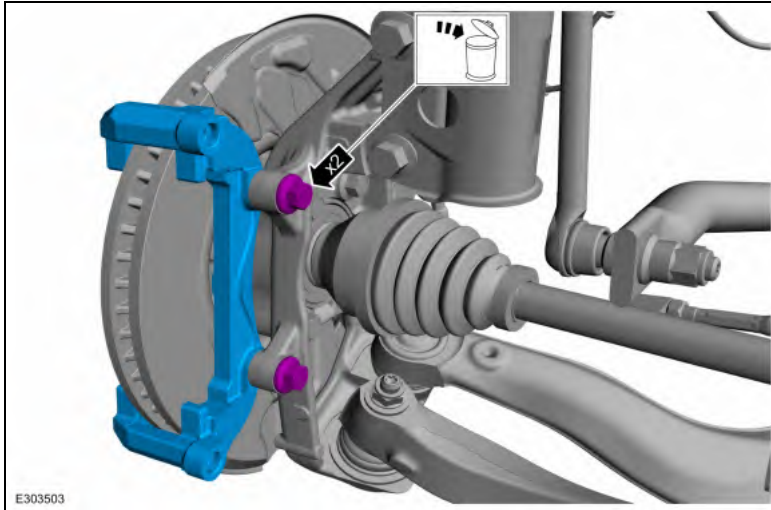

Installation

1. To install, reverse the removal procedure.

Brake Disc

Materials

Name	Specification
Motorcraft® Metal Brake Parts Cleaner PM-4-A, PM-4-B	-


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the wheel and tire.
Refer to: Wheel and Tire (204-04A Wheels and Tires, Removal and Installation).
2. **NOTICE: Do not pry in the caliper sight hole to retract the pistons as this can damage the pistons and boots.**

NOTICE: Do not allow the brake caliper and anchor plate assembly to hang from the brake hose or damage to the hose can occur.

Remove the anchor plate bolts and position the brake caliper and anchor plate assembly aside. Discard the bolts.
Torque: 129 lb.ft (175 Nm)

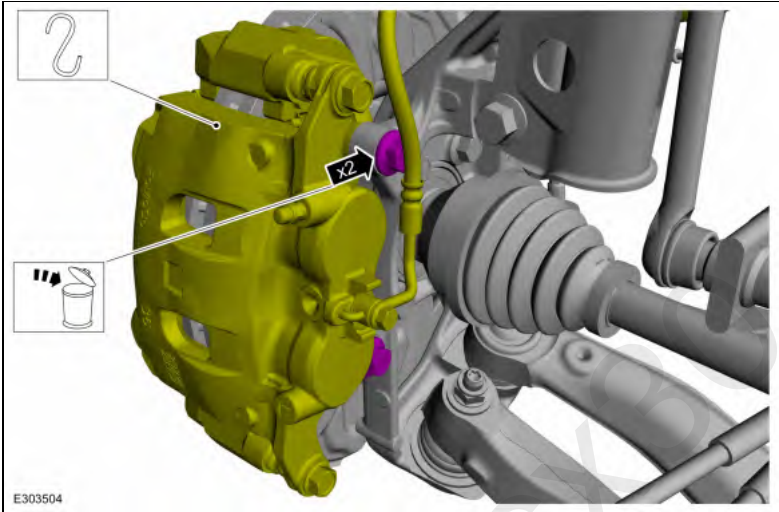

3. Remove the brake disc.

