



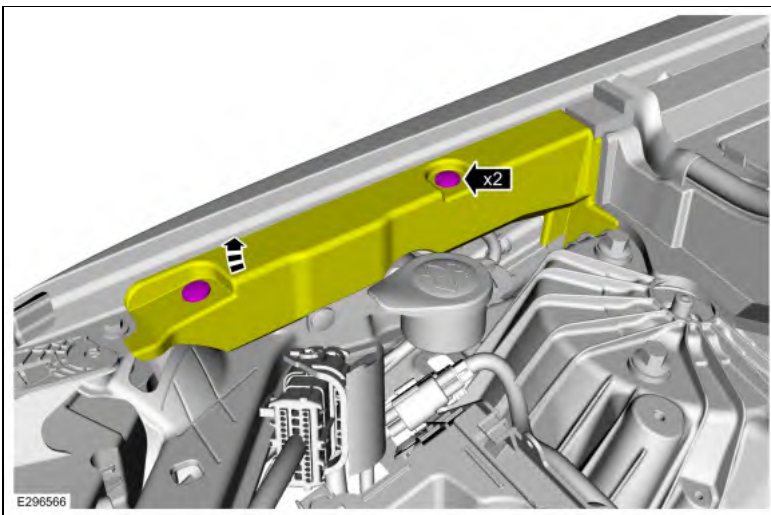

3. Remove the windshield washer fluid reservoir fill neck.
 1. If equipped.
Remove the windshield washer fluid reservoir fill neck retainer.
 2. If equipped.
Remove the windshield washer fluid reservoir fill neck retainer.
 3. Remove the windshield washer fluid reservoir fill neck.

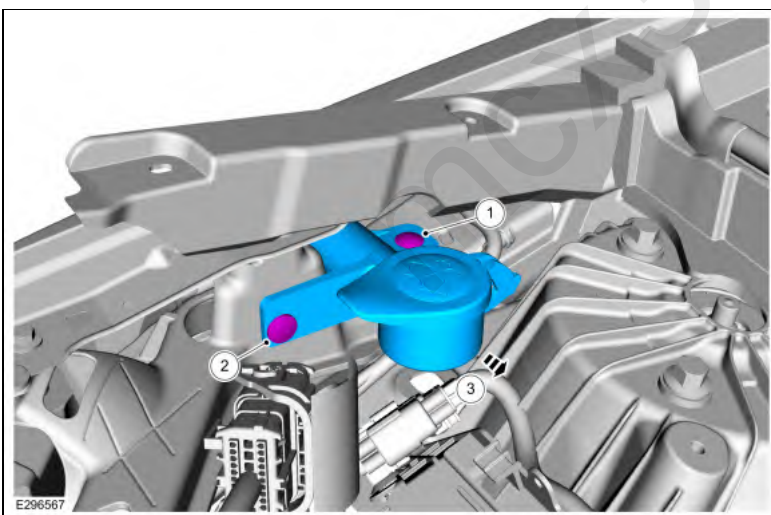

4. Remove the RH fender splash shield.
Refer to: Fender Splash Shield (501-02 Front End Body Panels, Removal and Installation).
5. Disconnect the electrical connectors.
 1. Disconnect the windshield washer fluid reservoir electrical connector.
 2. **NOTE:** Be prepared to collect escaping fluid.
Detach the washer hoses.
Use the General Equipment: Fluid Container