


Brake Disc Shield

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the brake disc.
Refer to: Brake Disc (206-03 Front Disc Brake, Removal and Installation).
2. Remove the 3 bolts and the brake disc shield.
Torque: 80 lb.in (9 Nm)

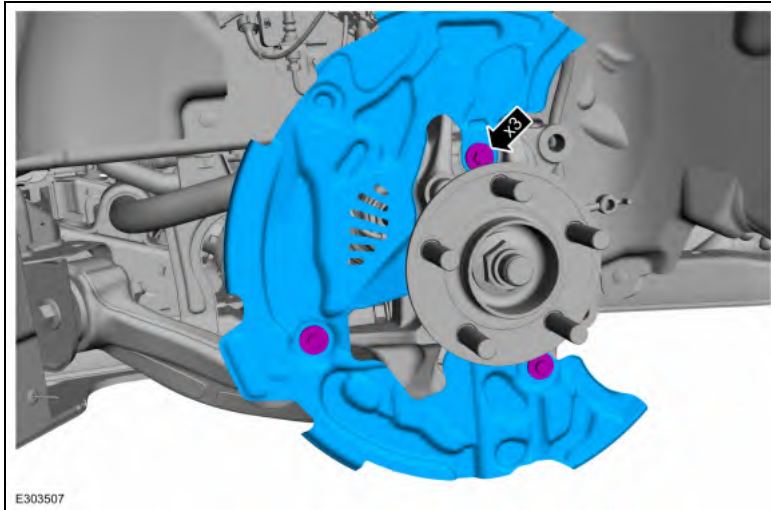

Installation

1. To install, reverse the removal procedure.

Brake Pads

Special Tool(s) / General Equipment

12â€ / 300mm C-Clamp

Materials

Name	Specification
Motorcraft® Metal Brake Parts Cleaner - PM-4-A, PM-4-B	-


Removal

All vehicles

1. Remove the wheel and tire.
Refer to: Wheel and Tire (204-04A Wheels and Tires, Removal and Installation).
2. **NOTICE: Do not pry in the caliper sight hole to retract the pistons as this can damage the pistons and boots.**

NOTICE: Do not allow the brake caliper to hang from the brake hose or damage to the hose can occur.

Remove the bolts and position the brake caliper aside.

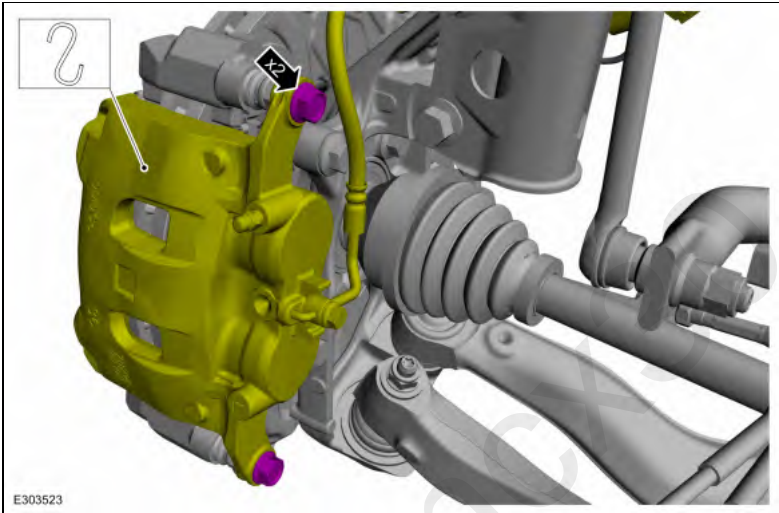

Vehicles with adhesive on outboard brake pad insulator

3. **NOTICE: Brake pads with adhesive on the insulator are one-time use only. When the brake pads are separated from the brake caliper, new brake pads must be installed to prevent brake noise and shudder.**

1. Separate the outboard brake pad from the brake caliper.
2. Position the brake caliper aside.