


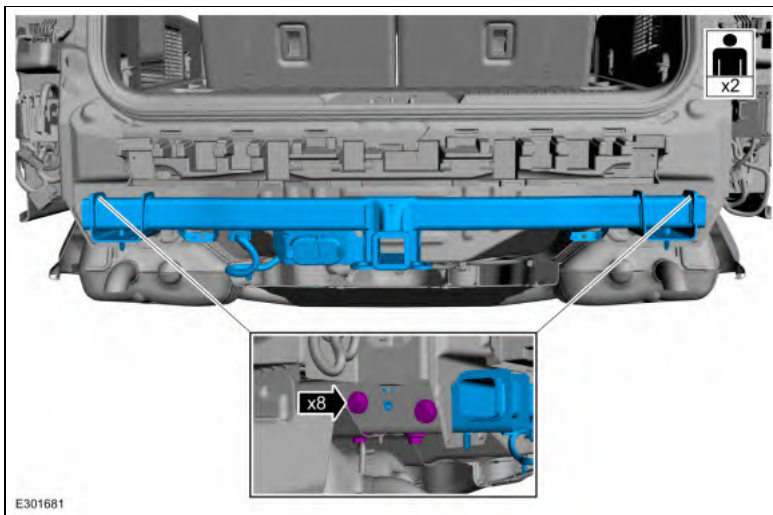

Installation

1. To install, reverse the removal procedure.

Rear Bumper Cover

Special Tool(s) / General Equipment

Interior Trim Remover

Removal


NOTE: Removal steps in this procedure may contain installation details.

1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).


2. On both sides
Remove the inner wheel liner to rear bumper cover screws and nuts.

Torque:


- 1.: 13 lb.in (1.5 Nm)
- 2.: 22 lb.in (2.5 Nm)

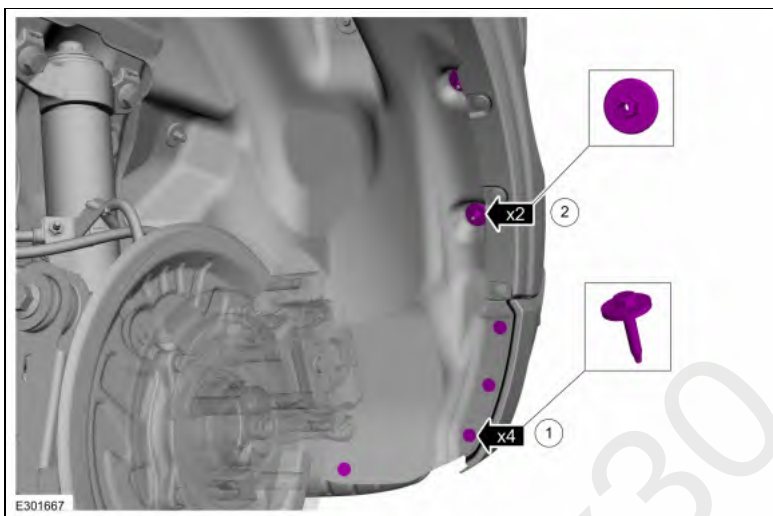

3. On both sides.
Remove the push pins, release the tabs and position the rear quarter panel moulding aside.
Use the General Equipment: Interior Trim Remover

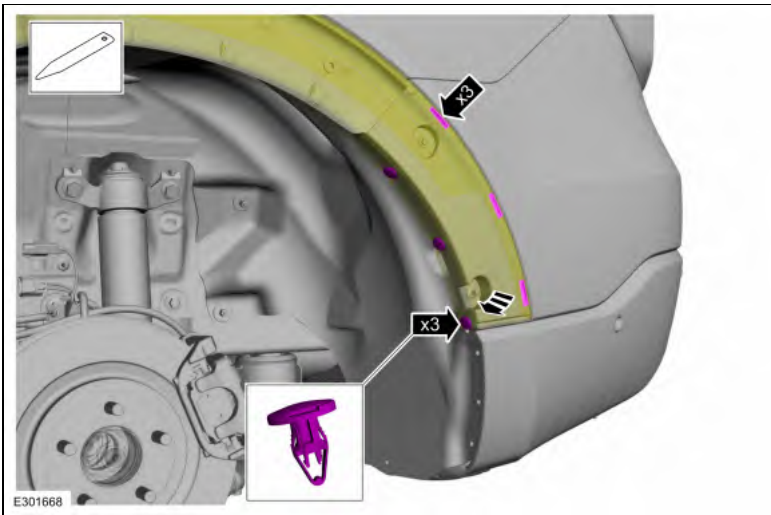

4. If equipped.
Remove the screws.
Torque: 13 lb.in (1.5 Nm)

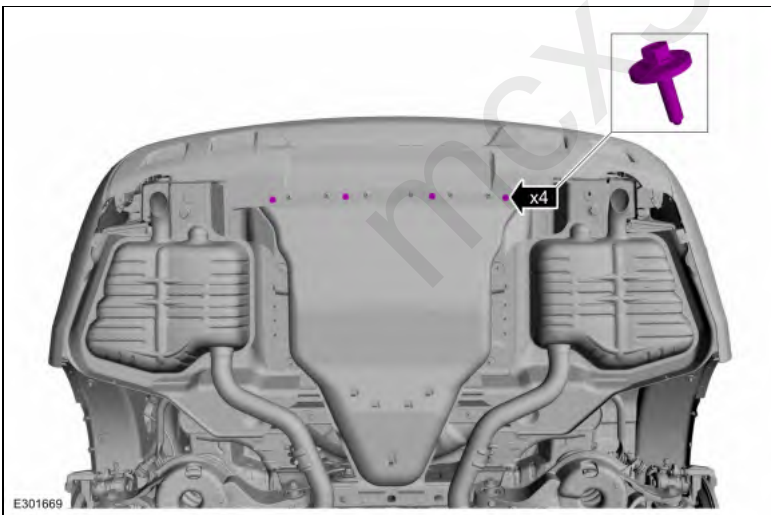

5. Remove the screws.
Torque: 13 lb.in (1.5 Nm)