


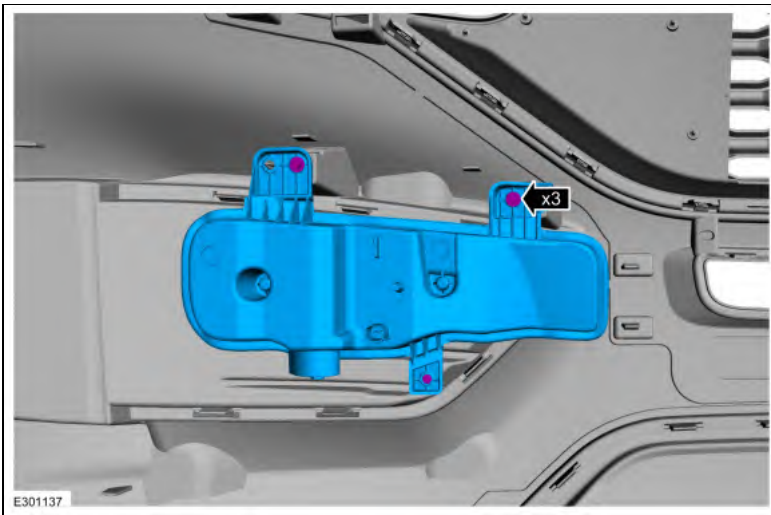


5. **NOTE:** Make sure that the isolator rings are installed correctly while installing the sensors.

If equipped.

Remove the front parking aid sensor.

1. Release the tabs.
2. Remove the front parking aid sensor from the bracket.

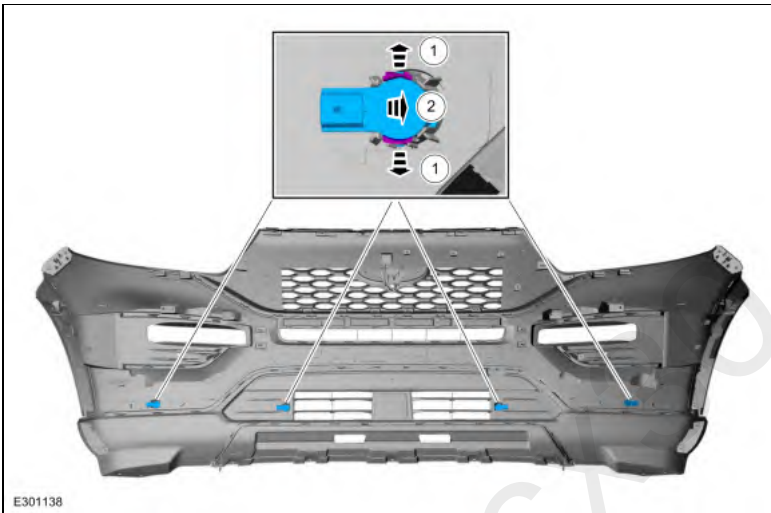

6. Drill the rivets, release the tabs and remove the front bumper trim panel.