




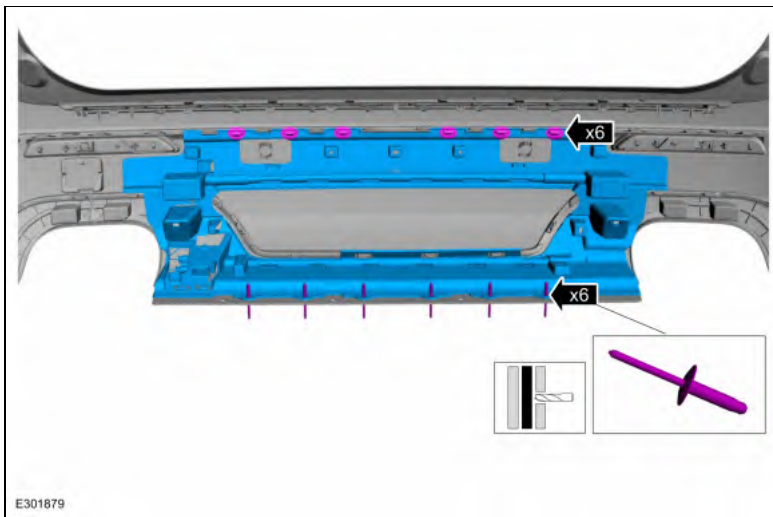


7. If equipped.
Disconnect the electrical connectors, remove the screw and remove the hands-free liftgate module.

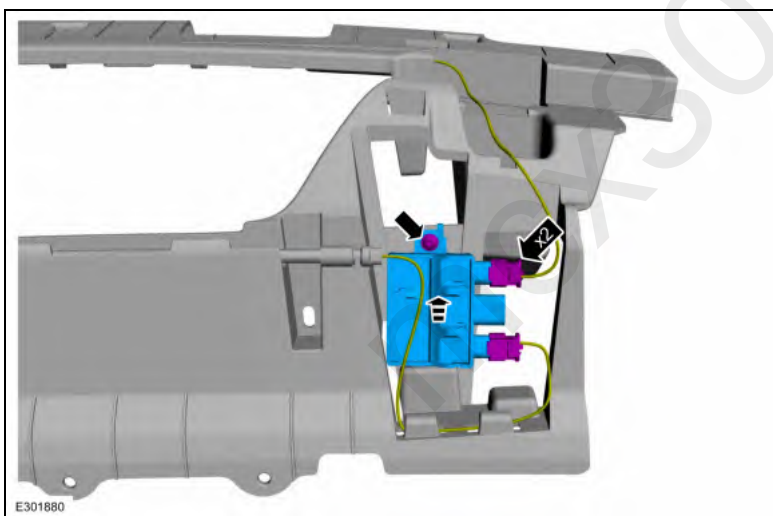


8. If equipped.
Remove the hands-free liftgate antennas.

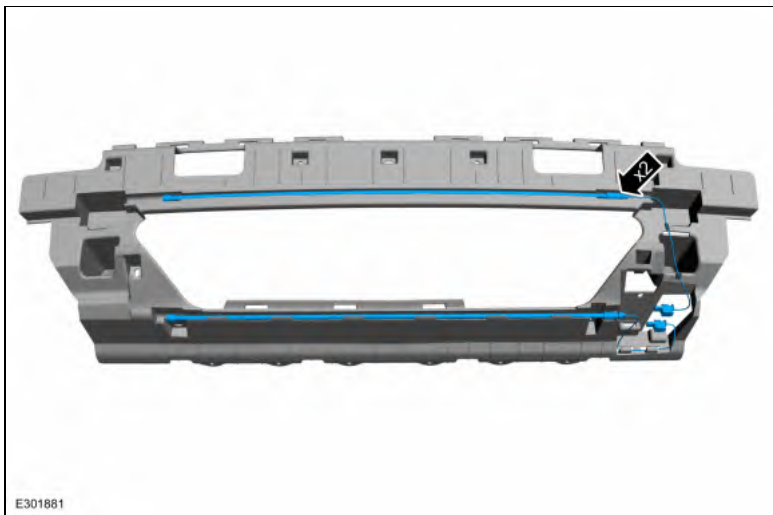


9. Drill the rivets, release the tabs and remove the lower rear bumper cover panel.

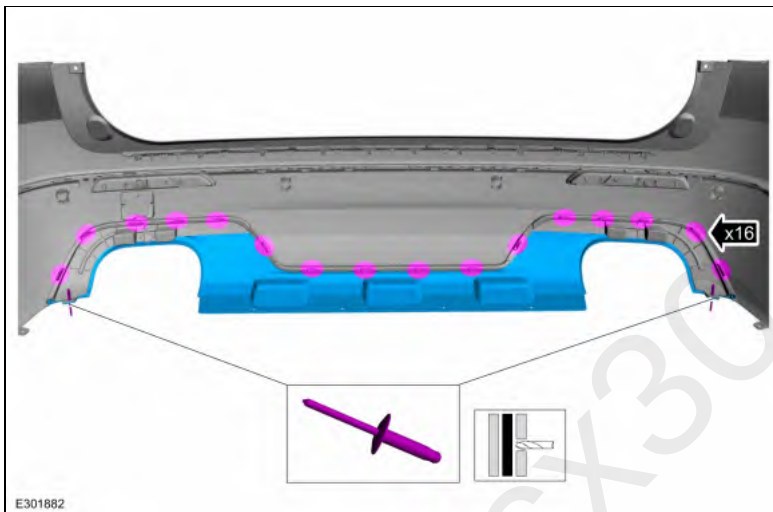


10. If equipped, on both sides.
Drill the rivet, release the tabs and remove the lower rear bumper cover moulding assembly.

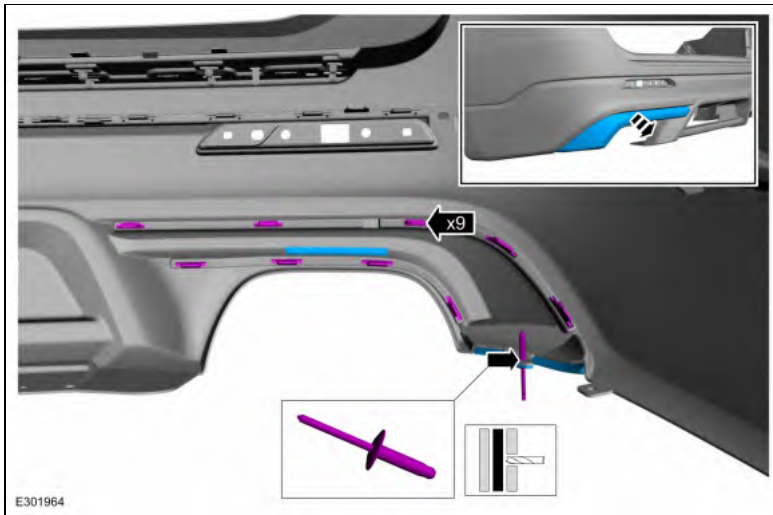


11. On both sides.
Release the tabs and remove the rear reflector or the rear fog lamp assembly.

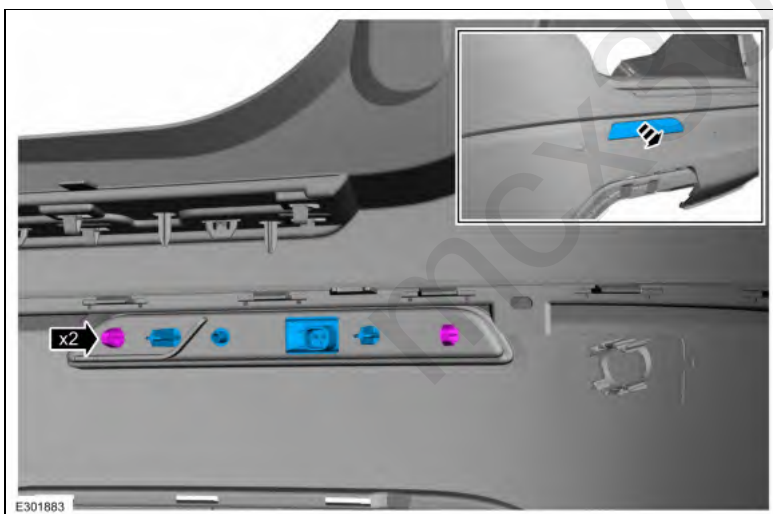


12. If equipped.
Release the tab and remove the rear tow hook cover.

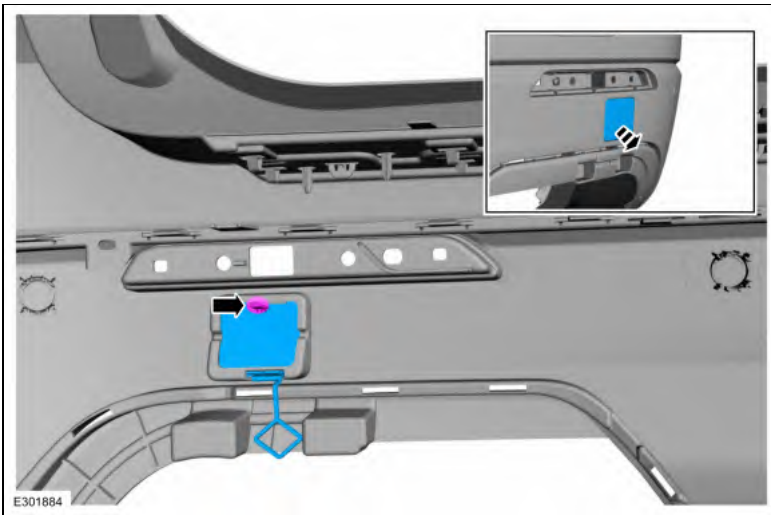


13. Drill the rivets, release the tabs and remove the center rear bumper cover.

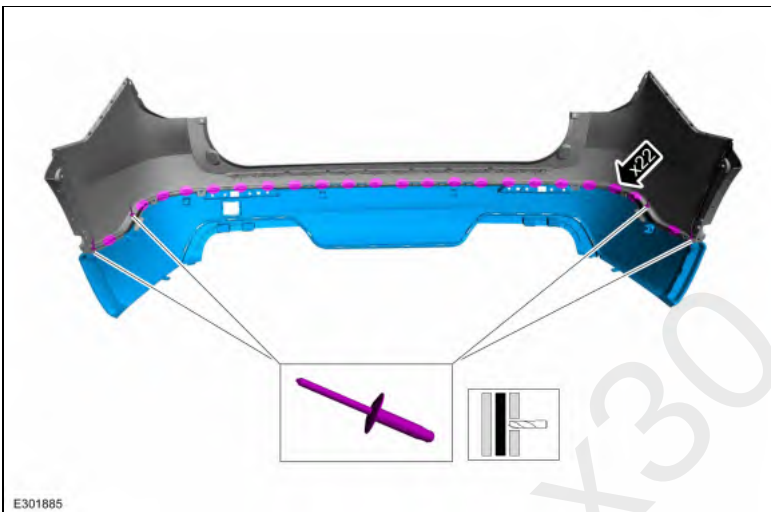

14. Release the tabs and remove the step plate.

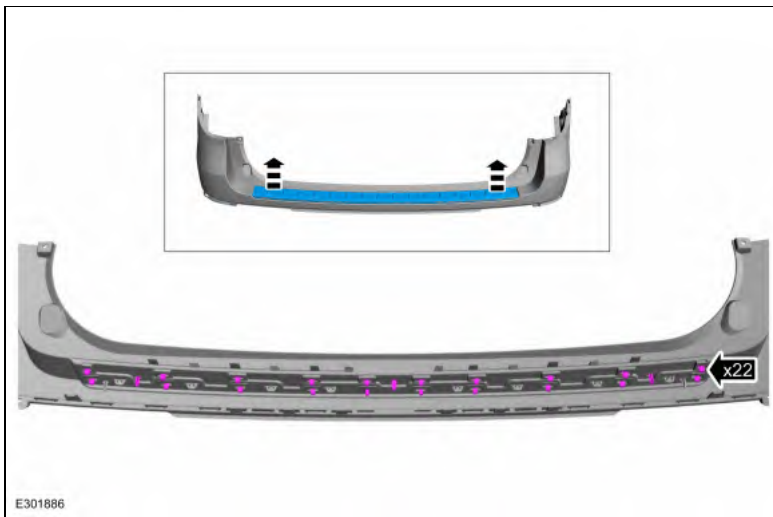

15. Release the tabs and remove the rear bumper cover upper moulding.

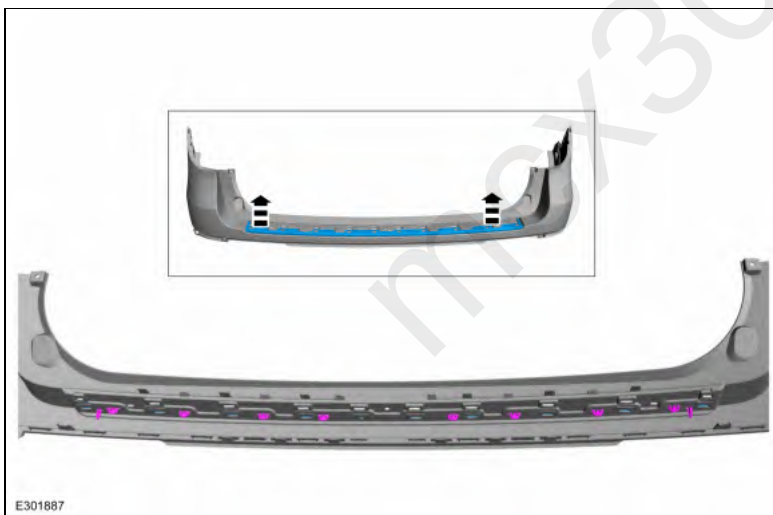

ASSEMBLY

1. To install, reverse the removal procedure.
2. If equipped.
Carry out the azimuth and elevation system checks.
Refer to: Azimuth System Check (413-13A Parking Aid - Vehicles With: Rear Parking Aid, General Procedures).
Refer to: Elevation System Check (413-13A Parking Aid - Vehicles With: Rear Parking Aid, General Procedures).
3. If equipped.
Carry out the azimuth system check.
Refer to: Azimuth System Check (413-13C Parking Aid - Vehicles With: Active Park Assist, General Procedures).
4. If equipped.
If any sensor fails the check, diagnose the sensor fault.
Refer to: Parking Aid (413-13A Parking Aid - Vehicles With: Rear Parking Aid, Diagnosis and Testing).
5. If equipped.
If any sensor fails the check, diagnose the sensor fault.

mcx30.com

501-20A Seatbelt Systems

Description and Operation