





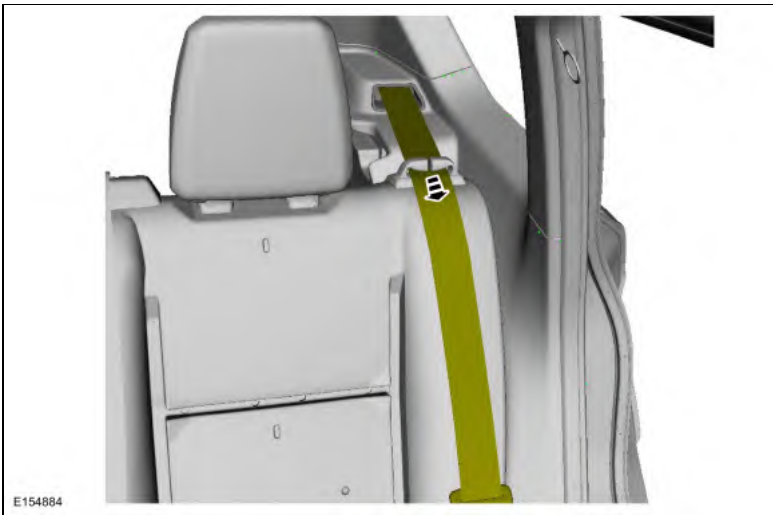


10.


1. **NOTE:** *Compressing the backrest foam and/or reclining the rear seat backrest (if equipped) allows more slack of the seatbelt webbing to be fed into the seatbelt retractor.*
Compress the backrest foam pad and recline the rear seat backrest (if equipped).
2. Slowly feed the seatbelt slack back into the retractor to unlock it. If the seatbelt does not extract after carrying out this step, proceed to the next step.

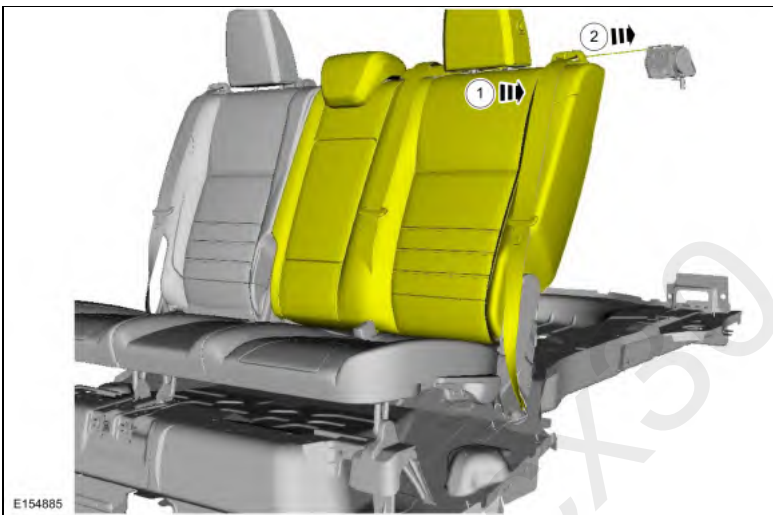

  11. Firmly pull and extract as much seatbelt from the seatbelt retractor as possible.

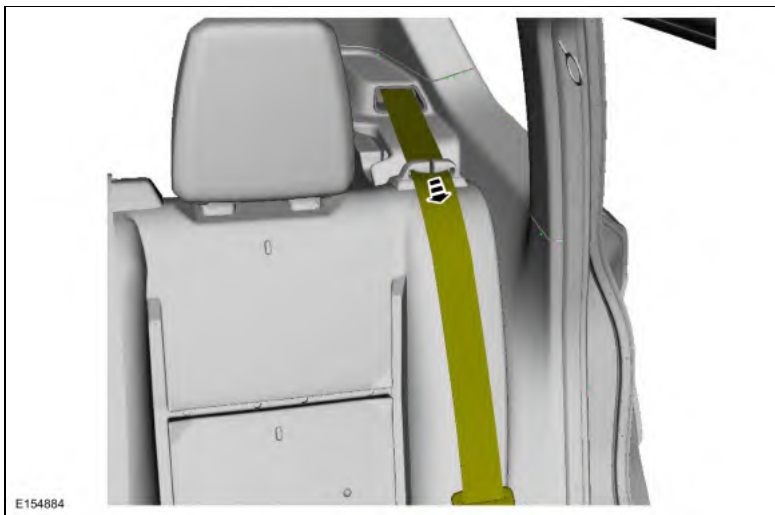

12.
 1. Slowly feed the seatbelt slack back into the retractor to unlock it.
 2. Slowly extract the seatbelt from the seatbelt retractor. If the seatbelt **does not** extract, proceed to the next step. If the seatbelt **does** extract, proceed to step 16.
13. Remove the fastener and detach the seatbelt anchor or inflatable seatbelt union (if equipped). REFER to the appropriate removal and installation procedure in this section.
14.
 1. Slowly feed the seatbelt slack back into the retractor to unlock it.
 2. Extract the seatbelt webbing from the seatbelt retractor. Proceed to the next step.

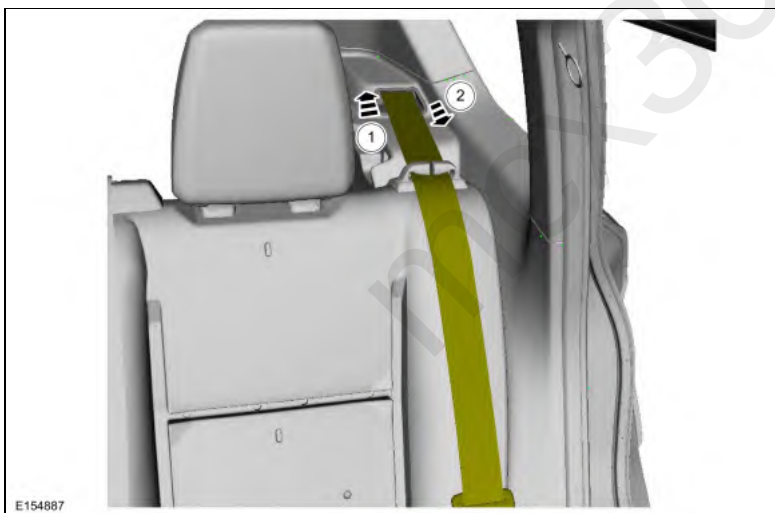

15.
 - If the seatbelt **does not** extract, install a new seatbelt retractor. Refer to the appropriate seatbelt retractor removal and installation procedure in this section.
 - If the seatbelt **does** extract, install all fasteners that were removed and tighten them to specification. REFER to the appropriate removal and installation procedure.
16. Check the active restraint system for correct operation by carrying out the appropriate functional test.
Refer to: Seatbelt Systems (501-20A Seatbelt Systems, Diagnosis and Testing).

Seatbelt Cleaning

Cleaning

⚠ **WARNING:** Do not bleach or re-dye the seatbelt webbing, as the webbing may weaken. Failure to follow this instruction may increase the risk of serious personal injury or death in a crash.

1. Refer to the owner's literature for information on seatbelt care and the recommended cleaning solution to use. Follow the manufacturer's instructions provided with the cleaning solution.
-

mcx30.com

Seatbelt Maintenance

Inspection

⚠ **WARNING:** All seatbelt components must be inspected and corrected as part of any collision repair. Inspect all seatbelt components as prescribed by Seatbelt Procedure After a Collision found in Section 501-20A General Procedures of this manual. Failure to follow this instruction may result in incorrect operation of the seatbelt system and increase the risk of serious personal injury or death in a crash.

1. Periodically inspect the seatbelt assemblies for damage and that they remain in correct operating condition, particularly if they have been subjected to severe stress.
 2. Before installing the new seatbelt assembly, inspect the seatbelt retaining areas for damage and distortion. If the retaining points are damaged and distorted, work the sheet metal back to its original shape and structural integrity.
 3. Install the new seatbelt(s) using the appropriate instructions. Carry out the appropriate Functional Test procedure for all seating positions. Refer to: Seatbelt Systems (501-20A Seatbelt Systems, Diagnosis and Testing).
-