

Seat Position Sensor

Removal


NOTE: Typical LH (left-hand) seat shown, RH (right-hand) seat similar.

NOTE: Removal steps in this procedure may contain installation details.

1. Raise the seat to the full up position.



2.
 1. Disconnect the electrical connector.
 2. Remove the screw.
Torque: 8 lb.in (0.9 Nm)
 3. Remove the seat position sensor.

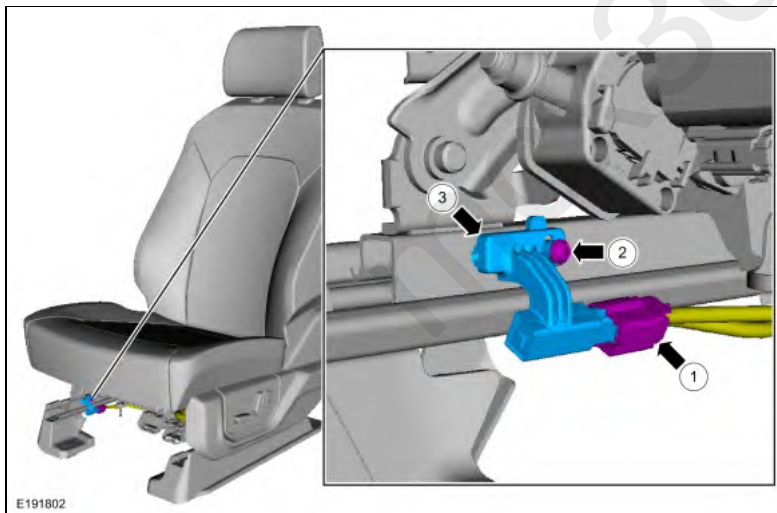

Installation

1. To install, reverse the removal procedure.

