



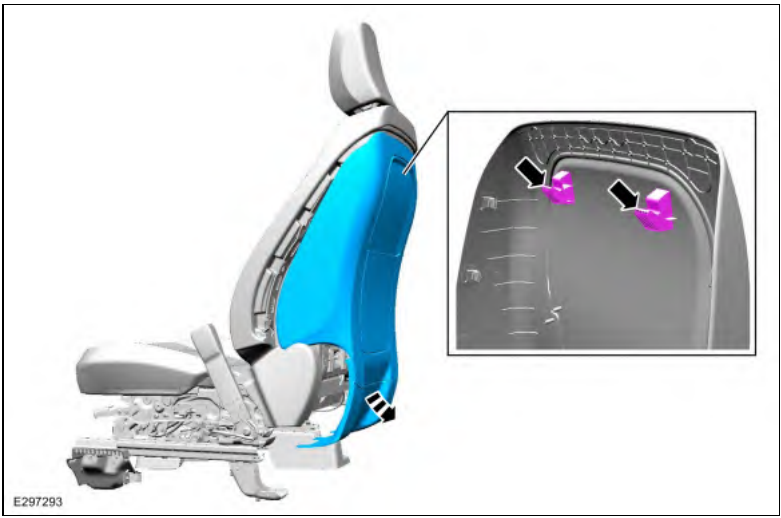


7. **NOTE:** Follow the unique instructions or graphic for this step in the installation.

- 1. Remove the side airbag nuts.
Torque: 62 lb.in (7 Nm)
- 2. Detach the side airbag studs from the backrest frame.

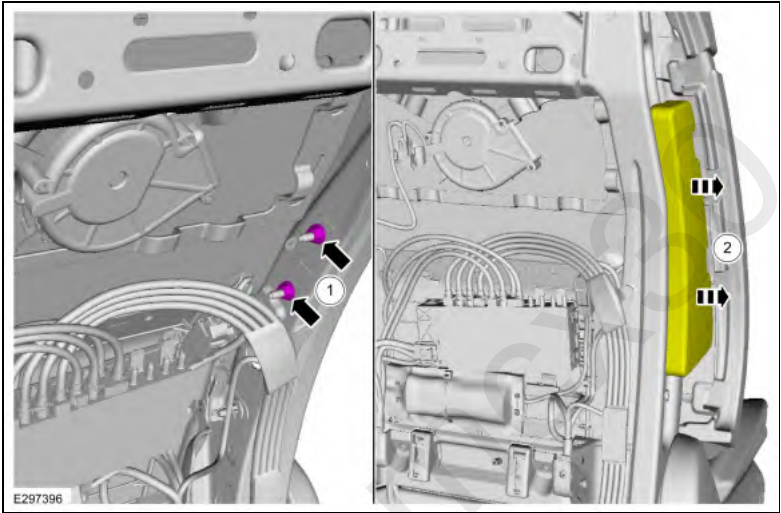

8. Disconnect the electrical connector and remove the side airbag.

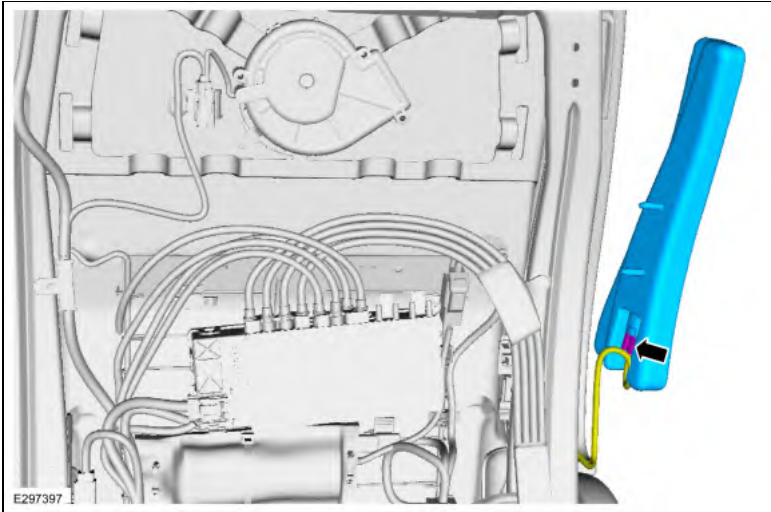

Installation

⚠ **WARNING:** Incorrect repair techniques or actions can cause an accidental Supplemental Restraint System deployment. Make sure the restraint system is depowered before reconnecting the component. Refer to the Supplemental Restraint System depowering General Procedure in section 501-20B. Failure to precisely follow depowering instructions could result in serious personal injury from an accidental deployment.

1. ⚠ **WARNING:** Inspect the seat side airbag, airbag cavity, mounting surface and deployment chute for damage or the presence of foreign material. Remove all foreign material. Install a new side airbag if it is damaged. Install a new deployment chute if the deployment chute is damaged. Failure to follow these instructions may result in the seat side airbag deploying incorrectly and increase the risk of serious personal injury or death in a crash.

To install, reverse the removal procedure.

2. Repower the SRS.
Refer to: Supplemental Restraint System (SRS) Repowering (501-20B Supplemental Restraint System, General Procedures).

Side Curtain Airbag


Removal

WARNING: The following procedure prescribes critical repair steps required for correct restraint system operation during a crash. Follow all notes and steps carefully. Failure to follow step instructions may result in incorrect operation of the restraint system and increases the risk of serious personal injury or death in a crash.


NOTE: Removal steps in this procedure may contain installation details.

NOTE: LH (left-hand) shown, RH (right-hand) similar.


1. Remove the headliner.
Refer to: Headliner (501-05 Interior Trim and Ornamentation, Removal and Installation).
2. Depower the SRS.
Refer to: Supplemental Restraint System (SRS) Depowering (501-20B Supplemental Restraint System, General Procedures).
3. Remove the screw and the bracket.

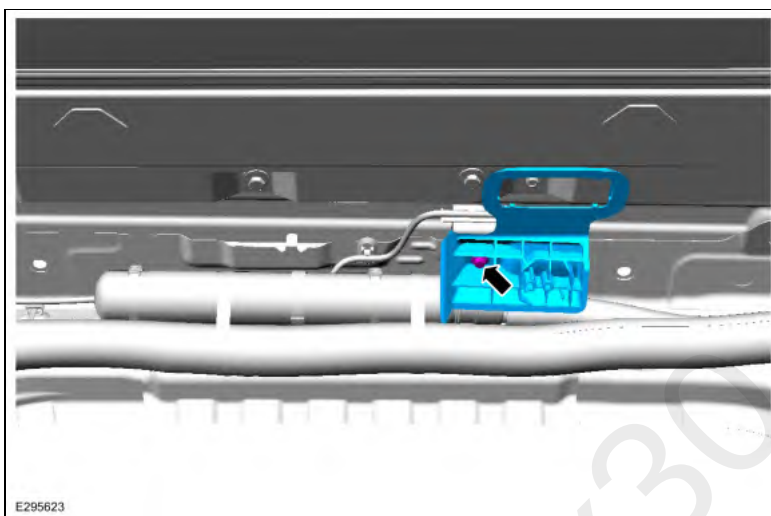

4. Disconnect the side curtain airbag electrical connector and remove the M6 x 26 mm screw.
Torque: 93 lb.in (10.5 Nm)

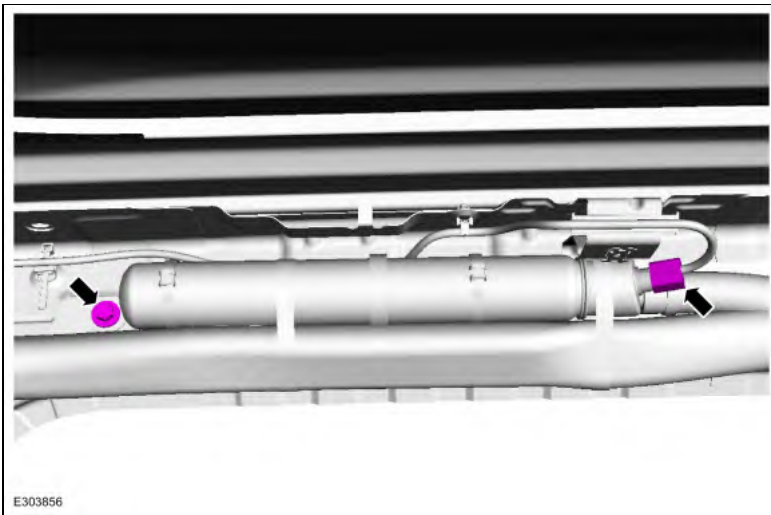

5. If equipped.
Detach the side curtain airbag nut cap.

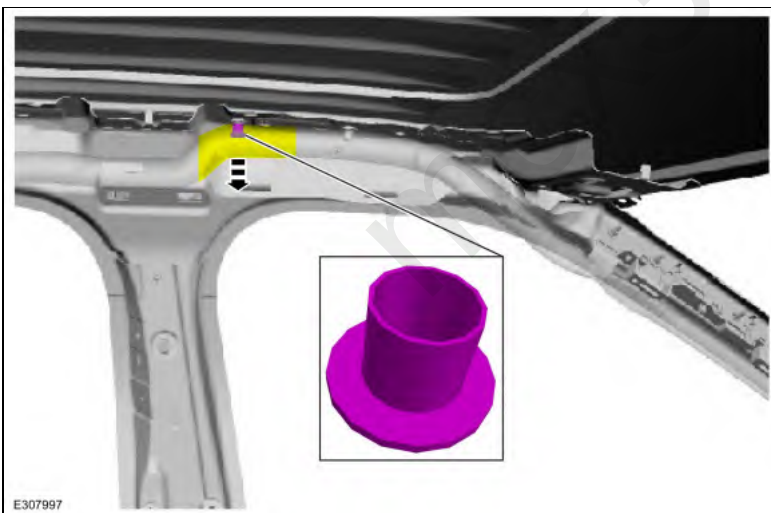

- 6.
1. Position the side curtain airbag aside and remove the M6 x 26 mm screws.
Torque: 80 lb.in (9 Nm)
 2. Position the side curtain airbag aside and remove the M6 x 25 mm screws.
Torque: 80 lb.in (9 Nm)
 3. Remove the side curtain airbag nut.
Torque: 80 lb.in (9 Nm)