


Brake Disc Shield

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the wheel bearing and wheel hub.
Refer to: Wheel Bearing and Wheel Hub (204-02 Rear Suspension, Removal and Installation).
2. Remove the 3 bolts and the brake disc shield.
Torque: 159 lb.in (18 Nm)

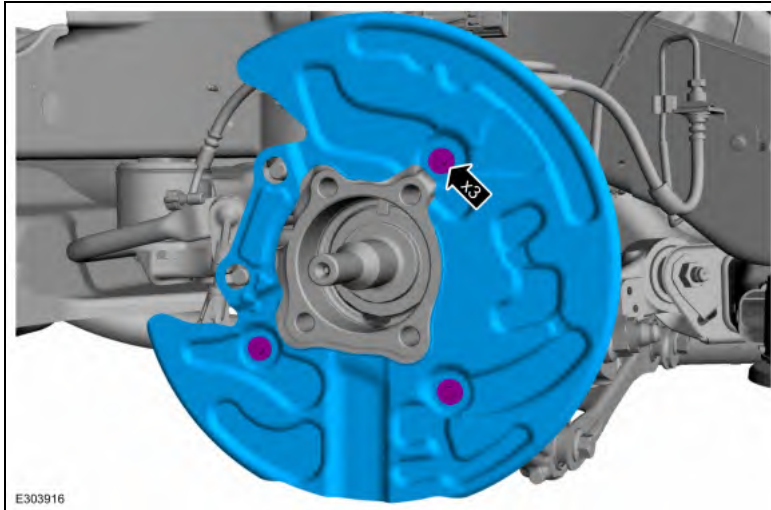

Installation

1. To install, reverse the removal procedure.

Brake Pads

Special Tool(s) / General Equipment

Brake Caliper Piston Retractor


Removal

All vehicles

1. **WARNING:** Service actions on vehicles equipped with electronic parking brakes may cause unexpected parking brake application, which could result in injury to hands or fingers. Put the electronic parking brake system into service mode prior to servicing or removing rear brake components. Failure to follow this instruction may result in serious personal injury.

Activate the EPB service mode.
Refer to: Electronic Parking Brake (EPB) Service Mode Activation and Deactivation (206-05 Parking Brake and Actuation, General Procedures).

2. Remove the wheel and tire.
Refer to: Wheel and Tire (204-04A Wheels and Tires, Removal and Installation).
3. Detach the parking brake motor electrical connector.

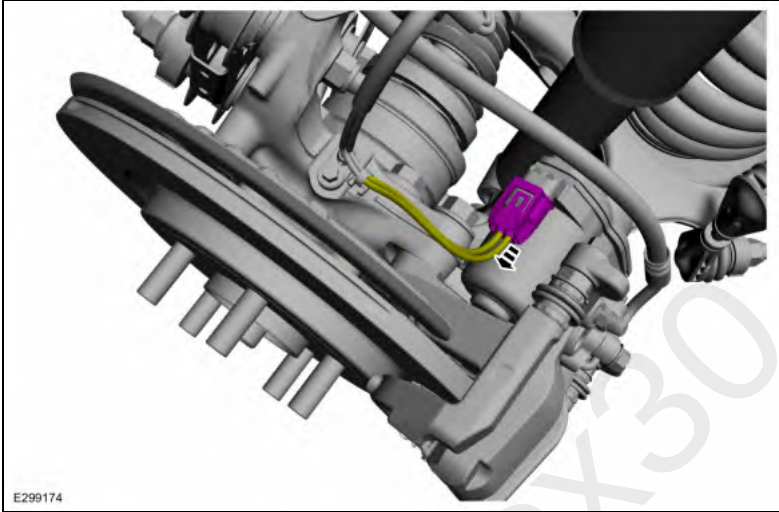

4. **NOTICE:** Do not allow the brake caliper to hang from the brake hose or damage to the hose can occur.

Remove and discard the brake caliper mounting bolts.