




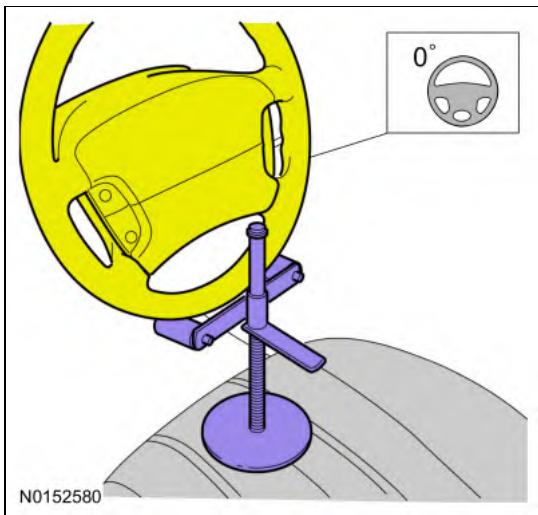

4. Remove the retainers and the upper radiator panel.

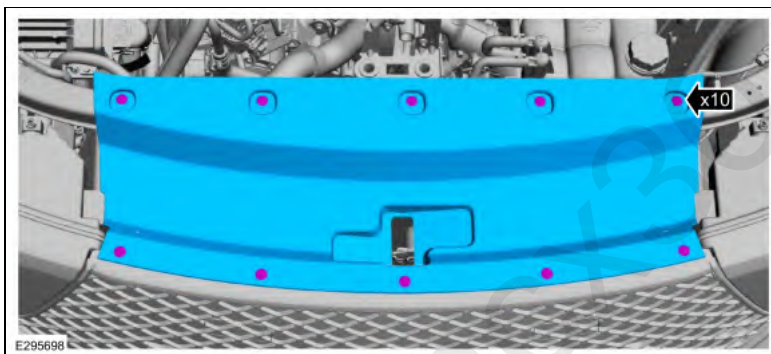

5. Remove the bolts and the suspension support bar.
Torque: 22 lb.ft (30 Nm)

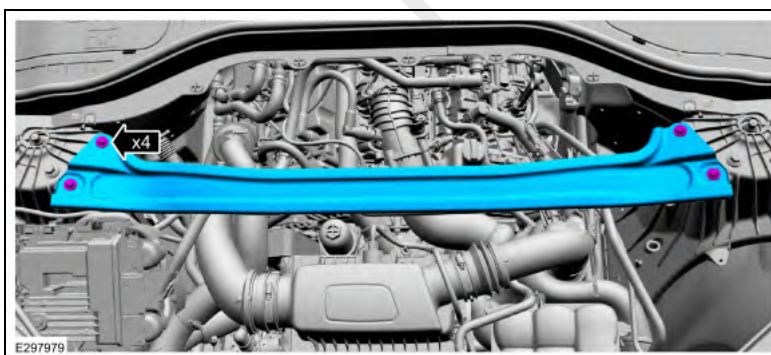

6. **NOTICE:** Do not pull the engine appearance cover forward or sideways to remove. Failure to press straight upward on the underside of the cover at the attachment points may result in damage to the cover or engine components.

1. Remove the engine appearance cover nuts.

2. **NOTE:** Lubricating the grommets with silicone grease will aid in the installation of the engine appearance cover, and any future removal and installation of the cover.

Place your hand under the engine appearance cover at the grommet location and push straight up to release the grommet from the stud.

3. After the grommet has been released from the stud, remove the appearance cover from the engine.