

Removal and Installation


Parking Brake Actuator Motor

Removal

NOTE: Removal steps in this procedure may contain installation details.


NOTE: LH side shown, RH similar.

1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).
2. Disconnect the parking brake actuator motor electrical connector.

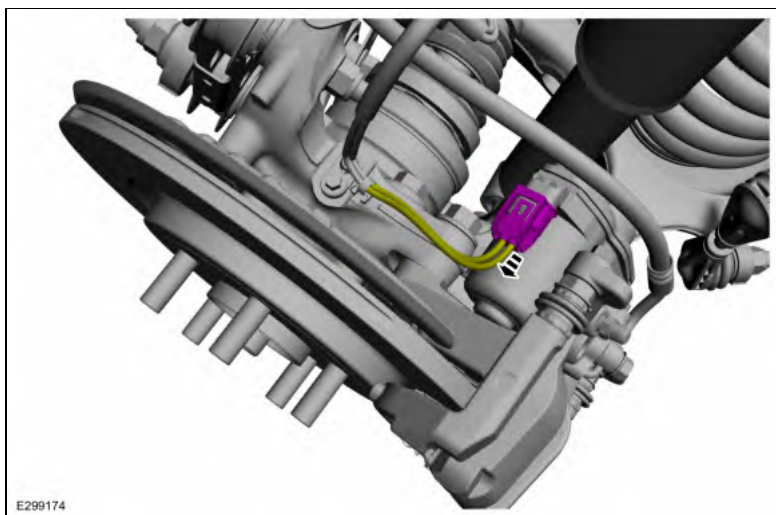

3. **NOTE:** If there is evidence of brake fluid found in or around the parking brake actuator motor a new brake caliper and actuator motor assembly must be installed.

Remove the 2 bolts and the parking brake actuator motor. Discard the bolts.
Torque: 97 lb.in (11 Nm)

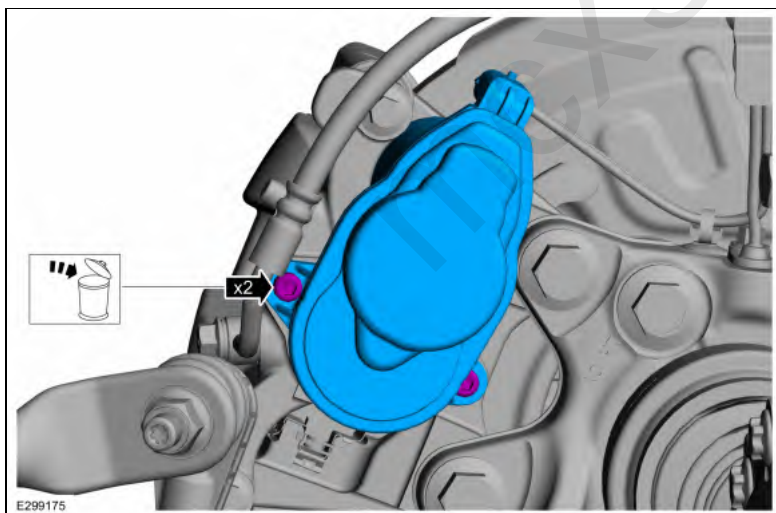

4. Remove and discard the O-ring.