


Remote Brake Fluid Reservoir

Removal


NOTICE: Siphon the brake fluid from the HCU/EBB reservoir, if the reservoir is not emptied there will be a large amount of brake fluid spilled in the engine compartment.

NOTE: Removal steps in this procedure may contain installation details.


1. Remove the cowl panel grille.
Refer to: Cowl Panel Grille (501-02 Front End Body Panels, Removal and Installation).
2. Release the tabs and remove the BCMC cover.

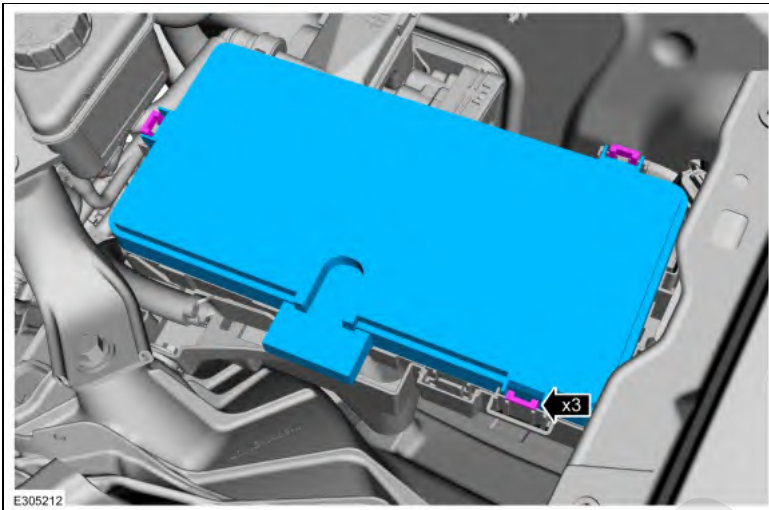


3.
 1. Remove the nut and position aside the cable aside.
Torque: 106 lb.in (12 Nm)
 2. Fully loosen the BCMC connector bolts.
Torque: 48 lb.in (5.4 Nm)

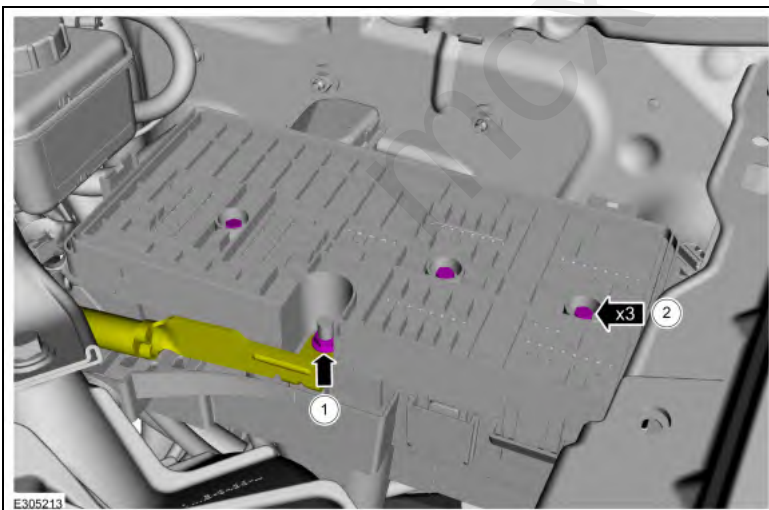

4. Release the tabs and remove the BCMC.

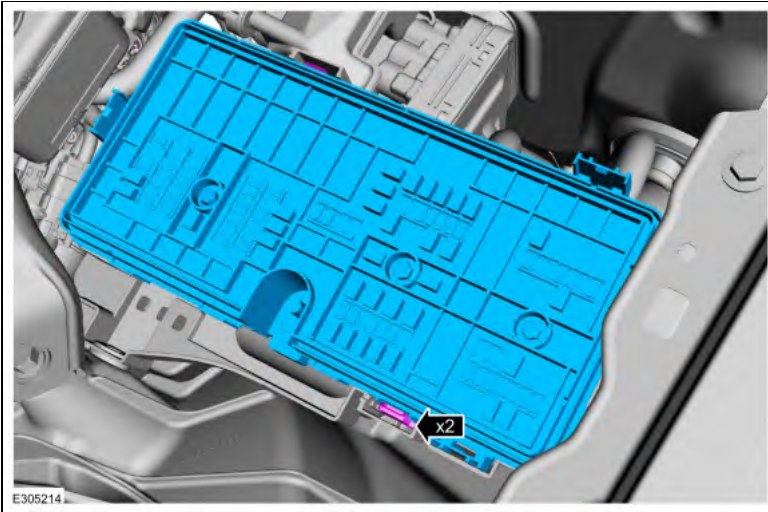

5. Remove the bolts, detach the wiring retainers and then remove the BCMC support bracket.
Torque: 106 lb.in (12 Nm)

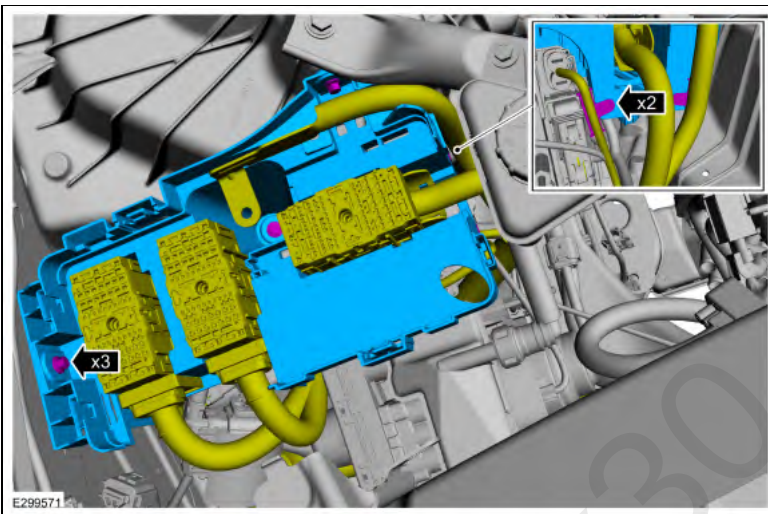

6. **NOTICE: If the brake fluid is spilled on any component, the affected area must be immediately washed down with cold water.**

NOTE: Be prepared to collect escaping fluid.

Disconnect the remote brake fluid reservoir tube and drain the fluid into a suitable container.