



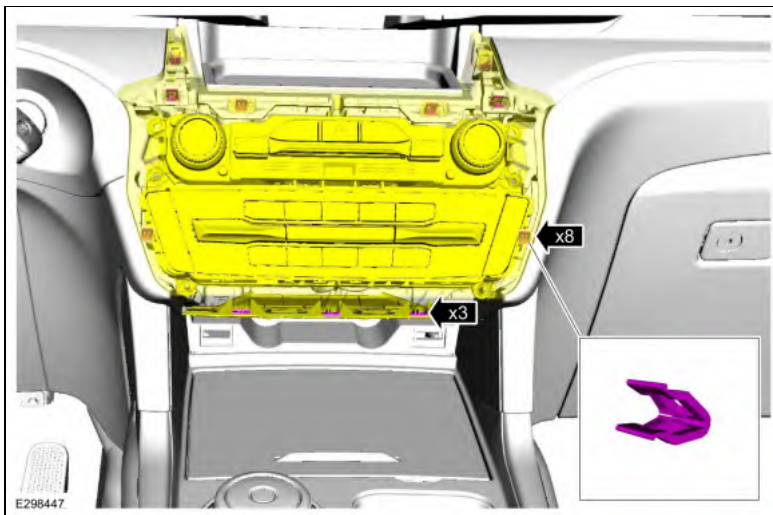

4. Release the clips and remove the instrument panel upper finish panel.

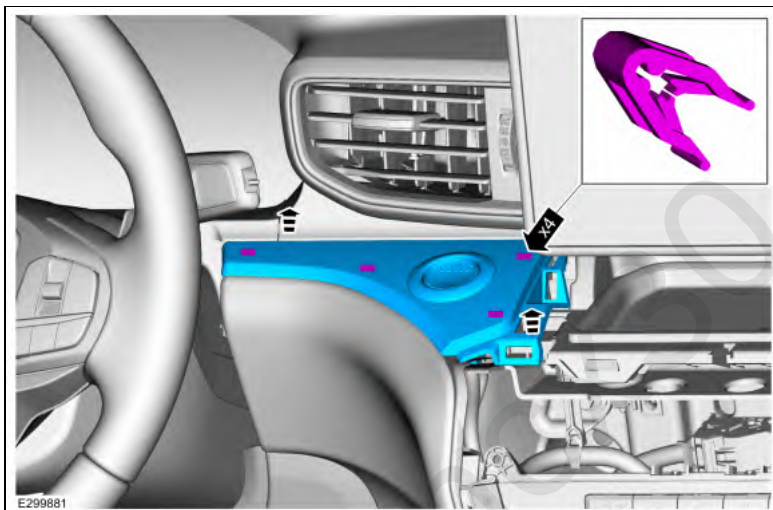

5. Disconnect the ignition switch electrical connector.