




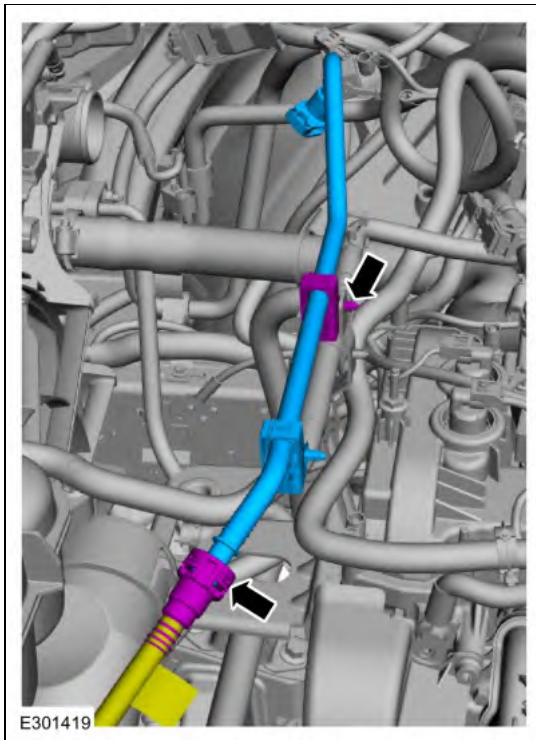


8. Remove the air cleaner inlet tube.

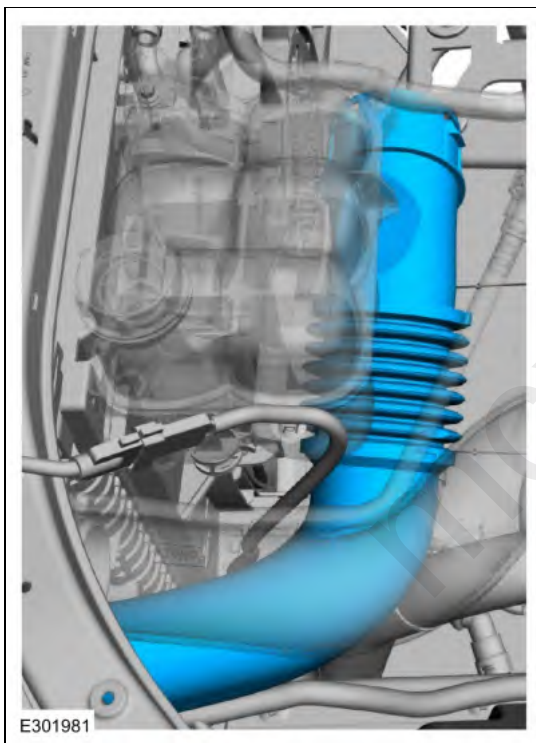

- 9.
- Detach the coolant hose retainer.
  - Detach the wiring harness retainer.
  - Remove the bolts and the air cleaner bracket.

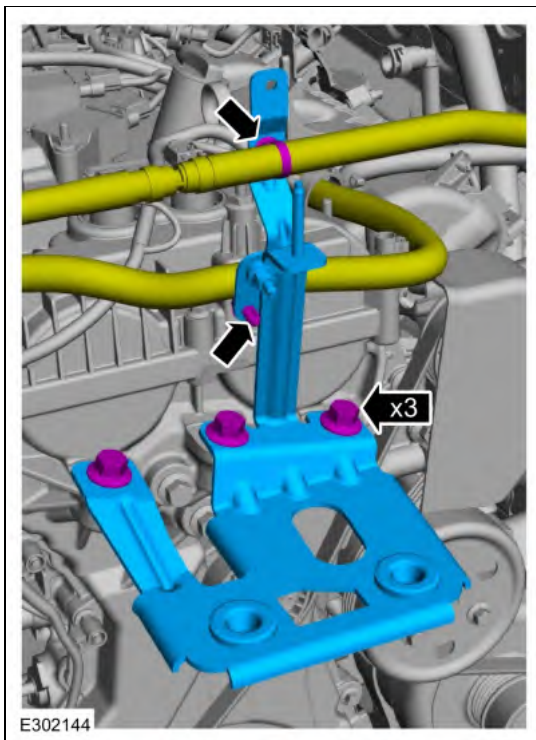

10. Loosen the coolant pump pulley bolts.

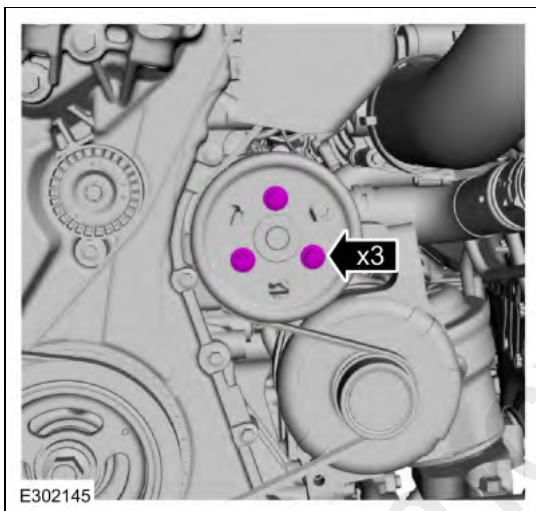


11. Remove the following items:


1. Remove the accessory drive belt.  
Refer to: Accessory Drive Belt (303-05A Accessory Drive - 2.3L EcoBoost (201kW/273PS), Removal and Installation).
2. Remove the accessory drive belt tensioner.  
Refer to: Accessory Drive Belt Tensioner (303-05A Accessory Drive - 2.3L EcoBoost (201kW/273PS), Removal and Installation).
3. Remove the high-pressure fuel pump drive unit.  
Refer to: High-Pressure Fuel Pump Drive Unit (303-04A Fuel Charging and Controls - 2.3L EcoBoost (201kW/273PS), Removal and Installation).

12.


- Remove pin-type retainer.
- Remove the bolts and the underbody shield.

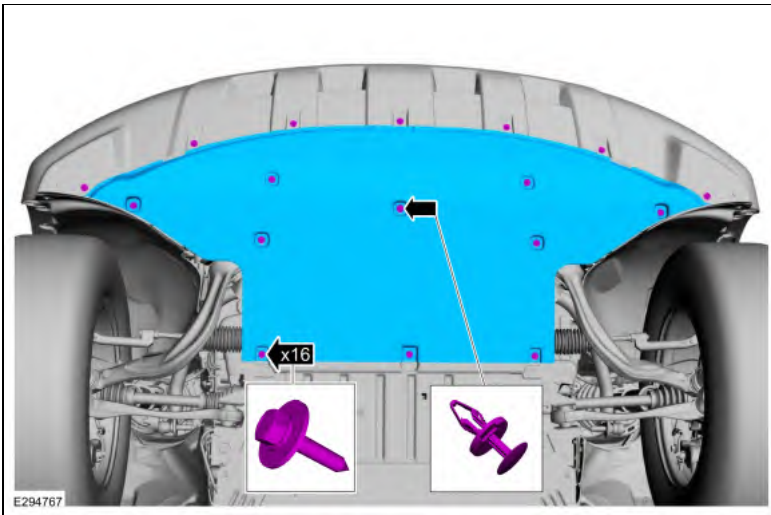


13. Remove the pin-type retainers, bolts and the rear underbody shield.

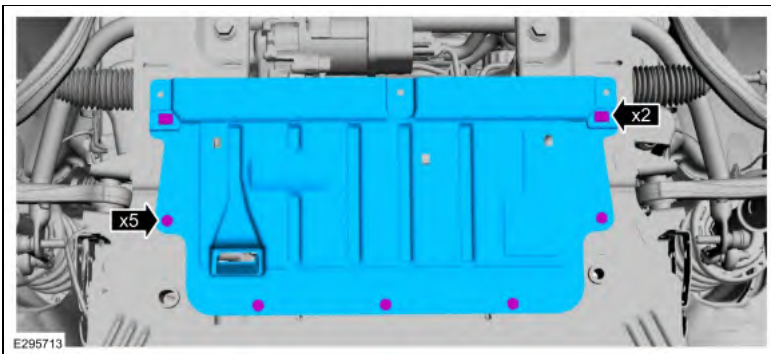


- 14.
- Disconnect the CKP sensor electrical connector.
  - Remove the bolts and the CKP sensor.

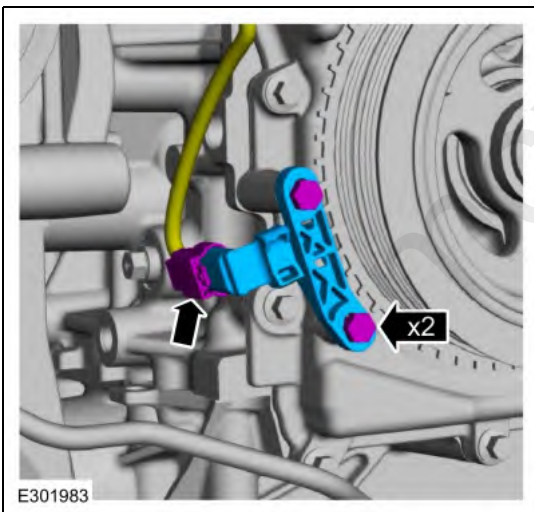


15. Turn the crankshaft clockwise until the No.1 piston is 45 degrees BTDC using the guide holes on the engine front cover and the crankshaft pulley.

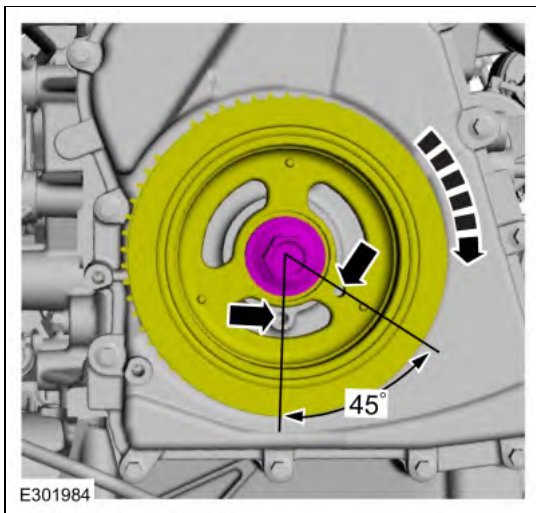

16. Remove the engine plug bolt.

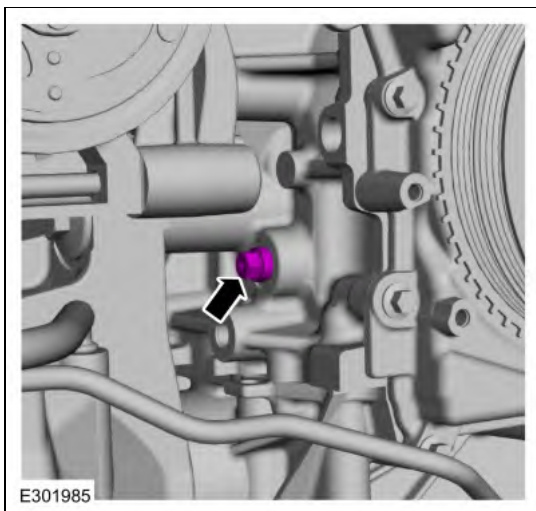



17. Install Special Service Tool: 303-507 Timing Peg, Crankshaft TDC.

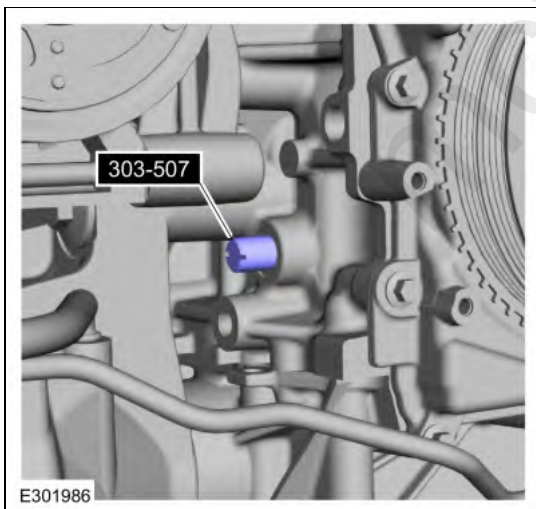


18. **NOTE:** The Crankshaft TDC Timing Peg will contact the crankshaft and prevent it from turning past TDC. However, the crankshaft can still be rotated in the counterclockwise direction. The crankshaft must remain at the TDC position during the crankshaft pulley removal and installation.

**NOTE:** The engine front cover is removed from graphic for clarity.

Rotate the crankshaft clockwise until the contacts the special tool.  
Use Special Service Tool: 303-507 Timing Peg, Crankshaft TDC.

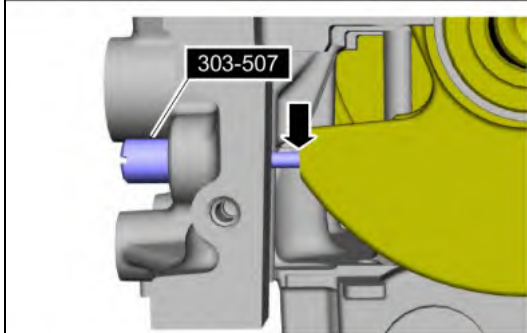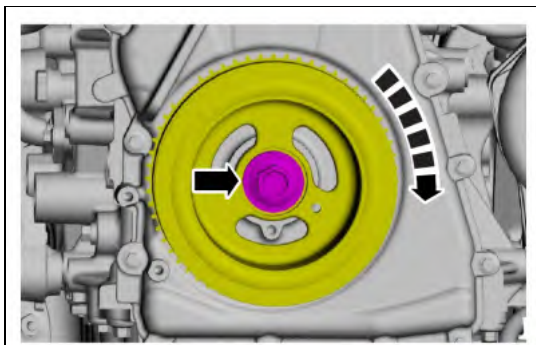


E290203

 

19. **NOTICE:** The Camshaft Alignment Tool is for camshaft alignment only. Using this tool to prevent engine rotation can result in engine damage.

**NOTE:** The camshaft timing slots are offset. If the Camshaft Alignment Tool cannot be installed, remove the TDC Timing Peg and rotate the crankshaft three-fourths of a revolution clockwise and repeat the previous 2 steps of this procedure.

Install Special Service Tool: 303-1685 Alignment Tool, Camshaft.

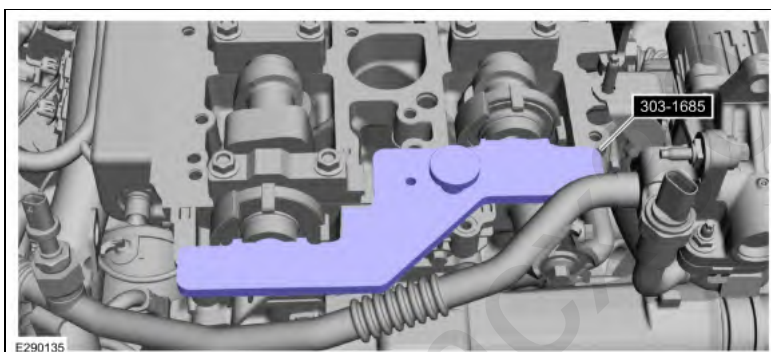


E290135




20. **NOTICE:** The crankshaft must remain in the TDC position during removal of the pulley bolt or damage to the engine can occur. Therefore, the crankshaft pulley must be held in place with the Crank Damper Holding Tool and the bolt should be removed using an air impact wrench (1/2-in drive minimum).

- Using the special tool, remove the bolt, washer and the crankshaft pulley.  
Use Special Service Tool: 303-1689 Holding Tool, Crank Damper.
- **NOTE:** If necessary, retain the original crankshaft pulley bolt to use for the removal of the crankshaft front seal.  
Discard the bolt.

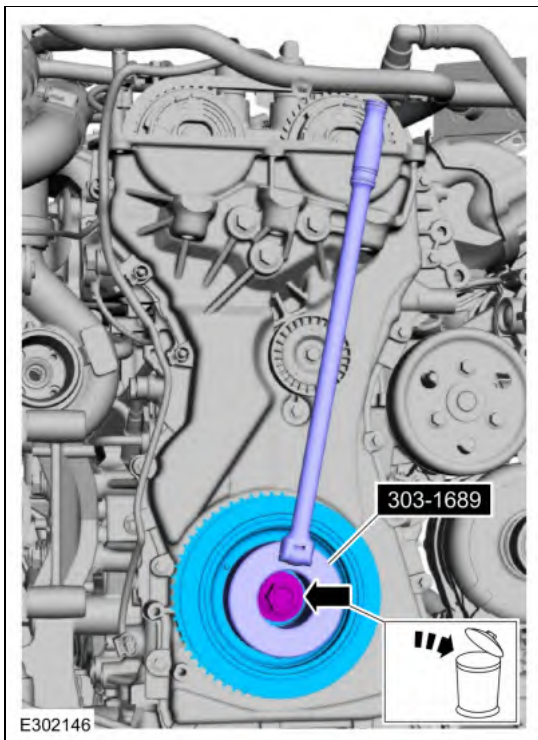


21. Install the old crankshaft pulley bolt.

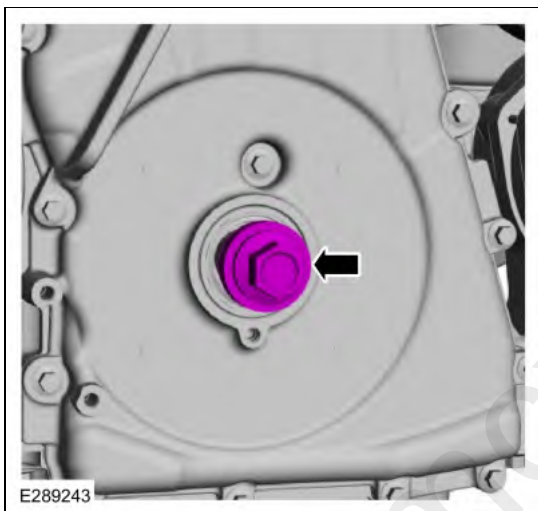

22. **NOTICE:** Use care not to damage the engine front cover or the crankshaft when removing the seal.

Using the special tool, remove and discard the crankshaft front seal.


Use Special Service Tool: 303-409 (T92C-6700-CH) Remover, Crankshaft Seal.

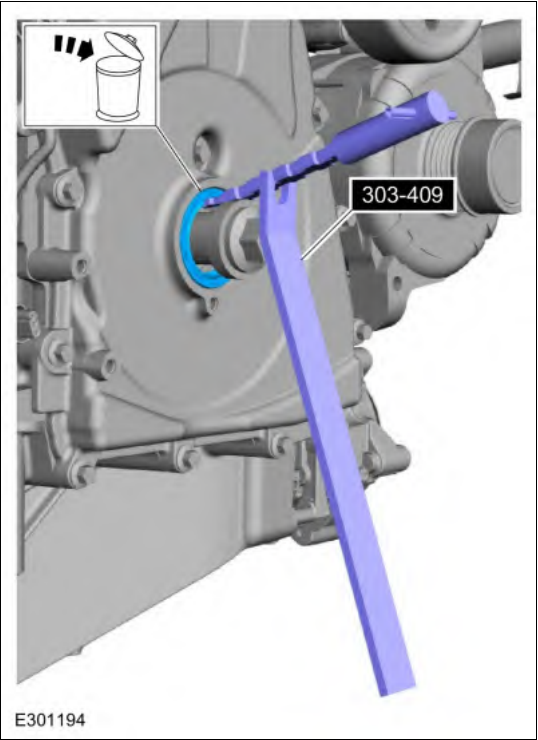

|  |
|--|
|  |
|  |
|  |
|  |
|  |
|  |
|  |
|  |
|  |
|  |


23. **NOTE:** If necessary, retain the original crankshaft pulley bolt to use in other procedures.

Remove and discard the crankshaft pulley bolt.

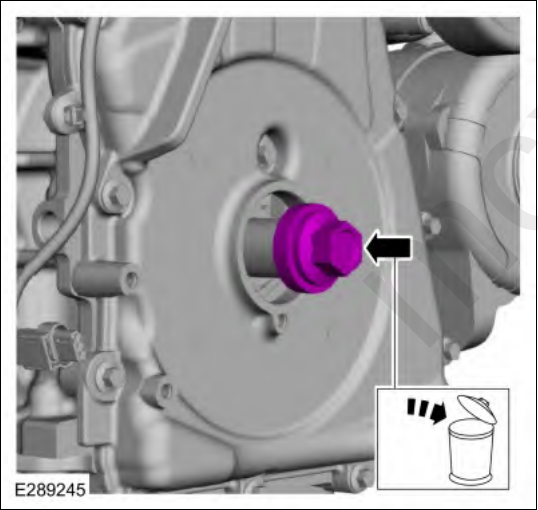


|  |
|--|
|  |
|  |
|  |
|  |
|  |
|  |
|  |
|  |
|  |
|  |


24. Remove the bolts and the coolant pump pulley.

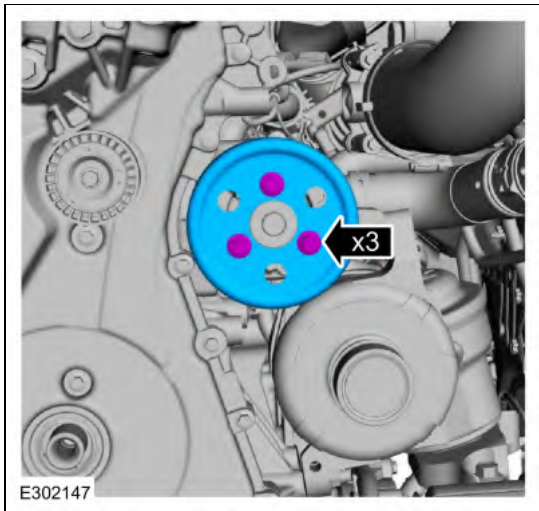

25. Detach wiring harness retainers from the engine front cover and stud bolts.

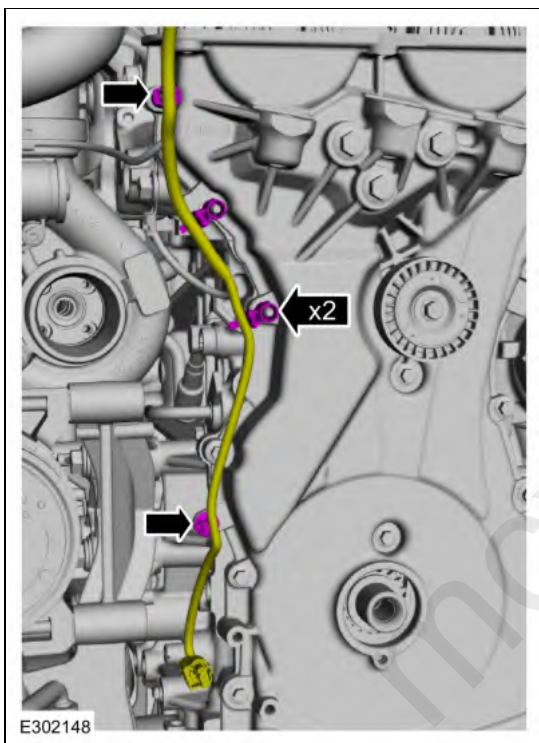


26. Remove the fasteners and the engine front cover.

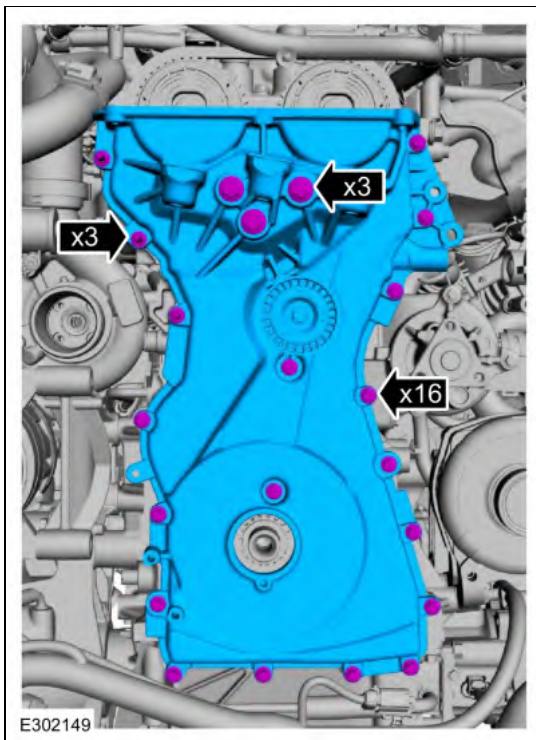

27. **NOTICE:** Only use a 3M<sup>®</sup> Roloc<sup>®</sup> Bristle Disk (2-in white, part number 07528) in a suitable tool turning at the recommended speed of 15,000 rpm, to clean the engine front cover. Do not use metal scrapers, wire brushes or any other power abrasive disk to clean. These tools cause scratches and gouges that make leak paths.


- Make sure that the mating faces of the engine front cover are clean and free of foreign material.  
Refer to: RTV Sealing Surface Cleaning and Preparation (303-00 Engine System - General Information, General Procedures).  
*Material:* Motorcraft<sup>®</sup> Silicone Gasket Remover / ZC-30-A  
*Material:* Motorcraft<sup>®</sup> Metal Brake Parts Cleaner / PM-4-A, PM-4-B  
*Material:* Motorcraft<sup>®</sup> Metal Surface Prep Wipes / ZC-31-B
- Thoroughly wash the engine front cover to remove any foreign material, including any abrasive particles created during the cleaning process.

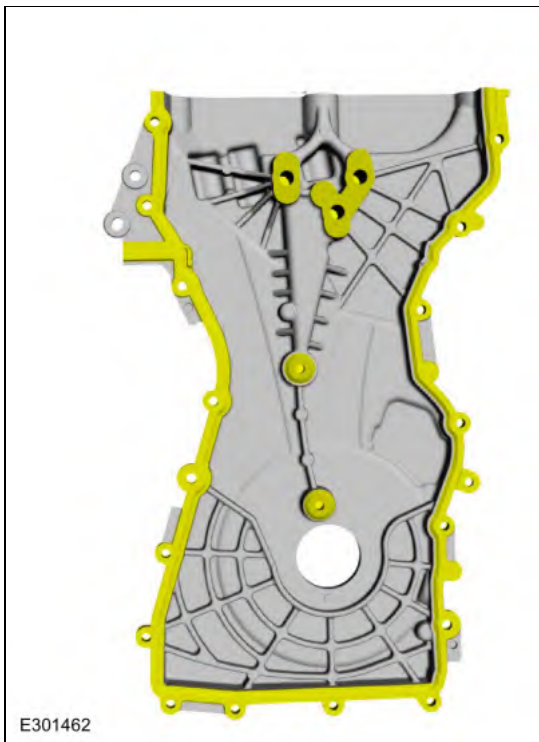

28. **NOTICE:** Place clean, lint-free shop towels over exposed engine cavities. Carefully remove the towels so foreign material is not dropped into the engine. Any foreign material (including any material created while cleaning gasket surfaces) that enters the oil passages or the oil pan, may cause engine failure.

**NOTICE:** Do not use metal scrapers, wire brushes, power abrasive discs or 3M<sup>®</sup> Roloc<sup>®</sup> Bristle Disk (2-in white part number 07528) to clean the sealing surfaces. These tools cause scratches and gouges that make leak paths. They also cause contamination that will cause premature engine failure. Remove all traces of the gasket.


Make sure that the mating faces of the engine block and oil pan are clean and free of foreign material.  
 Refer to: RTV Sealing Surface Cleaning and Preparation (303-00 Engine System - General Information, General Procedures).  
 Use the General Equipment: Plastic Scraper  
*Material:* Motorcraft<sup>®</sup> Silicone Gasket Remover / ZC-30-A  
*Material:* Motorcraft<sup>®</sup> Metal Brake Parts Cleaner / PM-4-A, PM-4-B  
*Material:* Motorcraft<sup>®</sup> Metal Surface Prep Wipes / ZC-31-B

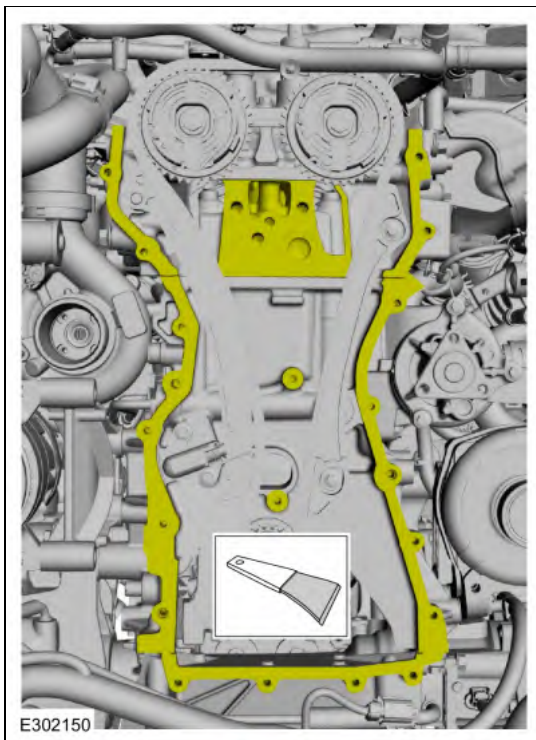

## Installation

- NOTE:** The engine front cover must be secured within 10 minutes of Silicone Gasket and Sealant application. If the engine front cover is not secured within 10 minutes, the sealant must be removed and the sealing area cleaned.


- Apply a 3 mm (0.12 in) bead of silicone sealant on the 3 upper bosses, as shown.  
Material: Motorcraft® High Performance Engine RTV Silicone / TA-357 (WSE-M4G323-A6)
- Apply a 4 mm (0.16 in) bead of silicone sealant on the chamfer on the 2 lower bosses, as shown.  
Material: Motorcraft® High Performance Engine RTV Silicone / TA-357 (WSE-M4G323-A6)
- Apply a 5 mm (0.19 in) bead of silicone sealant on the chamfer, as shown.  
Material: Motorcraft® High Performance Engine RTV Silicone / TA-357 (WSE-M4G323-A6)

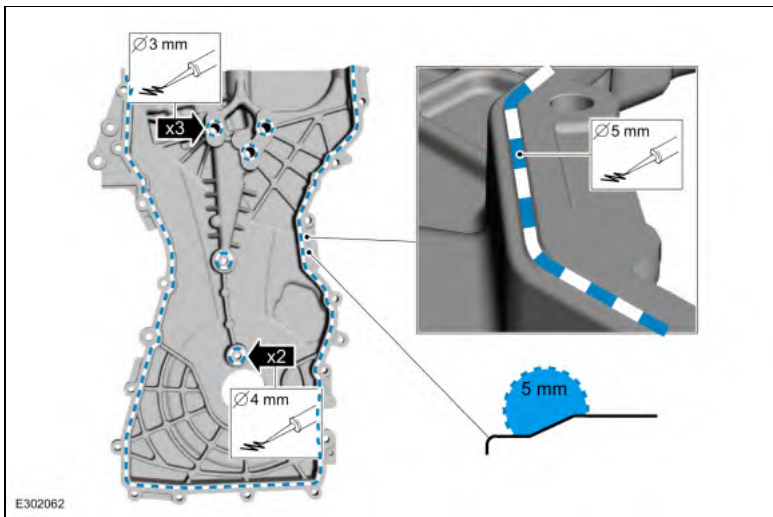

2. **NOTE:** The engine front cover must be secured within 10 minutes of Silicone Gasket and Sealant application. If the engine front cover is not secured within 10 minutes, the sealant must be removed and the sealing area cleaned.

Apply a 15 mm (0.59 in) drop of silicone sealant at the cylinder head-to-cylinder block and cylinder block-to-oil pan joint areas.

Material: Motorcraft® High Performance Engine RTV Silicone / TA-357 (WSE-M4G323-A6)

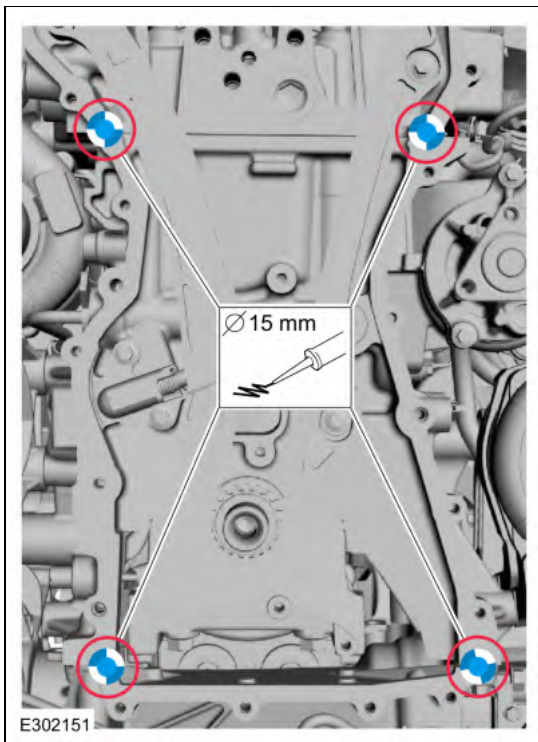


3. Install the engine front cover and the fasteners and tighten in the sequence shown.


*Torque:*

Bolts 1 - 3: 35 lb.ft (48 Nm)


Bolts 4 - 22: 97 lb.in (11 Nm)

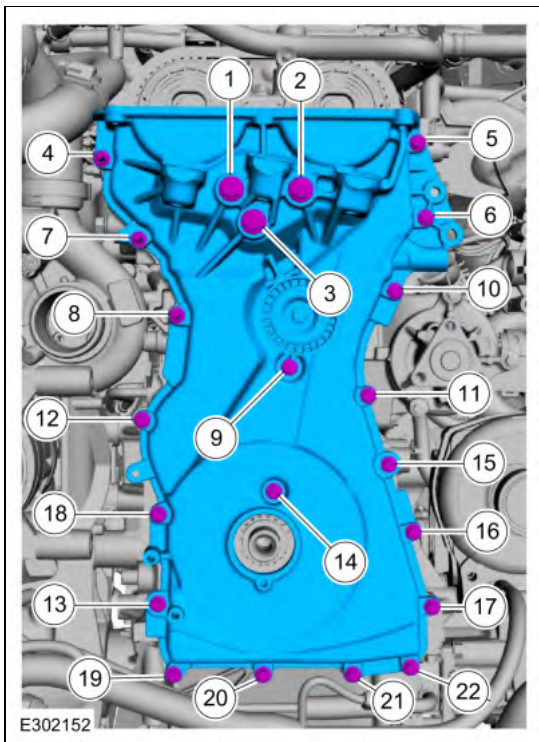


4. Attach wiring harness retainers to the engine front cover and stud bolts.

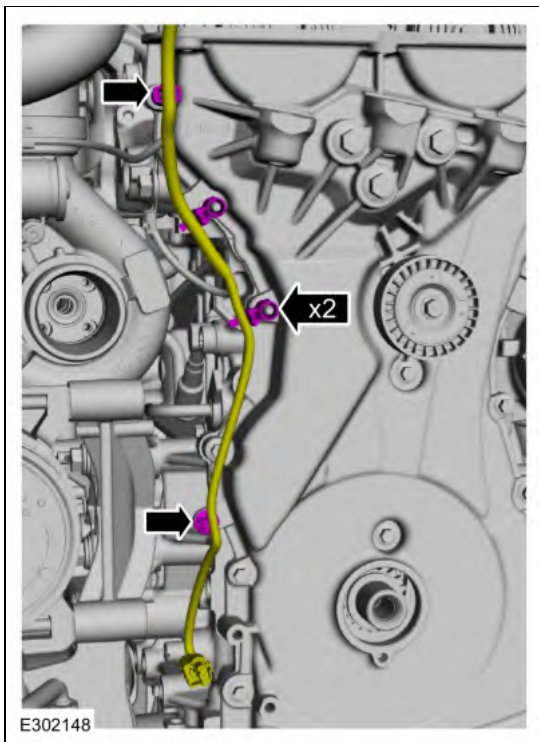


5. Install the coolant pump pulley and bolts finger-tight.

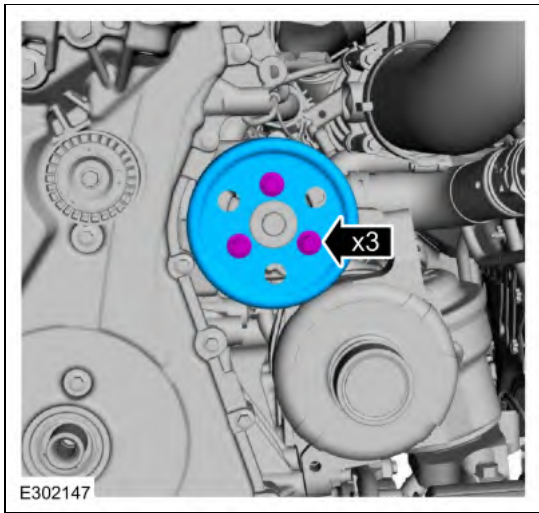


- 6.
- Lubricate the crankshaft front seal with clean engine oil.
  - **NOTE:** Remove the through-bolt from the Camshaft Front Oil Seal Installer.
- Using the special tools, install the crankshaft front seal.  
Use Special Service Tool: 303-096 (T74P-6150-A) Installer, Camshaft Front Oil Seal.

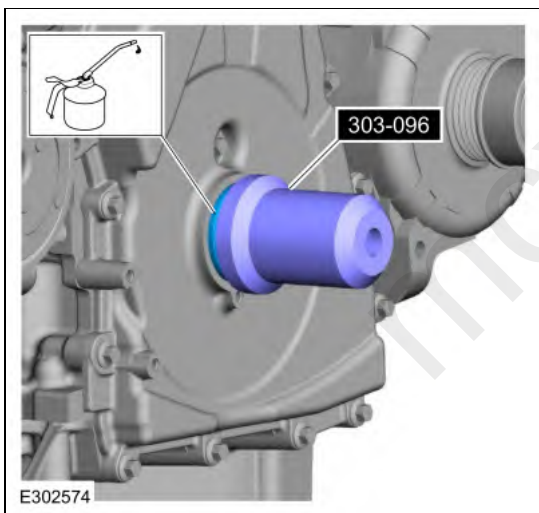


7. Lubricate the crankshaft pulley with clean engine oil.

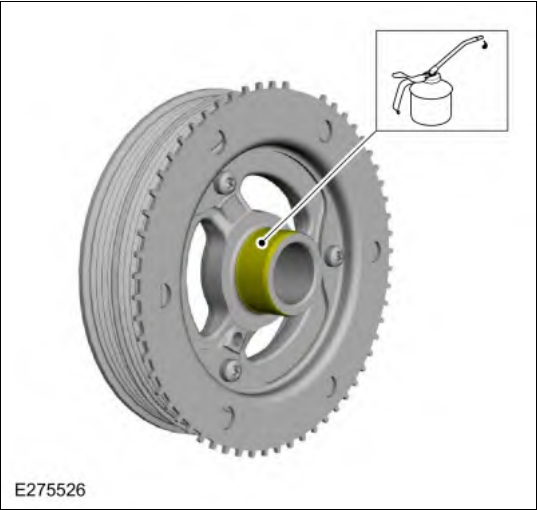

8. Position the crankshaft pulley onto the crankshaft with the access hole at the 6 o'clock position.

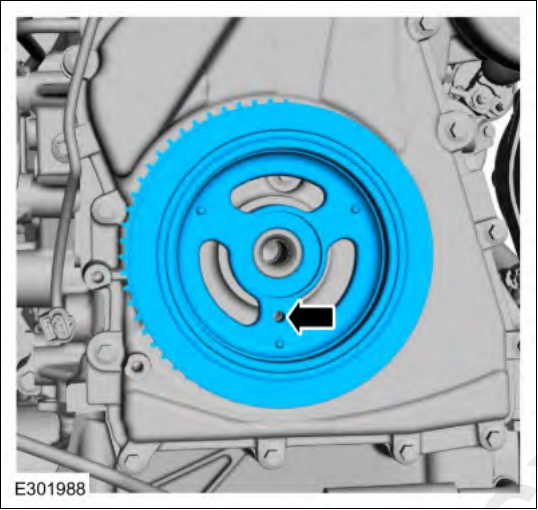

9. **NOTE:** This step will correctly align the crankshaft pulley to the crankshaft.  
Install an M6 bolt.

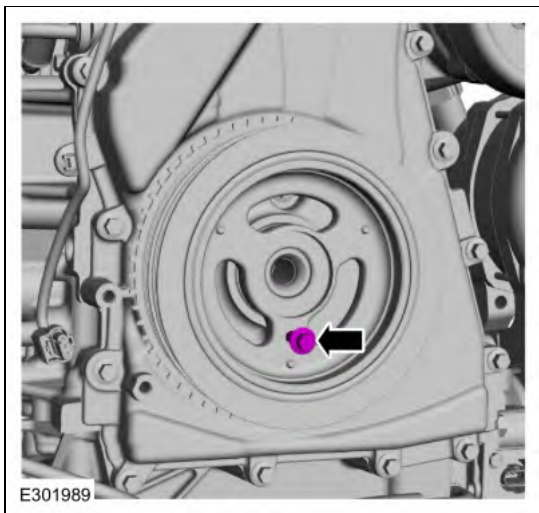

10. **NOTICE:** The crankshaft must remain in the TDC position during installation of the pulley bolt or damage to the engine can occur. Therefore, the crankshaft pulley must be held in place with the Crank Damper Holding Tool and the bolt should be installed using hand tools only.


With the aid of an assistant and using the special tool, install the new crankshaft bolt and washer and tighten.

Use Special Service Tool: 303-1689 Holding Tool, Crank Damper.


*Torque:*

Stage 1: 74 lb.ft (100 Nm)

Stage 2: 90°

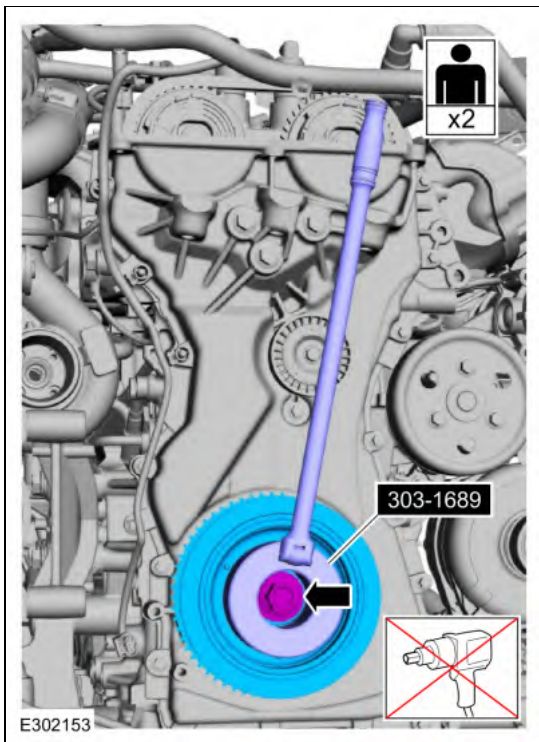


11. Remove the M6 bolt.

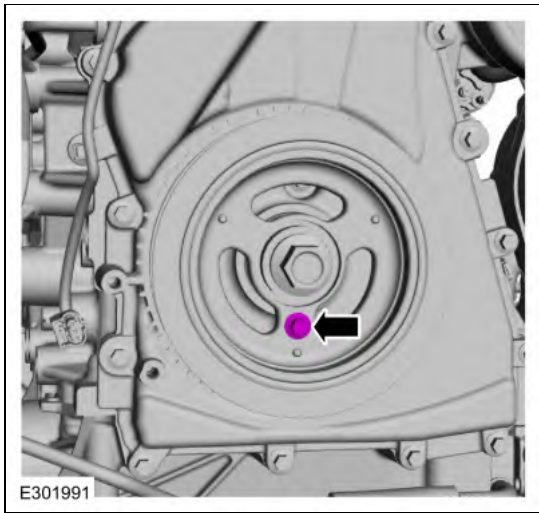

12. **NOTE:** Do not tighten the CKP sensor bolts at this time.


Install the CKP sensor and the bolts finger tight.

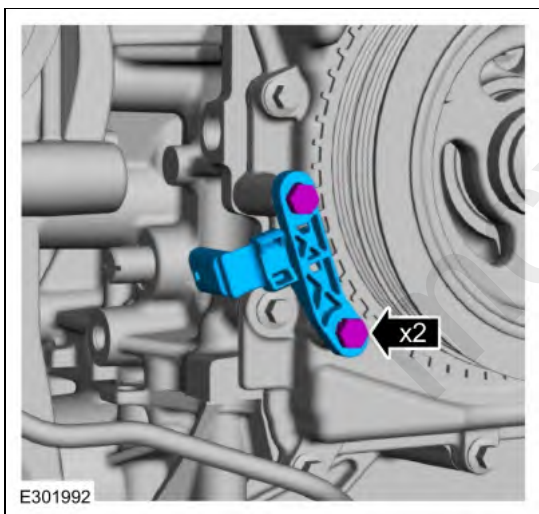


13. Install the special tool onto the CKP sensor and the tooth of the crankshaft pulley trigger wheel and tighten the bolts.

Use Special Service Tool: 303-1521 Alignment Tool, Crankshaft Position Sensor.


Torque: 97 lb.in (11 Nm)

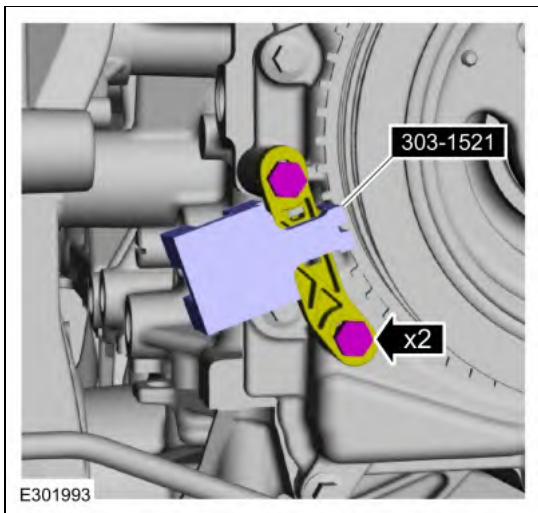


14. Remove Special Service Tool: 303-1521 Alignment Tool, Crankshaft Position Sensor.

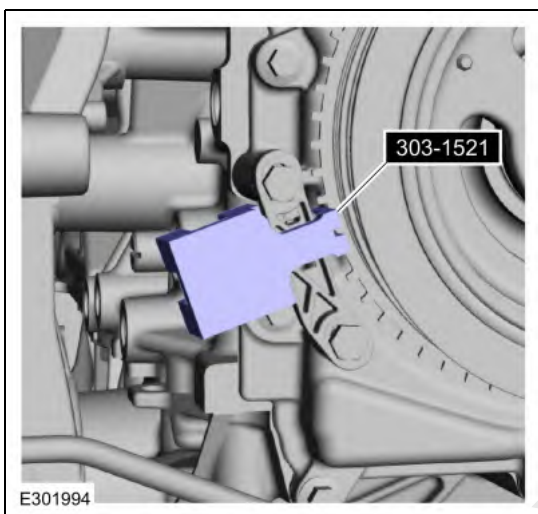


15. Connect the CKP sensor electrical connector.

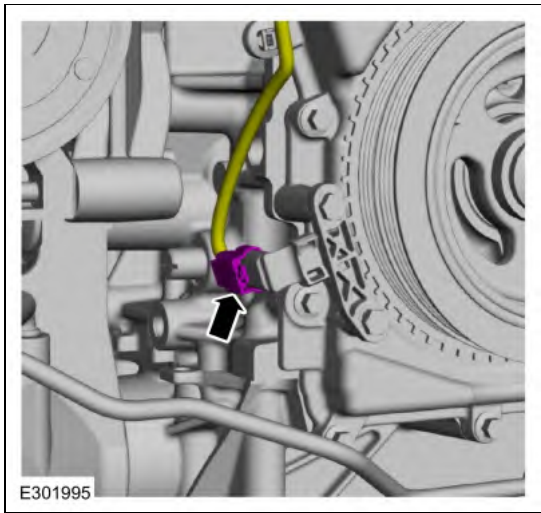


16. Remove Special Service Tool: 303-507 Timing Peg, Crankshaft TDC.

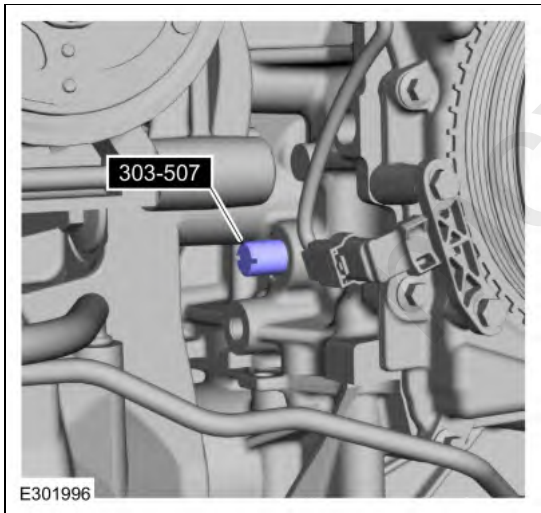


17. Install the engine plug bolt.  
*Torque: 177 lb.in (20 Nm)*

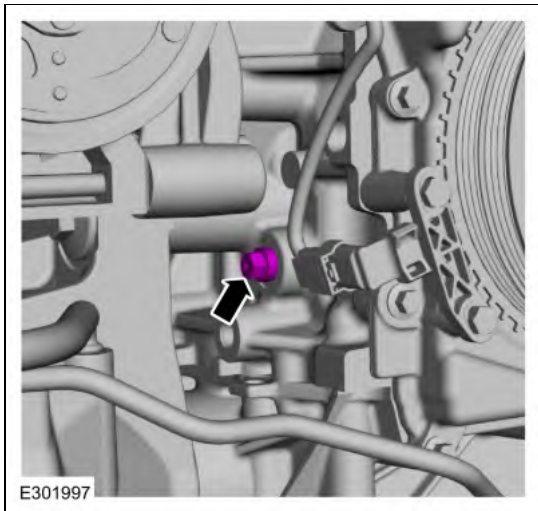


18. Remove Special Service Tool: 303-1685 Alignment Tool, Camshaft.

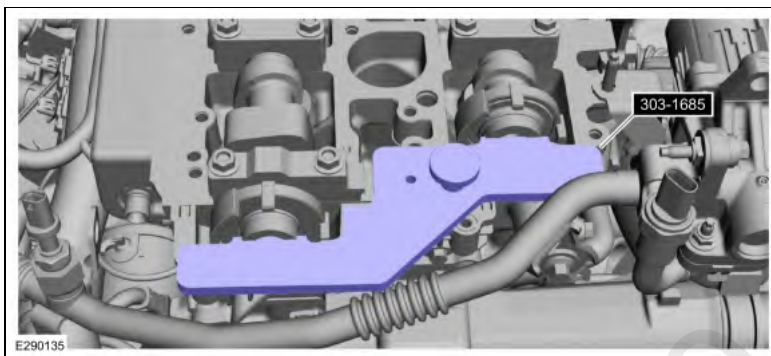

- 19.
- Remove the oil pan drain plug and drain the engine oil.  
Use the General Equipment: Oil Drain Equipment
  - Install the oil drain plug.  
*Torque: 20 lb.ft (27 Nm)*

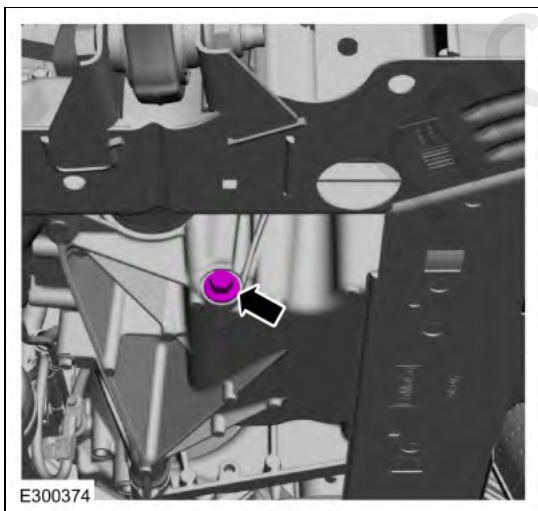

20. Remove and discard the engine oil filter.  
Use the General Equipment: Oil Drain Equipment

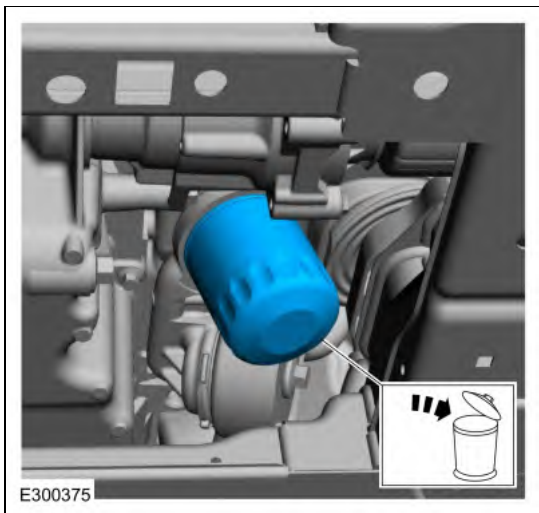


21. Lubricate the new engine oil filter sealing surface with clean engine oil and install.

*Torque:*


Stage 1: 71 lb.in (8 Nm)

Stage 2: 180Å°

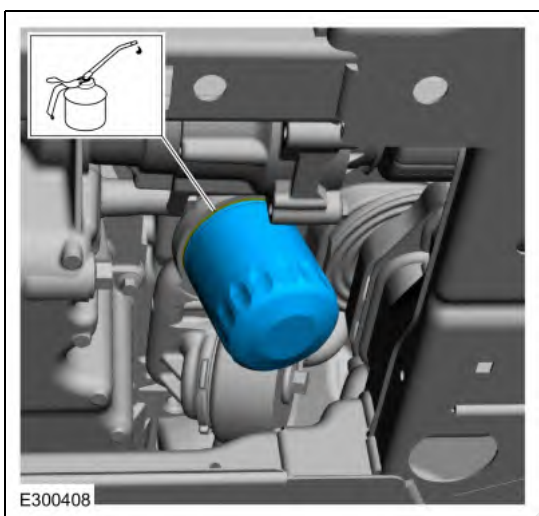


22. Install the rear underbody shield, bolts and the pin-type retainers.

*Torque:* 22 lb.in (2.5 Nm)

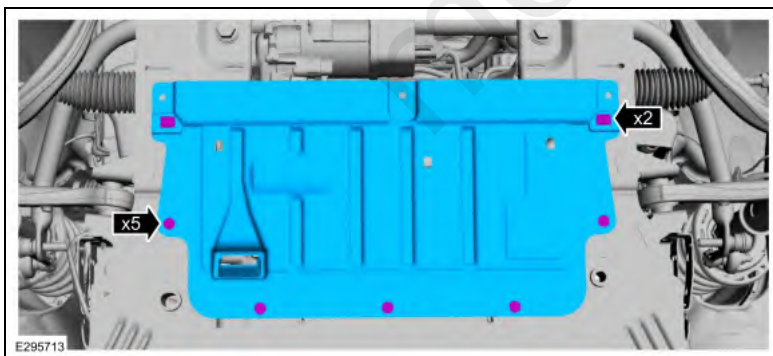

23.


- Install the underbody shield and the bolts.  
*Torque:* 22 lb.in (2.5 Nm)
- Install pin-type retainer.

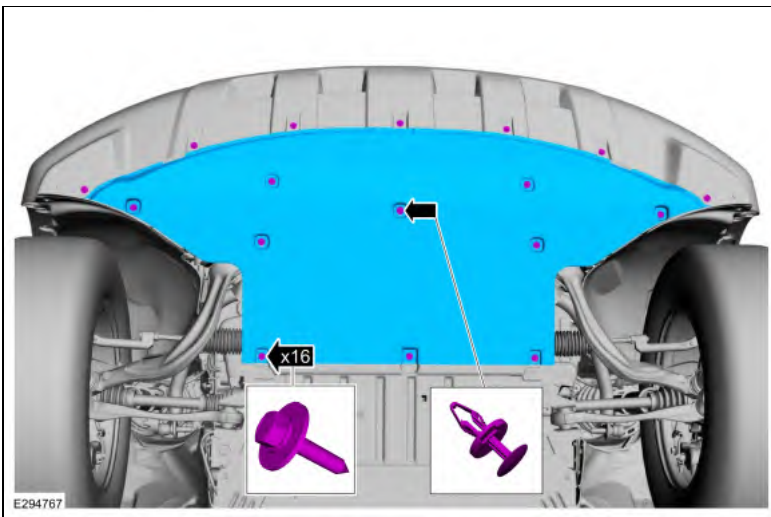

24. Install the following items:


1. Install the high-pressure fuel pump drive unit.  
Refer to: High-Pressure Fuel Pump Drive Unit (303-04A Fuel Charging and Controls - 2.3L EcoBoost (201kW/273PS), Removal and Installation).
2. Install the accessory drive belt tensioner.  
Refer to: Accessory Drive Belt Tensioner (303-05A Accessory Drive - 2.3L EcoBoost (201kW/273PS), Removal and Installation).
3. Install the accessory drive belt.  
Refer to: Accessory Drive Belt (303-05A Accessory Drive - 2.3L EcoBoost (201kW/273PS), Removal and Installation).

25. Tighten the coolant pump pulley bolts.  
*Torque: 18 lb.ft (25 Nm)*

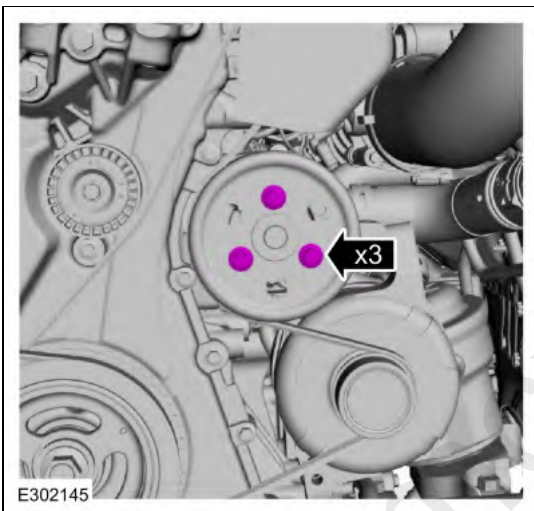


26.


- Install the air cleaner bracket and the bolts.  
*Torque: 59 lb.ft (80 Nm)*
- Attach the wiring harness retainer.
- Attach the coolant hose retainer.

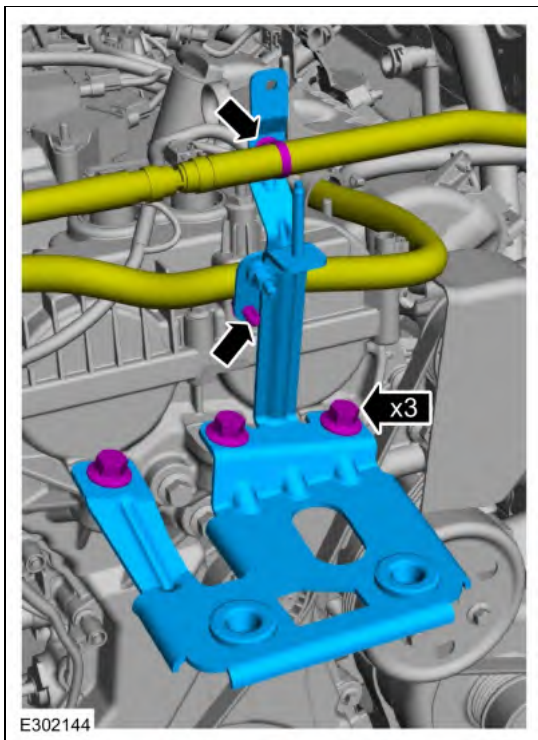

27. Install the air cleaner inlet tube.

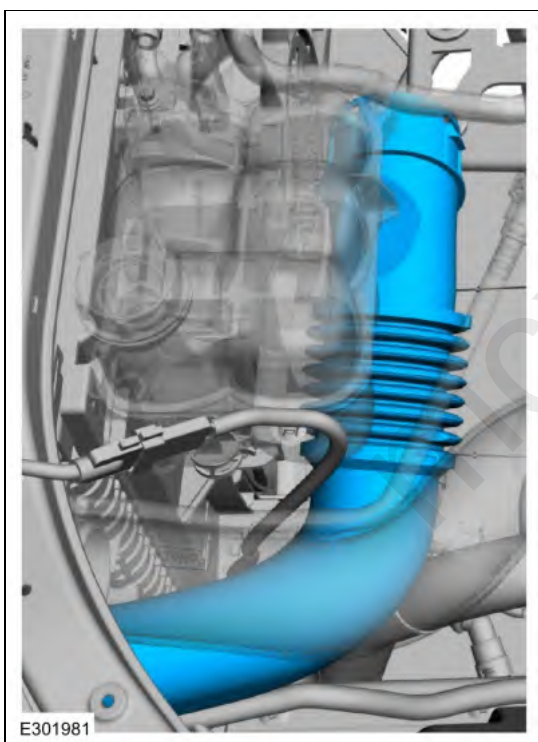

28. Install the EVAP canister tube and connect the quick release coupling and the retainer.  
Refer to: Quick Release Coupling (310-00 Fuel System - General Information - 2.3L EcoBoost (201kW/273PS)) .

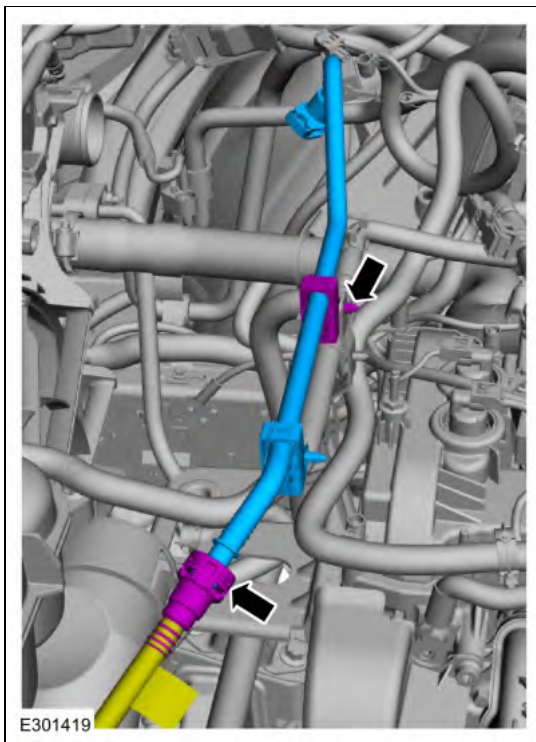

29. Install the following items:

1. Install the EVAP canister purge valve.  
Refer to: Evaporative Emission Canister Purge Valve (303-13A Evaporative Emissions - 2.3L EcoBoost (201kW/273PS), Removal and Installation).
2. Install the air cleaner outlet.  
Refer to: Air Cleaner Outlet Pipe (303-12A Intake Air Distribution and Filtering - 2.3L EcoBoost (201kW/273PS), Removal and Installation).
3. Install the air cleaner.  
Refer to: Air Cleaner (303-12A Intake Air Distribution and Filtering - 2.3L EcoBoost (201kW/273PS), Removal and Installation).

30. Connect the battery ground cable.

Refer to: Battery Disconnect and Connect (414-01 Battery, Mounting and Cables, General Procedures).


31.

1. **NOTE:** Lubricating the grommets with silicone grease will aid in the installation of the engine appearance cover, and any future removal and installation of the cover.


Lubricate each grommet with silicone grease.

*Material:* Motorcraft® Silicone Brake Caliper Grease and Dielectric Compound / XG-3-A (ESE-M1C171-A)


2. Position the engine appearance cover onto engine with the grommet aligned with the stud.
3. Press down on the engine appearance cover at the grommet location to attach the grommet onto the stud and install the nuts.  
*Torque:* 44 lb.in (5 Nm)

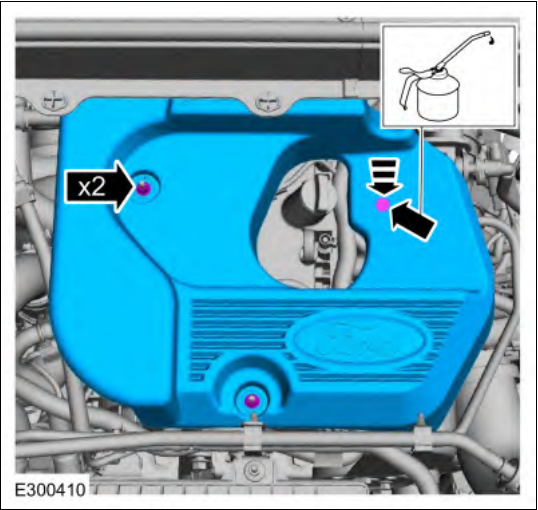

32. Install the suspension support bar and the bolts.  
*Torque: 22 lb.ft (30 Nm)*

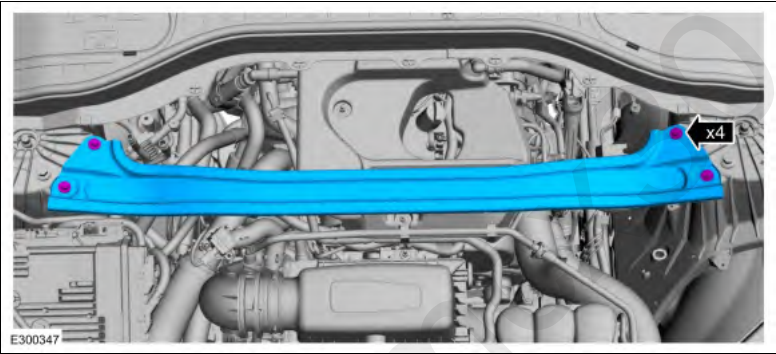

33. Fill the engine with clean engine oil.  
Refer to: Specifications (303-01A Engine - 2.3L EcoBoost (201kW/273PS), Specifications).

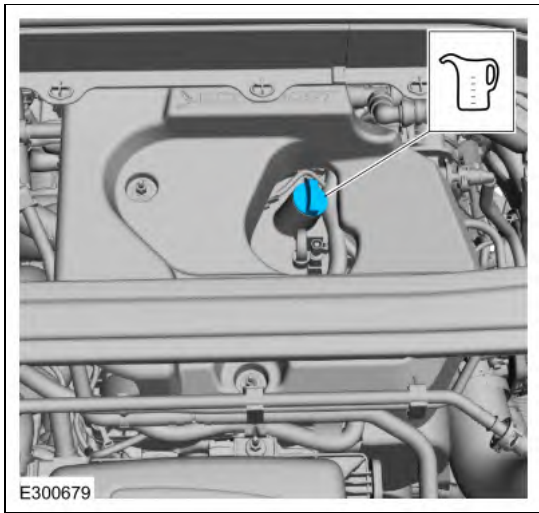

34. Pressurize the fuel system.  
Refer to: Fuel System Pressure Release (310-00A Fuel System - General Information - 2.3L EcoBoost (201kW/273PS), General Procedures).
  35. Use the Powertrain Control Module (PCM) Misfire Monitor Profile Correction routine in the diagnostic scan tool.
-

Engine Mount LH

Special Tool(s) / General Equipment


|                                                                                  |                                                |
|----------------------------------------------------------------------------------|------------------------------------------------|
|  | 303-050 (T70P-6000)<br>Lifting Bracket, Engine |
|  | 303-F072<br>Support Bar, Engine                |
| Oil Drain Equipment                                                              |                                                |
| Cable Ties                                                                       |                                                |

Materials


| Name                                                                     | Specification |
|--------------------------------------------------------------------------|---------------|
| Motorcraft® Silicone Brake Caliper Grease and Dielectric Compound XG-3-A | ESE-M1C171-A  |

Removal

1. With the vehicle in NEUTRAL, position it on a hoist.  
Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).
2. Using a holding device, hold the steering wheel.

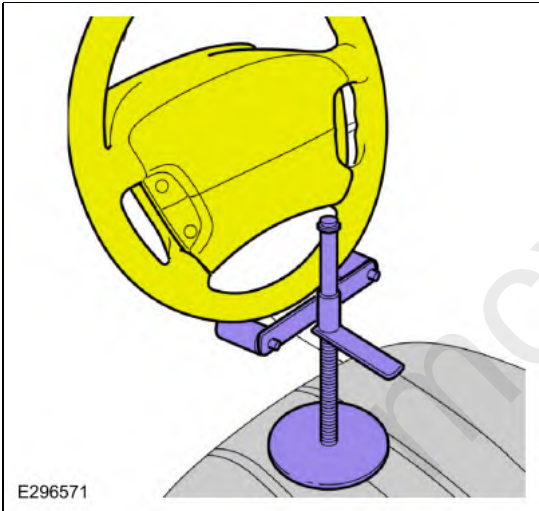


3. Remove the bolts and the suspension support bar.

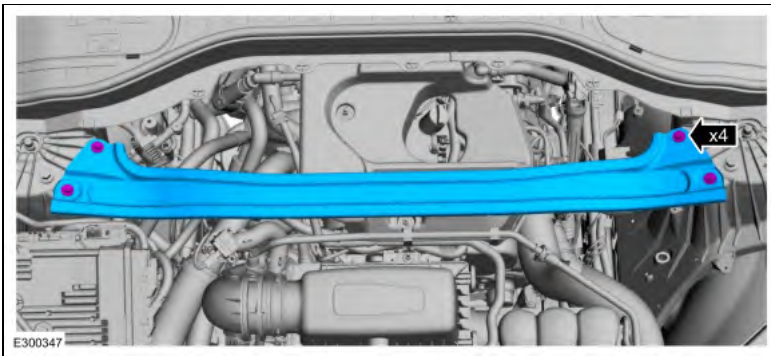

4. **NOTICE:** Do not pull the engine appearance cover forward or sideways to remove. Failure to press straight upward on the underside of the cover at the attachment points may result in damage to the cover or engine components.

1. Remove the engine appearance cover nuts.
2. Place your hand under the engine appearance cover at the grommet location and push straight up to release the grommet from the stud.
3. After the grommet has been released from the stud, remove the appearance cover from the engine.

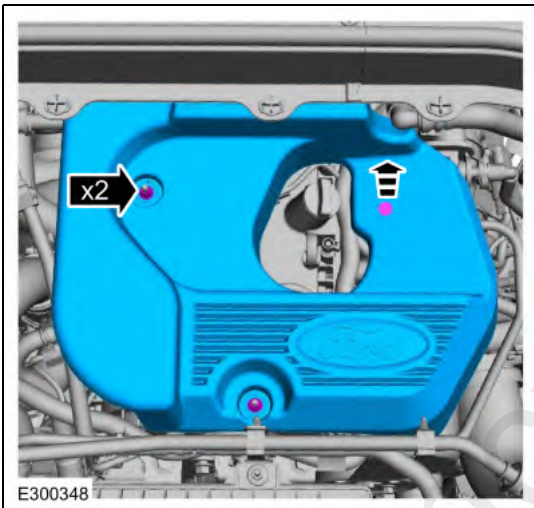

5. Drain the cooling system.  
Refer to: Engine Cooling System Draining, Vacuum Filling and Bleeding (303-03A Engine Cooling - 2.3L EcoBoost (201kW/273PS), General Procedures).
6. Remove the cowl panel.  
Refer to: Cowl Panel (501-02 Front End Body Panels, Removal and Installation).
7.
  - Remove the bolt and disconnect the steering shaft.
  - Discard the bolt.